The Tyrannosaurus Rex uses 1 x 3.7V 500mAh Li-ion battery (included)
The remote controller uses 2 x 1.5V AA batteries (not included)

IMPORTANT: Keep these instructions. DO NOT DISCARD.
Caution:
Please read these carefully before using:
1. Only adults should install and replace batteries.
2. Rechargeable batteries are only to be charged under adult supervision
3. Rechargeable batteries are to be removed from the toy before being charged.
4. Non-rechargeable batteries are not to be recharged.
5. If the device is not used for a long time, remove the batteries.
6. Do not mix old and new batteries.
7. Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel cadmium) batteries.
8. Exhausted batteries are to be removed from the toy.
9. The supply terminals are not to be short-circuited.
10. Only batteries of the same or equivalent type as recommended are to be used.
11. Batteries are to be inserted with the correct polarity.
12. Do not dispose of batteries in fire, batteries may explode or leak.
13. Batteries may explode or leak if misused.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
•Reorient or relocate the receiving antenna.
•Increase the separation between the equipment and receiver.
•Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
•Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

The packaging must be retained since it contains important information.

MADE IN CHINA
©2025 Kid Galaxy, Inc.
All Rights Reserved.

Kid Galaxy, Inc.
198 Dow St.
Manchester, NH 03101
USA

1-800-816-1135
Visit our website! www.kidgalaxy.com
Conforms to the safety requirements of ASTM F963 and FCC regulations.
Product and colors may vary from items shown.

Proof of Purchase
Item# 10365
6 77869 10365 6
KG250885

INSTRUCTION MANUAL

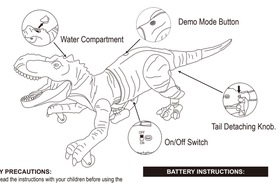

SAFETY PRECAUTIONS:
- Please read the instructions with your children before using the product for the first time. Stop the Tyrannosaurus Rex with the remote controller before picking it up.
- Keep hands, hair and clothing away from moving parts when the toy is operating.
- Do not use theTyrannosaurus Rex with the radio controller on the street.
- Avoid collisions with people, animals and furniture.The wires are not to be inserted into socket outlets.

CARE AND MAINTENANCE:
•Always remove the batteries from the transmitter if it is not used for a long time.
•Wipe the toy gently with a clean cloth.
•Keep the toy away from direct sources of heat.
•Do not immerse the toy in water, as this could damage electronic components.
•Replace batteries when sensitivity of the toy becomes low.

2.4G REMOTE CONTROLLER OPERATION:



DEMO BUTTON:
•Press once: the Tyrannosaurus Rex will demonstrate forward, backward, left turn & right turn movement, along with wagging tail, swaying body with different sounds.
•Long press for 2 seconds: turn the sound mode on or off.

BATTERY INSTRUCTIONS:



TO CHARGE THE T-REX:
•Connect the charging cable provided to the port located at the bottom of the Tyrannosaurus Rex for charging.
•The indicator turns on (red) when charging and off when the toy is fully charged.
•Charging time: around 2 hours. Play time: around 45 mins



BATTERY INSTALLATION:
•Unscrew the battery cover.
•Insert 2 AA batteries according to the correct polarity.
•Replace the battery cover and tighten the screw.

PAIRING THE T-REX & REMOTE CONTROLLER
•Turn on both the T-Rex and the remote controller at the same time and they will start pairing automatically.
•Indicator keeps flashing when pairing and stays on when paired successfully.

LED INDICATOR:
•Flashing: pairing or connection failed
•Stays on: successfully paired

POWER SAVING MODE
•The toy will automatically turns off when it is not operated for over 3 mins.
•Please turn off the T-Rex and turn it on again with the remote controller for pairing again to continue to play.

MIST SPRAYING T-REX OPERATION:

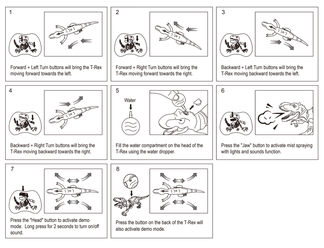

PROBLEM SOLVING:

THE PROBLEM	THE CAUSE	THE RESOLUTIONS
The indicator lights off	• Low battery of the T-Rex or the transmitter. • System error or transmitter interference.	• Recharge the T-Rex or replace batteries of the remote controller. • Remove and reload the batteries in the remote controller for system reset.
Out of control	• Another RC with the same frequency is operating closely and caused interference. • Beyond the operational range.	• Move away from the interfered device and reconnect the T-Rex with the remote controller. • Walk closer to the T-Rex.
Slow movements or movement failure	• Battery exhaustion or aging. • Joint hindrance by foreign objects like hair, mud, etc. • Motor failure.	• Recharge or replace the batteries. • Remove the foreign objects carefully.