INDEX

1. OVERVIEW

1.1 Device Introductions

The six surface map

Hardware Configuration

Size（lengthx wide x high）	197.5x120.6x12.5mm
Weight	336g
CPU processor	Allwinner A10 1.0GHZ
Hard disk	8GB------32GB(optional)
RAM	DDR3　1GB
Memory card slot	T-flash 128M-32G
Webcam	Front 0.3, back 2 mega pixels digital camera
Full color display screens	7″TFT　　　Capacitive multitouch screen
Resolution ratio	1024*600
Cruise duration	Depends on the useage, 2-10 hours
USB	Yes(miniUSB2.0)
Speaker	Stereo speaker
G-sensor	Yes
I/O port	Mini USB 2.0, T-flash, 3.5mm headset mouth
	Built-in microphone
Wireless internet	Built-in WiFi802.11b/g/n
Buletooth	Optional
HDMI	yes

Software configuration

OS	Android 4.0
Browser	Google explorer
Vedio	MKV(H.264HP),RM/RMVB, FLV，AVI
	MPEG-1/2 Support 2160P
Music	MP3,APE,FLAC,AAC,AC3,W

	AV
Picture	JPEG,BMP,GIF,PNG,TIFF
E-mail	GmailTM

Front

Quick Guide   main screen   Back

Side

Headset jack   MINI-USB   HDMI   TF slot   DC jack

Volume   Switch
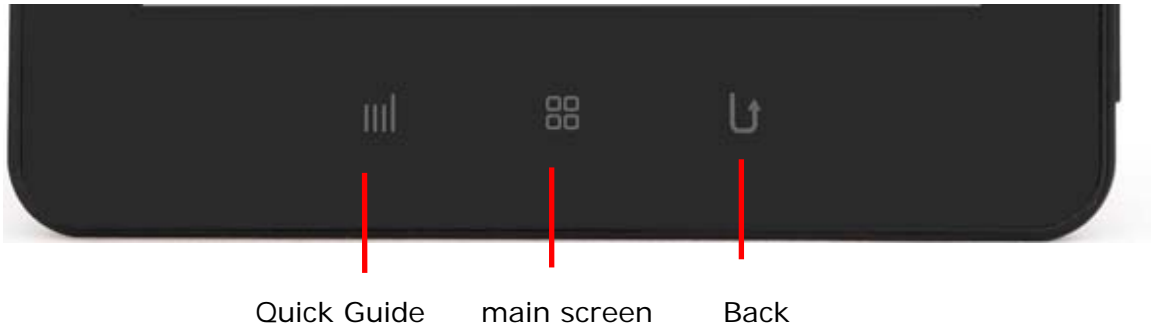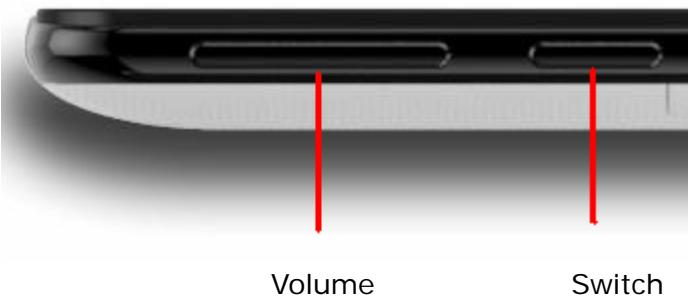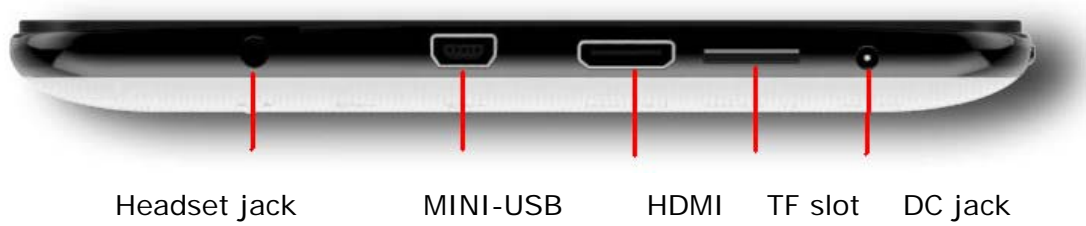
1.2 Install SIM Card and Memory Card

SIM Card

SIM card contains your phone number, memory storage and details of network service.

Install SIM card

Insert SIM card.Ensure golden touch points towards the back，and the chamfering near the side of SIM card slot,push SIM card into card slot.

SIM card slot

Remove SIM card

Noted: please turn off before removed SIM card.

Using your fingertips press the memory card lightly,and then memory card will popup from the card slot.

Memory Card

You need a SD card to store photos，music，vedio and other data.

Install Memory Card

1. Put the golden touch points towards the back, insert memory card;

2.Push memory card into card slot.

Remove Memory Card

1.Please make sure micro SD and equipment disconnect before removed.

Press > > set > SD card and Device Memory > unload SD card

2. Using your fingertips press the memory card lightly,and then memory card will popup from the card slot.

1.3 Charging and Headphones

Charging

The battery power are generally not full of power.

Insert charging line，put the charger plug into electrical socket outlet,start to charge.

When charging，icon appeared in the state bar. When the battery is

completely full of electricity，icon appeared in the state bar.

Headset

When users want to use headphones call or listen to music, Please insert the headset headphone jacks, 🎧icon appeared in the state bar.

Noted: ·When using a headset，the ability of you hear outside voice may be limited.

·Please do not use headphones when it threatens your safety.

·Please do not set up for the biggest volume when using headphones,for it may damage your hearing.

1.4 Fastturnon&off

You can open your equipment after insert SIM card and charging.

Starting up

When starting up,press the power key ▭ , Vibration appear or key light up. Equipment initialization need certain time, please be patien.

。

shutdown

When shutdown ， press the power key ▭ ， popup"device option"dialog box，Press the shutdown to close down. Select "sure" in the popup dialog box.

Into suspended animation

You can press the power button lightly ▭ ,close the screen into sleep mode. So that you can save the energy, and extend the life of the battery，You can also set the delay time before the screen automatic locking . To wake up dormancy,press power bultton ▭ or the Lord screen key、menu key ect. The Lord buttons can light up the screen.

2. BASIC USE

2.1 Main Screen

Through the operation of the touch screen,you can use each function of device, as well as view about both information and event notice

Click the home screen key on the right of the display screen in any interface, you will return to the home screen interface, and it displays all of the application program in lord screen interface.Click any of the application program icon, open this application.

Shortcut

You can add shortcut icon on the home screen.

·On the home screen, click ![icon] open application tray icon，click and drag the icon that you want to the home screen .

Set Wallpaper

Search this function:

Wallpaper>Map depot/Wallpaper/Live Wallpaper
You can click the map depot, choose picture as the wallpaper; click wallpaper, choose wallpaper from the wallpaper depot system; and you can also click the present wallpaper to set a live wallpaper. After choosing the wallpaper, click set wallpaper.

Touch Screen

When using touch screen, you can undertake a corresponding operations of the device by following ways:

Click Function

You can select an icon or options by click function in the display screen .For example click browser on home screen can start the browser.

Click（Long press）Function

You can click the current operation interface, icon or the input box for more operation function through click function. For example: click a contact in the contact list, then it will open a pop-up menu, you may carry out some of the options on menu function.

Drag Function

Dragging the touch screen or points to hold the scroll bar, then drag up or down. For example ,use the drag function when browsing the contact list.
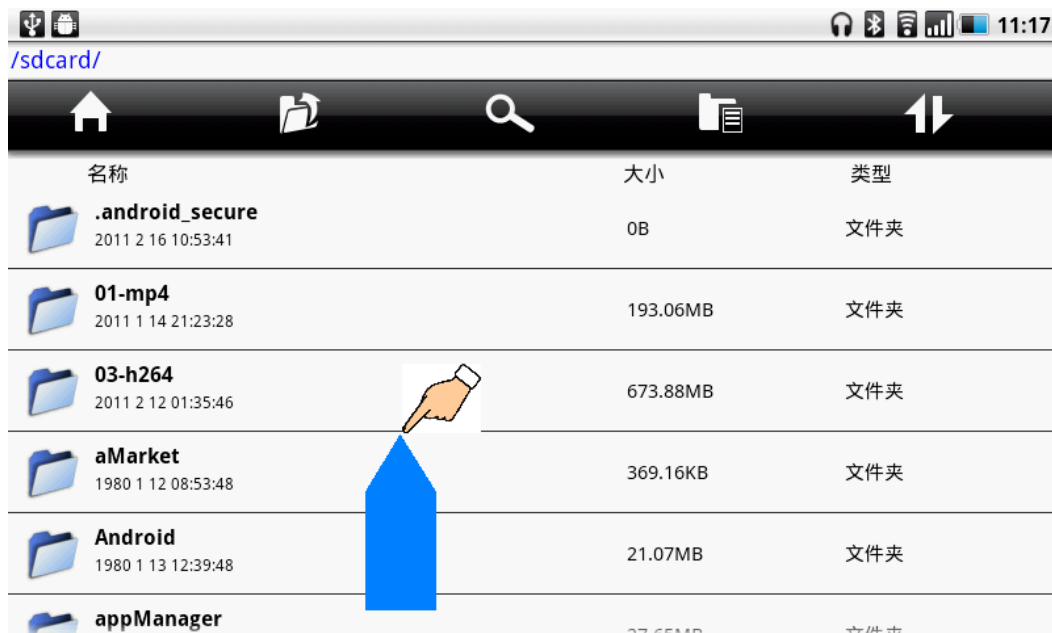
Zoom Capabilities

When you viewing the web pages on equipment, the contents can be larger or smaller as you double click the screen.

Main Button

"The home screen" means equipment already boot, but not to call or use any function of the state standards.

Please press screen and four buttons below the screen by finger pulp

·Menu key popup the current menu options related screen.

·Main screen key back to the standby screen

·Backspace key return to the front screen operation

PowerKey:

Long press powerkey >power off can close equipment, or turn on or off silent mode, also it can open or closed flight mode.

2.2 Volume

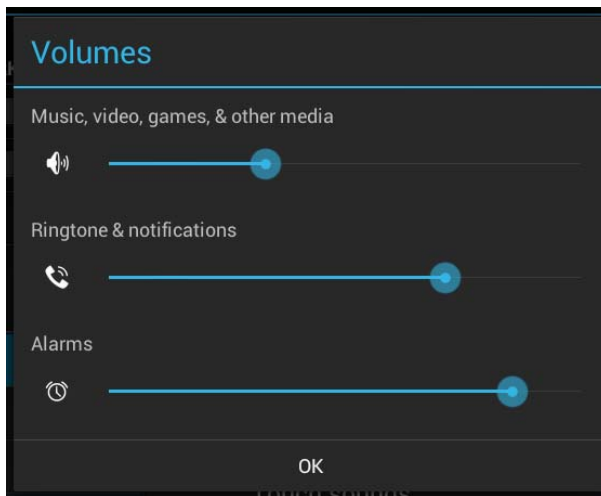There are three ways to adjust volume in your device

Media volume: Set the volume when music and video playing;

Bell volume: set the volume of phone ring and notice bell;

Call volume: set up the volume of calling.

Bell volume

Set bell volume/alarm clock volume
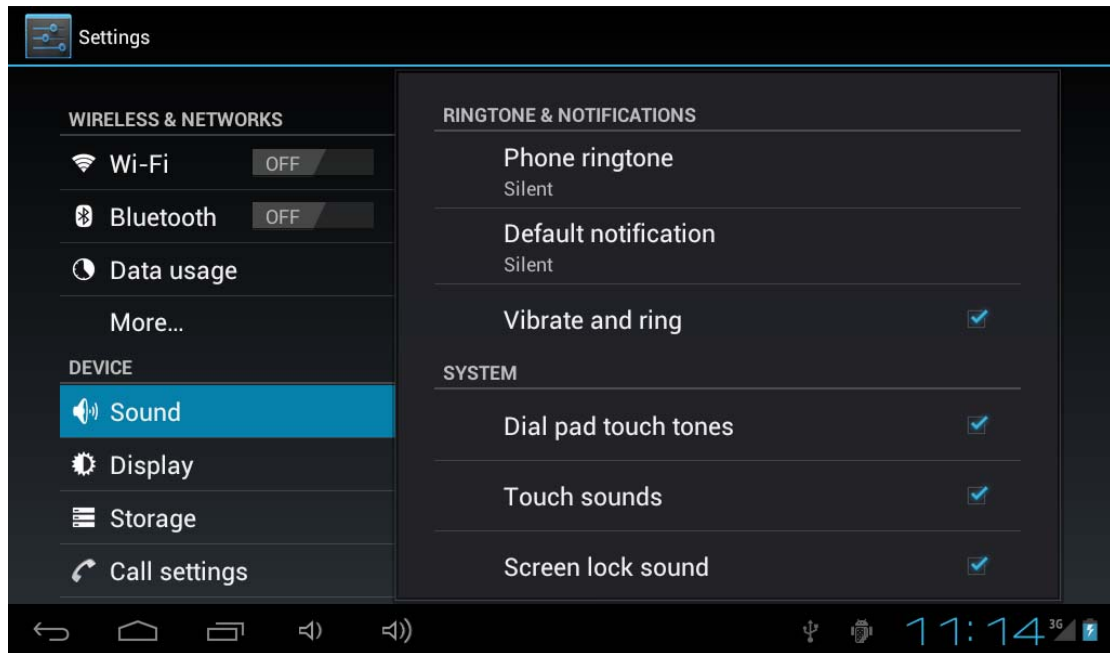
 Search this function: > set
> bell volume>volume
Sliding the slider to the right increase the volume, or left sliding reduce the volume.you can also click the up and down key on left to adjust volume. Click the silent mode to set mute for equipment.

Noted: When the equipment in silent mode, all voice are mute except the media and the alarm clock.

Set Equipment Vibration

Search this function: > set > volume>vibration
Choose equipment vibration mode.

Media volume

Search this function: > set > bell volume>volume

Sliding the slideror click the volume key on left to adjust volume.

Call volume

When in talking, can adjust the volume by clicking the up and down key on left.

2.3 Address list

You can save name, phone number , E-mail and other related content in contact. . They are stored in your equipment memory.
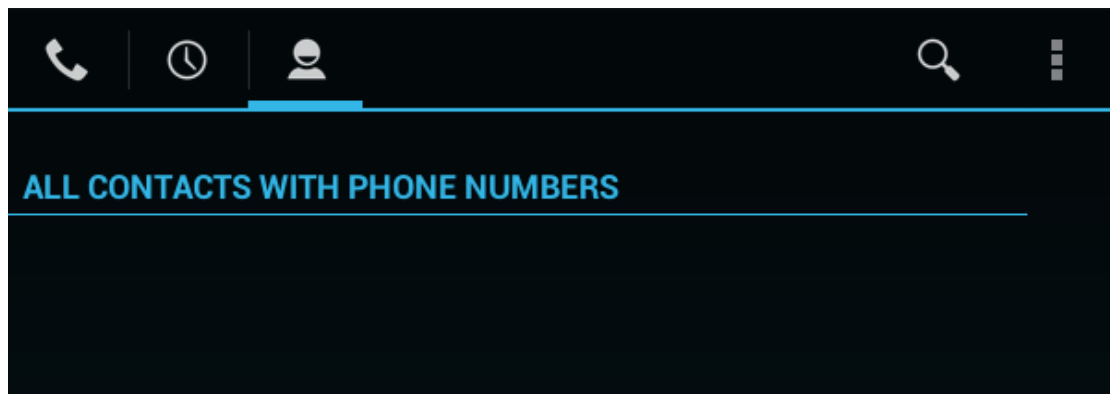
New contacts

Search this function: click> > address book > > new contacts

1. Click corresponding entries to input contact's related information.
2. After inputing the relevant information, then click finish to save contacts.

Edit contacts/Delete contacts

Search this founction:1. Click address list,open the contact list.

2. Long press the contact you intend to edit,select edit contacs/delete contacts ect..

Backup contact

You can export your contacts data to the SD card to spare.

Search this function:

1. Click address list, then open contacts list.

2. Click > import/export.

   3.Click export to SD card.

Click sure in the popup box that display confirm export, backup contact to SD card.

Import contact

Import From SIM Card

Search this function:

1. Click contact,then open the contact list.

2. Click > import/export

3.Click import from SIM card.

List all the contacts in your SIM card, click a contact, select import, the contact was imported into the equipment. You can also click , choose all import, import all contact in SIM card into the equipment.

Import From SD Card

Search this function:

1. Click contact,then open the contact list.

2. Click > import/export

3.Click import from SD card.

Backup the contact that imported from the SD card to the equipment contact.

Collect contacts

You can added commonly used and special contact to the collection, so as to find and use.

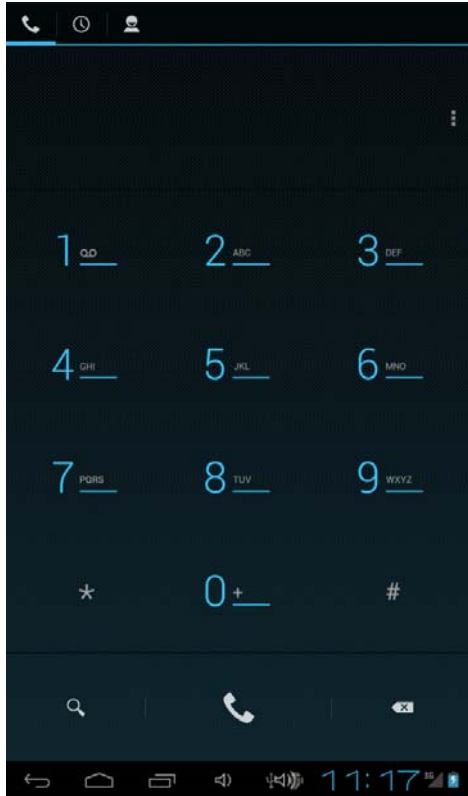Search this function > > address list

Select a contact from address list,long press.And select add to collection in popup operation options. This contact appeared in the collection list after finished.When viewing this contact,the start on top right corner will be gloden.
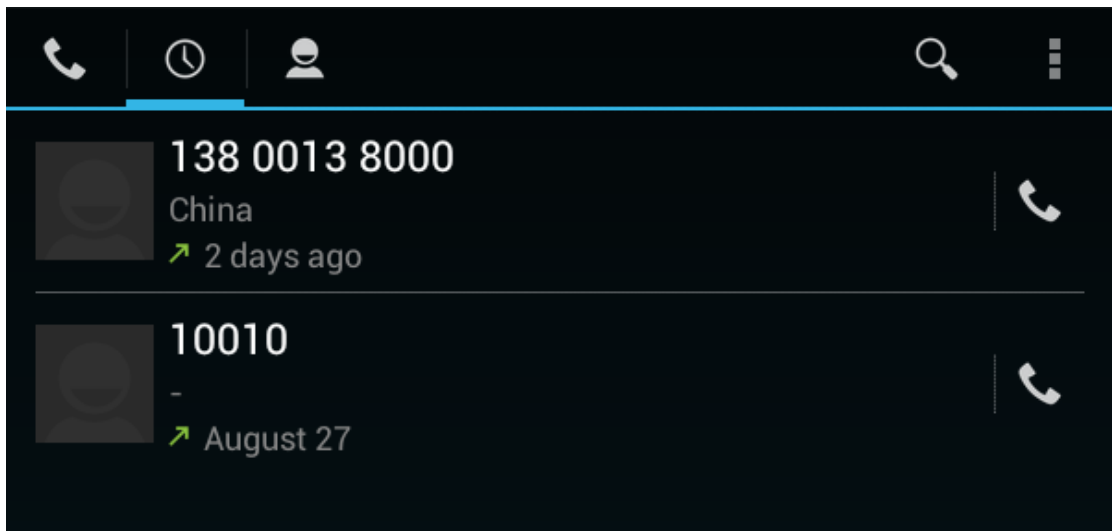
3. DEVICE USAGE

3.1 Calling Guide
Dial

1. click ![phone icon] , open the keyborad.

2. click numbers，enter phone number.

3. click ![phone icon] ,call.

4. click ![end call icon] ,call ending。

Noted：1.click ![delete icon] ，delete the numbers;

2.When calling，you could click homepage ![home icon] or return ![return icon] to hide the calling interface for other operation.click dail ![phone icon] >return the calling and open the calling interface again.

answer the phone

When a call coming,the device will send the attention,you could slide ![answer icon] to right for answering，or slide ![end call icon] to left for refusing.

Hands free

You could　use hands free for insuring safe driving.

Use hands free loudspeaker/earphone/bluetooth earphone for calling.

Mute when calling

You could make your voice unhearable when calling。
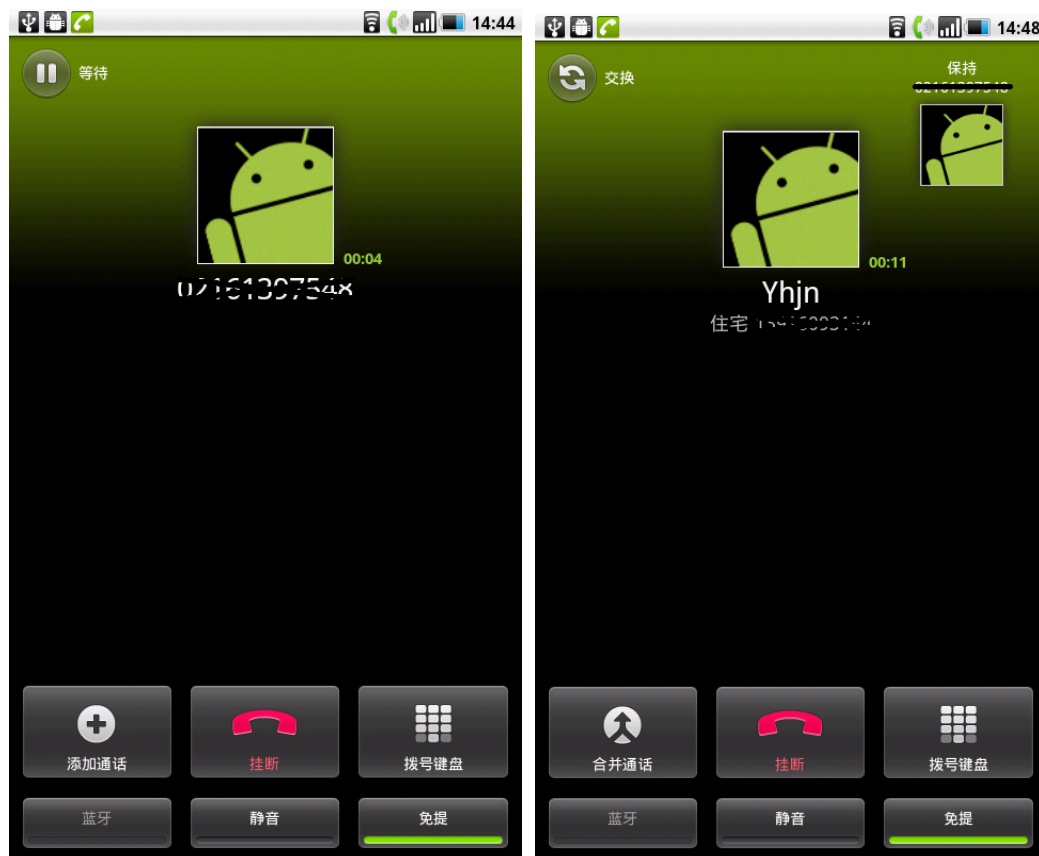
Click mute,open/close mute.

Conference call

1. click ，open the keyborad.

2. click numbers，enter phone number.

3. click ,call.

4.when the call answered，click add a call。

5.click numbers，enter other phone number. click ,call.

6.When get through,click call combination and connect 2 calling.

Calling history

You could check the answered phone,missed phone,dialed phone in the calling history.

Search the function: > > dial >calling history

Dial emergency numbers

Your network service supplier sets one or multi-numbers,can call even under the device locked.

1.click > >

dial ，open the keyborad

（if device has been locked,click emergency calling.）

2.click the numbers,enter the emergency numbers.

3.click ，call .

Noted: 1.Different countries has different emergency numbers, so the numbers in your device won't take effect on all areas. Sometimes due to the network,enviroments or interferrence affects,it might not call the emergency numbers.

3.2 Information

You can send/receive test messages or multimedia messages.

Edit new messages

Search the function: > > >new message

1. Enter the messages recivers.
2. enter the text content.
3. Click send,send the messages.
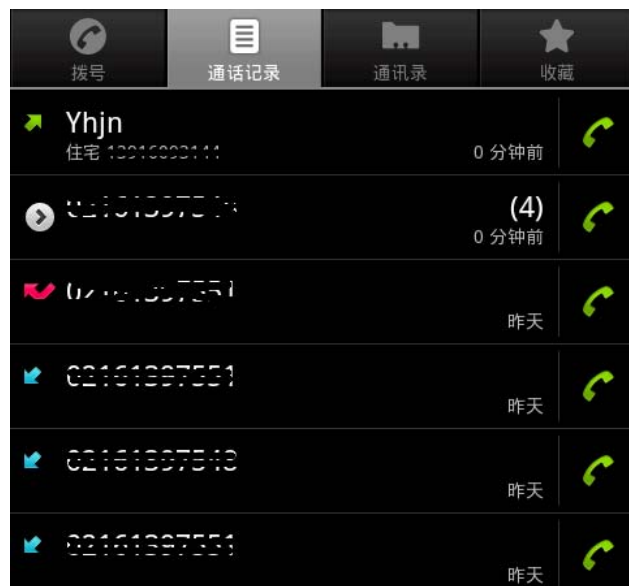
Reply the messages

When receive new messages,the top status bar displays and send the attention

Search the function: > > messages

click the relevant messages:

1.Click the text input area

2.Edit replying content,click send.

Establish MMS

Search the function: > > messages

 >new messages

1.click the receiver,input the messgaes

receiver,or clickto add from the contacts.

2.click > add the subject,click subject,input the MMS subject.

3.click input content,edit MMS content,click send.

Noted : click , add the insert the emotions,additional,etc.

4．BLUETOOTH EQUIPMENT USAGE

4.1 Bluetooth Wireless Connection

Equipment support bluetooth wireless connection，You can set up a wireless connection between device and buletooth headset accessories,Hands-free car call equipment,computer or other device to realize data exchange.

Open/close bluetooth

Search this function: > set> wireless and internet >buletooth

Click tick box to open bluetooth,click again to close bluetooth.
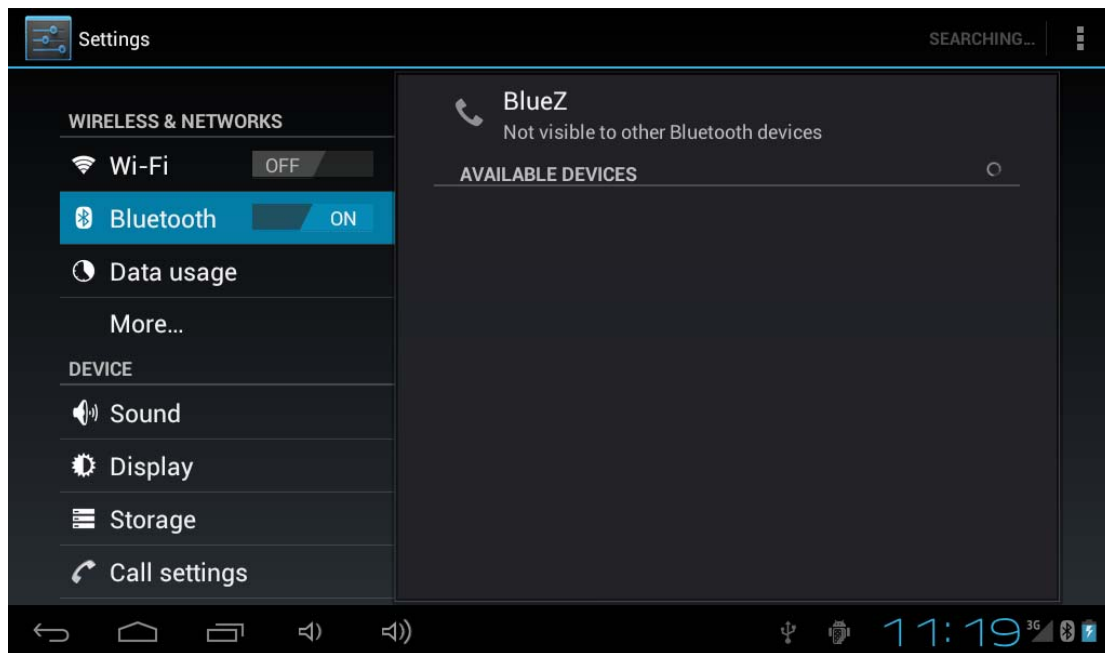
Connect Device to The New Device

1. Make sure you want the pairing of equipment bluetooth connection already open and visible.

2.Click > set> wireless and internet > Bluetooth Settings

3. Click bluetooth, click scanning bluetooth devices after opening

4. The device displays the list of locating device,then click the one you need to match.

5.Typing PIN code（For example 0000）click the ok button connect devices.

After opening bluetooth， Bluetooth indicator will show in the status bar.

Prompt:

1. Related bluetooth device are specific functions, please refer to the corresponding instructions.

2. Different bluetooth connection method might be different, please use the actual shall prevail, this manual is only for reference.

Disconnect the bluetooth and equipment of connection

After pointing the buletooth device name which will be disconnect in the bluetooth device list,click canceling pair to disconnect.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new Tablet PC is a available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each Tablet PC are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body worn operation, this Tablet PC has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that Contains no metal and that positions the handset a minimum of 0 cm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.