ET6x
RFID Reader

Installation Guide

RFID Reader Installation

1. Align the two tabs (1) on the Reader with the connector on the tablet.

2. Press down on each screw to puncture the mylar (2).

3. Secure the Reader to the Tablet using six captive screws.
Torque to 4.5 kgf-cm (3.9 lbf-in.).
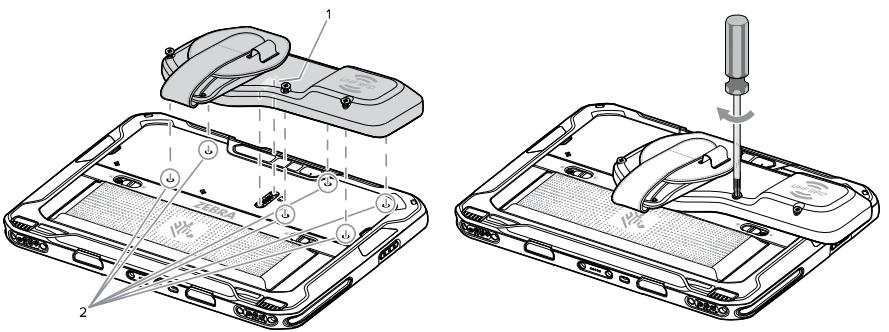

Using the RFID Reader

**1.** On the ET6x, open an RFID Reader app.

2. Point the RFID antenna in the direction of the RFID tags. The tags should be no more than 1 m (39.37 in.) from the RFID Reader.

NOTE: Download the 123RFID demo app prior to using the RFID Reader. Go to zebra.com/support. For RFID SDK, go to techdocs.zebra.com.
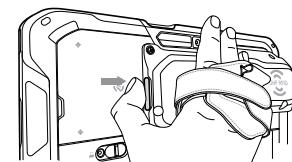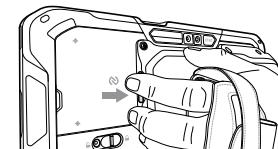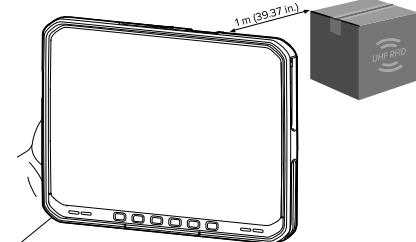

1 m (39.37 in.)

UHF RFID

3. Press Read button to initiate reading of RFID tags.
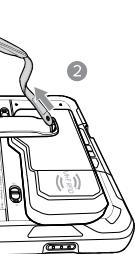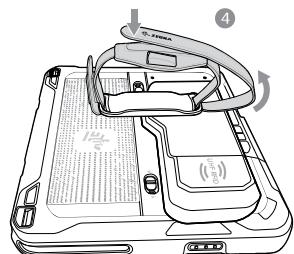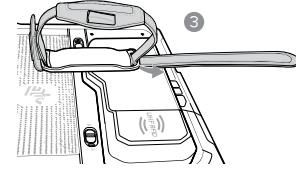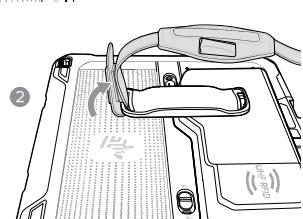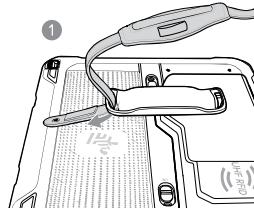
Before you use the unit, it must be configured to operate in your facility's network and run your applications.

If you have a problem running your unit or using your equipment, contact your facility's Technical or System Support.

If there is a problem with the equipment, they will contact Zebra support at **zebra.com/support**.

For the latest version of the guide, go to: **zebra.com\support**.

zebra.com\support

View user documentation.
zebra.com/et60-info

View Quick Answers and Knowledge Base.
zebra.com/knowledge

View user documentation.
zebra.com/et65-info

Download product manuals, drivers, software, and view how-to videos.
zebra.com/support

Request a repair for your product.
zebra.com/repair

Learn about product patent information.
ip.zebra.com

Join Community Connection of Zebra users and ambassadors.
zebra.com/supportcommunity

ZEBRA