DOSS
Just For Perfect Music

CLOUD BOOK
Wireless music system

User Manual

User Manual Contents **Page**

Contents.. 1

Wireless music system information
Unpack the box and check contents........................ 2
System control buttons........................ 3
Status Indicators........................ 4

Preparation
Connecting the system to power........................ 5
Setting up the Cloud Book App........................ 6

Controlling and using the App
Message on the display........................ 7
How to connect Wi-Fi........................ 8
App home page........................ 9
Play page........................ 10
Device list page........................ 11
Add another device 12
Multi-room Play........................ 13
How to set up the four presets........................ 14

Listen to other source
Wi-Fi direct connection........................ 15
TF card Play........................ 16
Auxiliary Mode........................ 17

Technical Specifications........................ 17

Trouble shooting........................ 18-19

Important safety instructions........................ 20

Unpack the box and check contents

Carefully unpack the carton and confirm that the following parts are included.

Cloud Book Music System X 1PC

Micro USB cable X 1PC

Auxiliary cable X 1PC

User manual x 1PC
Warranty card x 1PC
Contact card x 1PC

Note: If part of the system is damaged, or missing, do not use it. Contact DOSS customer service. For contact information, please refer to the contact list on the warranty card or contact card.

System control buttons

The system controls are located on the top of the Cloud Book Music System. You can also use the Cloud Book App.



Button	Description
⏻	Power: Press to power the system on/off.
📶	Press to search and connect to Wi-Fi network. Hold down for 3 seconds to disconnect Wi-Fi network. Hold down for 10 seconds to restore factory settings.
①②③④	Set favorite music or radio stations.
M	Press to choose play mode.
📞	Press to answer/end a phone call. Hold down to reject a phone call.
⏮ ⏭	Skip Backward/Skip Forward: Press to skip tracks.
⏯	Play/pause the audio.
−/+	Volume Up/Volume Down: Press to increase/decrease volume.

Status indicators

The system shows information via Wi-Fi, Bluetooth, TF, Aux and charging indicator.



Icons	Indicator Activity	System Statu
📶	Blinking Blue	Connecting to Wi-Fi network
	Solid Blue	Connected to Wi-Fi network
TF	Solid Blue	TF card mode
AUX	Solid Blue	Auxiliary in mode
⚡	Solid Red	Charging
	Solid Green	Fully charged
①② ③④	Blinking White	Loading
	Solid White	Successfully loaded

---

size:105 X 175MM
材质128G铜版
四色印刷
装订 24P 封二封三空白

Connecting the system to power

Before you set up the system on your network,connect the system to power.



Remark:

1. A fully charged battery provides approximately 12 hours of use at medium volume.The rate of battery discharge varies with the volume setting and music types.
2. To extend the battery playback time, reduce the volume.
3. When the battery charge drops bellow 10% capacity, please recharge it.
4. The speaker will automatically shut off when there is no audio input in 20 minutes.

Setting up the Cloud Book App

After connecting the system to power, download and install the Cloud Book App to a smart-phone or tablet that is connected to your network.

Note: The Cloud Book App is offered to all iOS and Android users for smart-phones and tablets only.

1. Download and install the Cloud Book App.
If this is your first time setting up a Cloud Book system, you must first download and install the Cloud Book App.

- iOS user: Search **uCloudBook** and download from **App Store**.
- Android user: Search **uCloud Book** and download form **Google Play**.

2. Connect the system to your home Wi-Fi network.
After you install the App,add the system to your network(2.4GHz).

- On your smart-phone or tablet,select to launch the App.
- Follow the instructions in the App to complete setup.

Remark: Please connect your device to a 2.4GHz Router. If your router is double module,please connect your device to a 2.4GHz Wi-Fi SSID name.

Message on the display

For a list of icons that may appear on the App display, see bellow.

icon	Description	icon	Description
♪	Start music journey	📶	WPS
⚙	App Setting	LR	L/R mono,L or R channel setting
▯+	Add another speaker	▮	Rename
↻	Refresh to check the device list	①② ③④	Four personal ized presets
ጠL	Mode switch	☁	Cloud Play
✱	Bluetooth Play	▣	TF Card Play
◷	Sleep Mode	⩔	Recently Played
♡	Set as my favourite	✕	Remove from favorites
🔊	Adjust the volume	⊜	DLNA
🔂	Repeat Play	🔀	Shuffle Play
🔁	List Play	☰	Current Playlists
▶	Play/Pause	⏮ ⏭	Skip Previous/Next
🔍	Search for song, singer or Album	P	Pandora
✚	TuneIn Radio	◎	Spotify
♥	iHeartRadio	📱	My music
≡♪	My playlist	◉	Albumm
+♫	Add to playlist	≡+	Next to play
👤	Artist	⊛	Set up four personalized presets

How to connect to Wi-Fi

1. Select on your smart-phone or tablet's screen to launch the App.
2. Click to search the Cloud Book speaker system.
3. Click **Add Speaker** on App.
4. Enter router password and click **Next** on App.
5. Press WPS button on the speaker to configure network and click **Next** on App.
6. Wait while your network configures.
7. Look for confirmation showing the speaker has been successfully added.

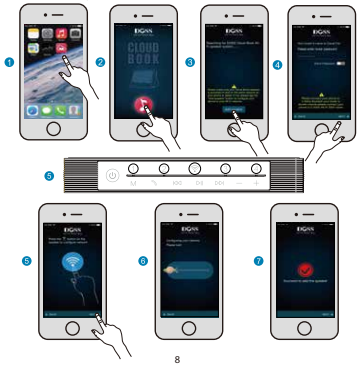

App home page

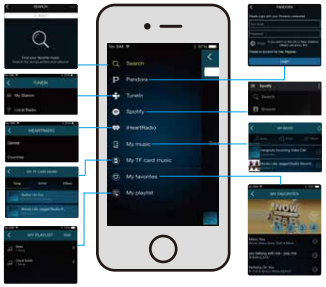

1. Search : Click **Search** to search for your favorite songs, artists or albums.
2. Pandora: Sign into your Pandora account and play music.
3. TuneIn Radio: Listen to TuneIn radio from the system.
4. Spotify: Sign into your Spotify account and play music.
5. iHeartradio : Listen to iHeartRadio from the system.
6. My Music: Play music directly from your phone or tablet.
7. My TF card music : Play my TF card music.
8. My Favorites: My favorites songs, singers, albums lists.
9. My playlist : Manage my playlists.

Play page

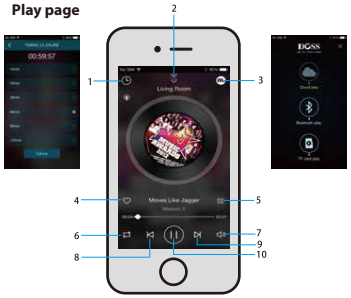

1. Sleep Mode: the speaker will automatically shut off when the set time has been reached.
2. Scroll down to check the last search result.
3. Change play mode between Cloud Play, Bluetooth Play and TF Card Play.
4. Favorites: Set the song to my favorites list or cancel it.
5. Current Playlists.
6. Music loop mode between List Play, Shuffle Play and Single Song Repeat.
7. Volume control.
8. Skip back.
9. Skip forward.
10. Play/Pause.

Device list page

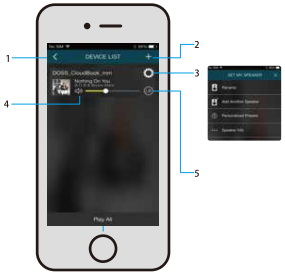

1. Click to go back to the last page.
2. Add another device.
3. Set my speaker.
   - Rename: Rename the speaker system.
   - Add another speaker: Click to add another speaker.
   - Personalized presets: Set the four personalized presets.
   - Speaker information: Click and check system information.
4. Volume control.
5. Set L/R mono, L channel, R channel. This function is normally used for multi-room mode.

Add another speaker system device

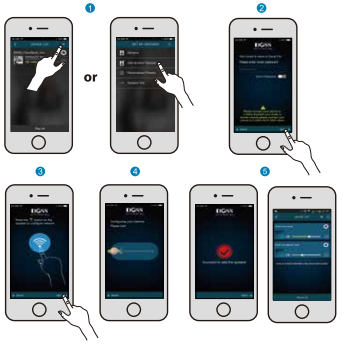

1. Click the + icon on the Device list page, or Click **Add Another Speaker** on Set My Speaker Page.
2. Enter Wi-Fi password and click **Next** on the screen.
3. Press WPS button on top of another Cloud Book speaker system that you want to add. Click **Next** on the App.
4. Wait while your network configures.
5. Look for confirmation showing the speaker has been successfully added. Now you can choose between two speakers on the list.

Multi-room play

Enjoy great sound quality wherever you are with the DOSS Cloud Book speaker system. You can connect to two or more speaker systems to change the left and right channel or stereo sound via the Cloud Book App.

1. Make sure you have connected two or more Cloud Book speaker systems.
2. Play different songs from different devices. Enjoy music in different rooms all with control on the Cloud Book App.
3. Multi-Mode: Press and hold the device icon for two seconds, then drag it towards another device to pair them on the Cloud Book App. This way the same song can be played on multiple speaker systems.
4. Solo-Mode: Press and hold the device icon, then drag it down past the dotted line to disconnect the connection between the two speaker systems.

Multi-mode



Solo-Mode



How to set up the four presets

You can personalize four presets to your favorite music, radio stations, playlists, artists, albums or songs from your music library. You can access your music with a simple touch button on the speaker system at any time.

Tips: You can set the four presets contents free on App.

1. Enter the Artist, Album, Playlist or Radio Station you like.
2. Press the preset setting icon on the App.
3. Choose and click a preset number you want to set.
4. Confirm setting.
5. Simply touch the corresponding number button on the top of the Speaker System to access your selection.

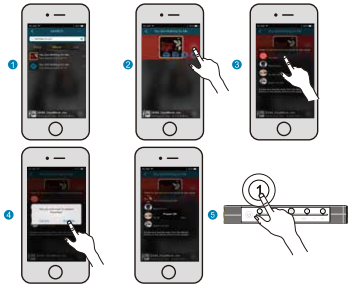

Using the Cloud Book system, you can listen to music on a smart-phone, tablet, or any other audio device that can be connected by an Auxiliary connector, Bluetooth, TF, Airplay or DLNA stream via Wi-Fi.

Wi-Fi direct connection

- Without Wi-Fi network
  1. Turn on the system. System enters Cloud Play mode automatically.
  2. Enable WLAN on your device and choose **DOSS_CloudBook_xxxx** from the list.
  3. Pair the devices.
  4. Adjust a suitable volume to play music.
- With Wi-Fi network
  1. Once the speaker is connected to your home Wi-Fi network, Wi-Fi direct connect function is disabled. To disconnect the speaker from your home Wi-Fi network, long press the WPS button on top of the speaker for three seconds (together with a BEE prompt) to enter Wi-Fi direct connect mode.
  2. Enable WLAN on your device and choose **DOSS_CloudBook_xxxx** from the list.
  3. Pair the devices.
  4. Adjust a suitable volume and play music on your device.

TF card Play

1. Insert a TF card. The system will automatically enter TF Card Play Mode. You can also press M Mode on the top of the system, or select TF Card Play Mode in the Cloud Book App.

Once TF mode is selected, the TF indicator will become solid blue.
TF Card Play Mode will only work when a TF Card is inserted into the system and there is at least one song available to be played.

2. How to select a song from my TF card to play:
- Enter Cloud Book App Home Page.
- Click My TF card.
- Select the song you want to play.

Auxiliary in mode play

Requires a 3.5mm audio cable (included).
1. Connect any audio device to the system.
2. The system will switch to Auxiliary Line in Mode automatically.
3. Adjust a suitable volume to play music.

Reminder: The speaker supports most media play Apps with DLNA and Apple Airplay protocols. Enter the Media play Apps and stream audio directly to the speaker system (Wi-Fi direct only).

Technical Specifications

Output power: 4W X 2
Driver unit size: 1.75 inch X 2
Battery capacity: 3.7V 2200mAh
Power by: 5V ⎓ 1A
Product size: 7.0 inch X 4.45 inch X 1.34 inch

Trouble shooting

Problem	What to do
Cannot complete network setup	• Make sure your system is on. Connect the system to power the battery if necessary. • Select a correct network name and enter password. • Connect your device and Cloud Book system to the same Wi-Fi network. • Enable Wi-Fi on the device you are using for set up. • Test your internet connection by loading www.dossaudio.com. • Restart your mobile device and router (2.4GHz router only). • Uninstall the app, reset the system, and restart set up.
Intermittent or no audio	• Move the system away from possible interference (microwaves, cordless phones, etc.) • Stop other audio or video streaming Apps. • Move system or audio source closer to the wireless router or access point. • Ensure system volume is not too low. • Unplug the power cord, reconnect after one minute to charge the system. • Make sure your device and the speaker are synced to the same Wi-Fi network.
Fail to stream audio to the speaker via Airplay, DLNA protocol	• Enter the Media play App that supports Airplay or DLNA. Select the speaker system in the Media Play App menu. • Ensure the device is playing. Increase its volume. • Stream audio to the speaker system with or without Wi-Fi network. • Restart your mobile device. • Reconnect your mobile device with the speaker system.

Trouble shooting

Problem	What to do
Fail to connect Bluetooth	• Make sure your system is on. Connect the system to power the battery if necessary. • Enabled Bluetooth function on your device. • Select Bluetooth Mode on the system or App. • Make sure the system and your device distance is within 10meters/33ft and there is no other obstacles to block the signal.
Could not play TF card music	• Make sure a TF card is inserted into the system. • Make sure there is at least one song on the TF Card. • If the speaker does not enter TF mode automatically, press the M Button on the top of the system or select TF Card Play Mode in the Cloud Book App.
Cloud not play Auxiliary in music	• Please make sure the system is well connected to your device. • If the speaker does not enter Auxiliary Mode automatically, press the M Button on the top of the system or choose Auxiliary Mode in the Cloud Book App. • Play music on your device and adjust a suitable volume. • Restart the system, and retry.
A lot of noise	• Turn off the system and restart. • Press the M Button on the top of the system or select Play Mode in the Cloud Book App.
Music is weak	• Make sure the system power is not low. Recharge the battery if necessary. • Adjust a suitable volume on both your device and App.
Still not working properly	• Hold down the WPS Button for 10 seconds to restore the factory settings. • Select Restore Factory Settings in the Cloud Book App.

Important safety instructions

Please take the time to carefully read and follow these important Safety Instructions.They will help you set up and operate your system properly and enjoy its advanced features.Save this guide for future reference.

1. Read and keep these instructions.Heed all warnings and follow all instructions.
2. Do not use this apparatus near water or moisture.
3. Clean only with a dry cloth.
4. Do not block any ventilation openings.Install in accordance with the manufacture's instructions.
5. Do not install near any heat sources,such as radiators, heat registers,stoves,or other apparatus (including amplifiers) that produce heat.
6. Protect the power cord from being walked on or pinched,particularly at plugs,convenience receptacles, and the point where they exit from the apparatus.
7. Use only attachments/accessories specified by manufacturer.
8. Do not charge this apparatus during lightning storms. Carefully pack it when unused for a long period of time.
9. Contains small parts which may be a choking hazard. Not suitable for children under the age of 3 years old.
10. The product contains magnetic material. Please contact your physician if you have any questions.
11. Make no modifications to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance.
12. Do not replace the battery without the help of a professional.

FCC Disclaimer:
This device Complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or on experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RS5 standard(s). Operation is subject to the following two conditions; (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Follow us in Facebook

DOSS

DOSS Technology Co.,Ltd
Email: support@dossaudio.com