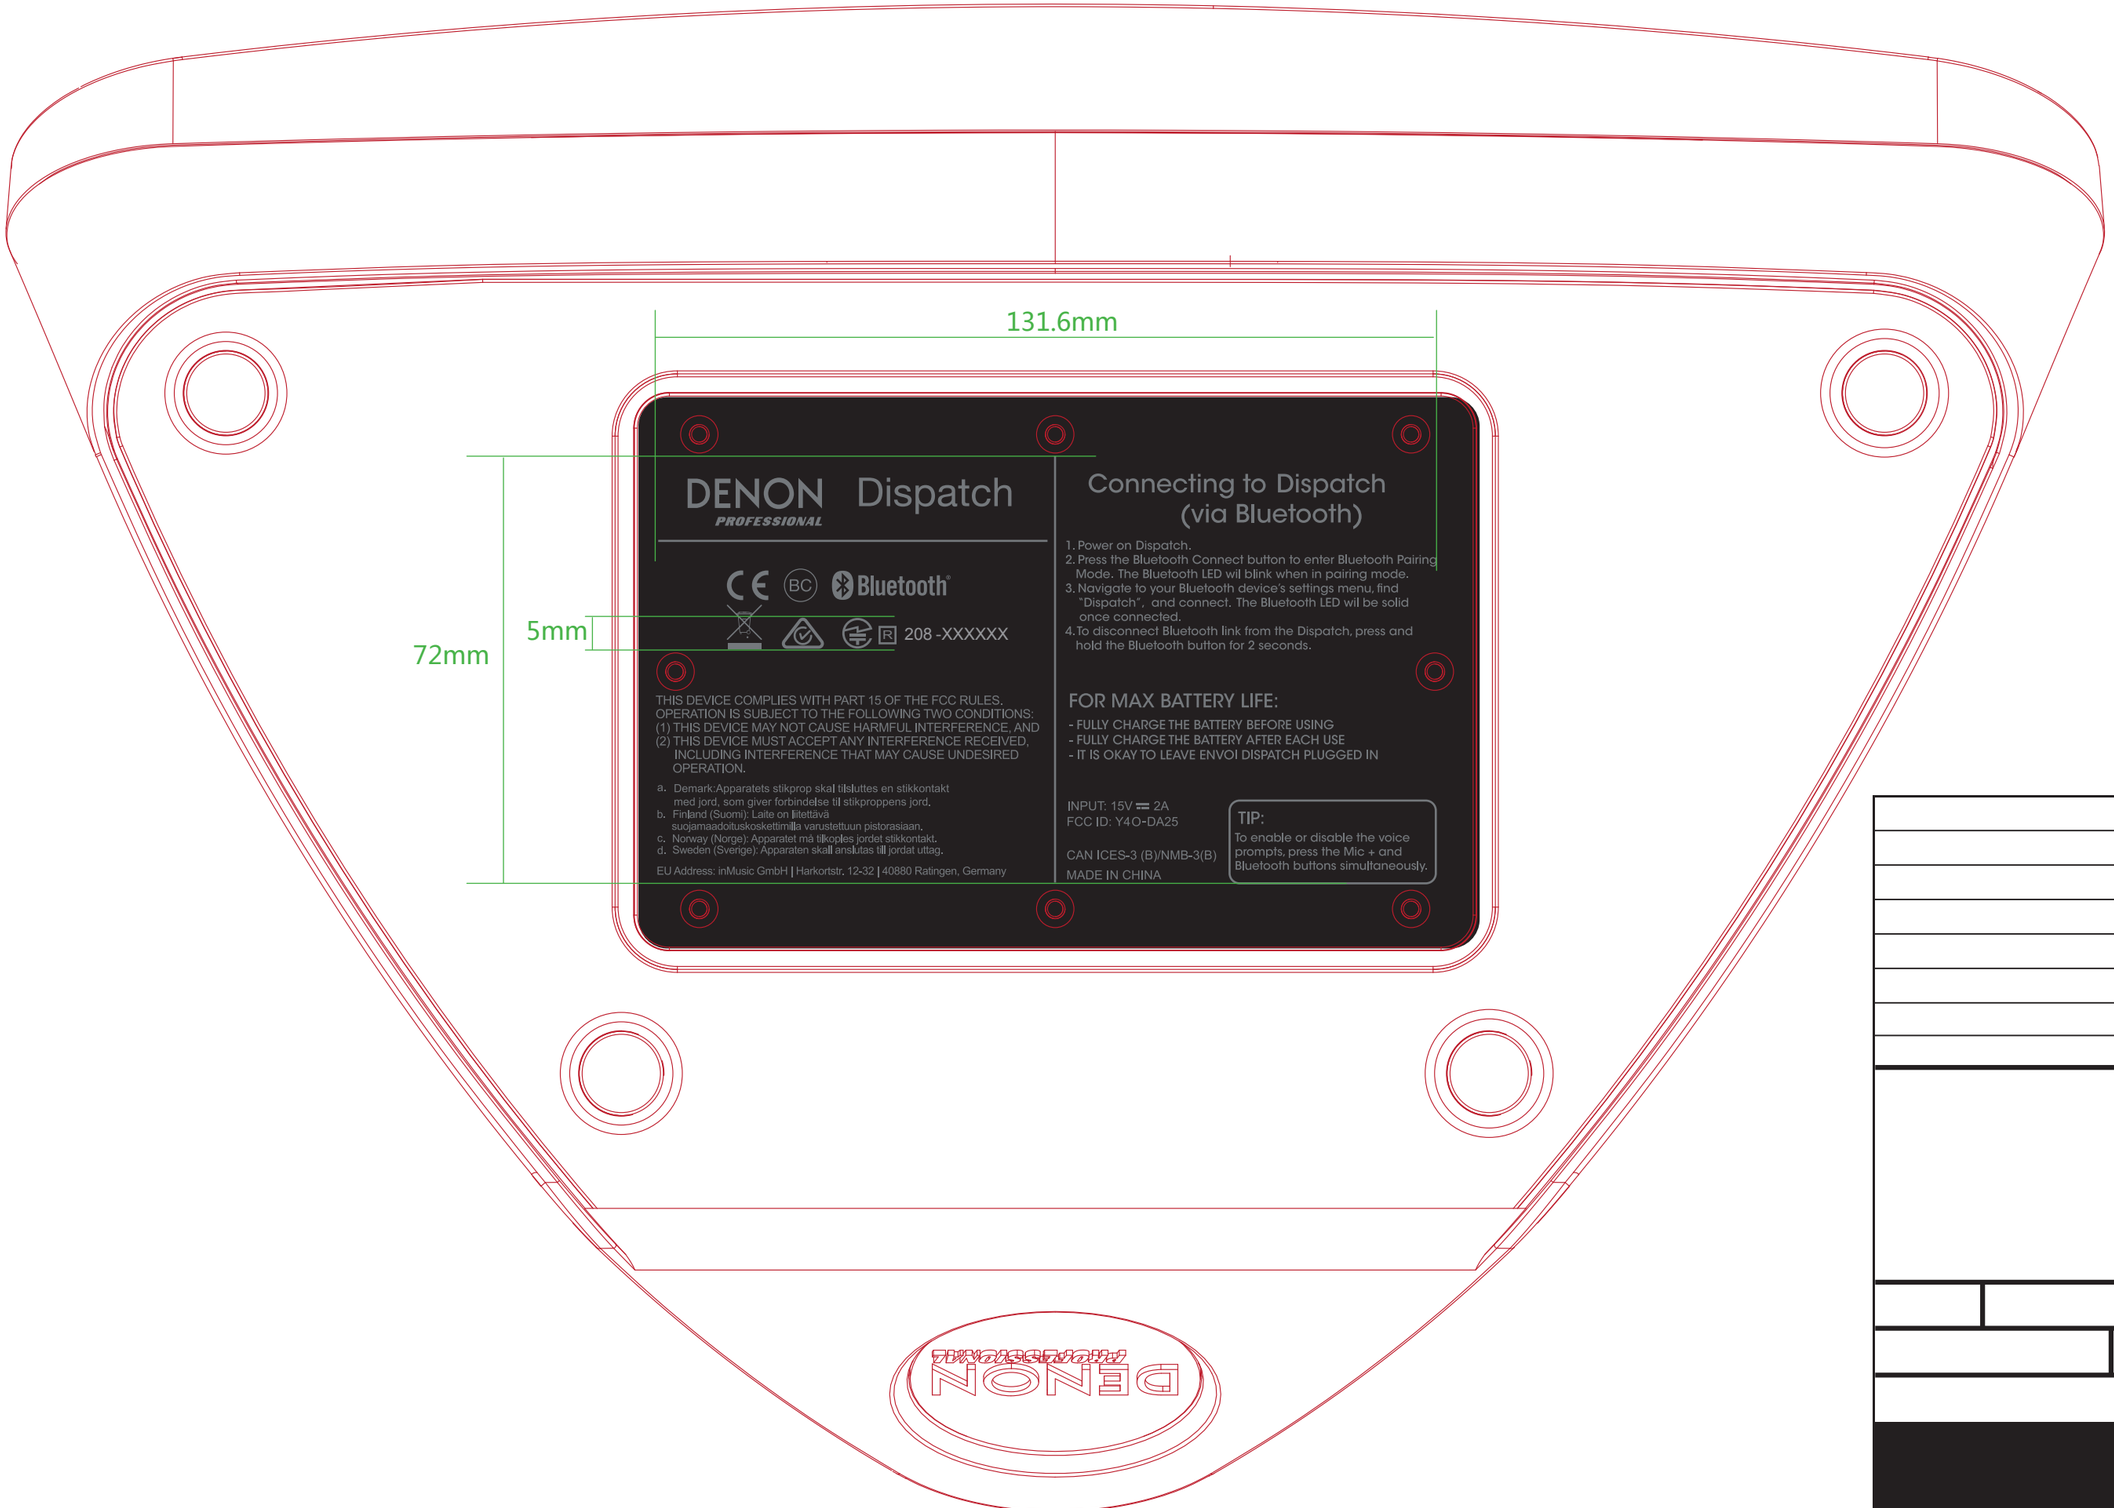
131.6mm
72mm
5mm
DENON PROFESSIONAL Dispatch
Bluetooth
208 -XXXXXX
THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.
OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.
a. Demark:Apparatets stikprop skal tilsluttes en stikkontakt med jord, som giver forbindelse til stikproppens jord.
b. Finland (Suomi): Laite on liitettävä suojamaadoituskoskettimilla varustettuun pistorasiaan.
c. Norway (Norge): Apparatet må tilkoples jordet stikkontakt.
d. Sweden (Sverige): Apparaten skall anslutas till jordat uttag.
EU Address: inMusic GmbH | Harkortstr, 12-32 | 40880 Ratingen, Germany
Connecting to Dispatch (via Bluetooth)
1. Power on Dispatch.
2. Press the Bluetooth Connect button to enter Bluetooth Pairing Mode. The Bluetooth LED wil blink when in pairing mode.
3. Navigate to your Bluetooth device's settings menu, find "Dispatch", and connect. The Bluetooth LED wil be solid once connected.
4. To disconnect Bluetooth link from the Dispatch, press and hold the Bluetooth button for 2 seconds.
FOR MAX BATTERY LIFE:
- FULLY CHARGE THE BATTERY BEFORE USING
- FULLY CHARGE THE BATTERY AFTER EACH USE
- IT IS OKAY TO LEAVE ENVOI DISPATCH PLUGGED IN
INPUT: 15V ⎓ 2A
FCC ID: Y4O-DA25
CAN ICES-3 (B)/NMB-3(B)
MADE IN CHINA
TIP:
To enable or disable the voice prompts, press the Mic + and Bluetooth buttons simultaneously.
DENON PROFESSIONAL