Test Setup photographs (PCE)

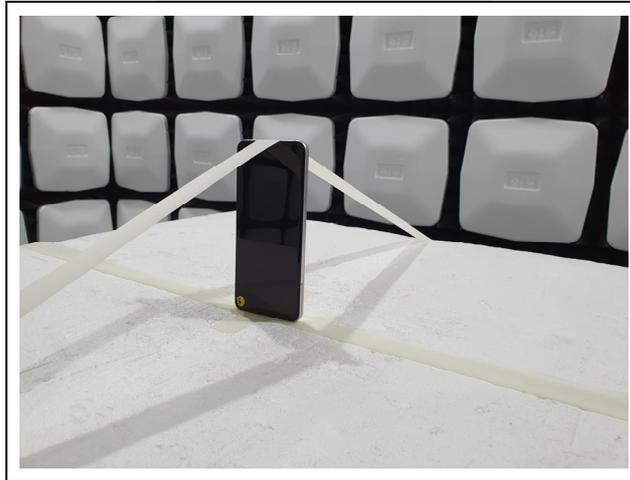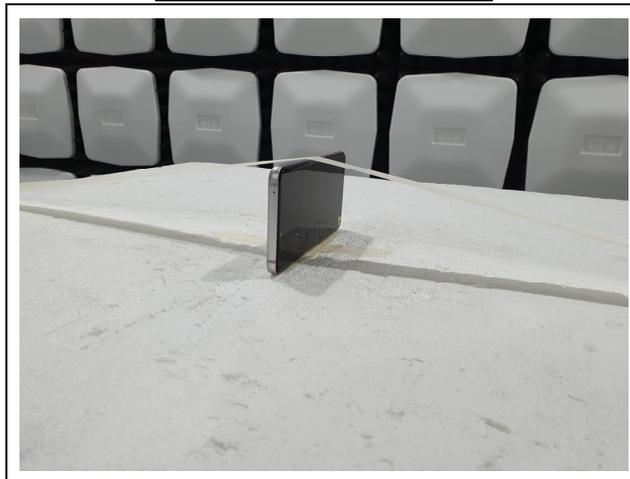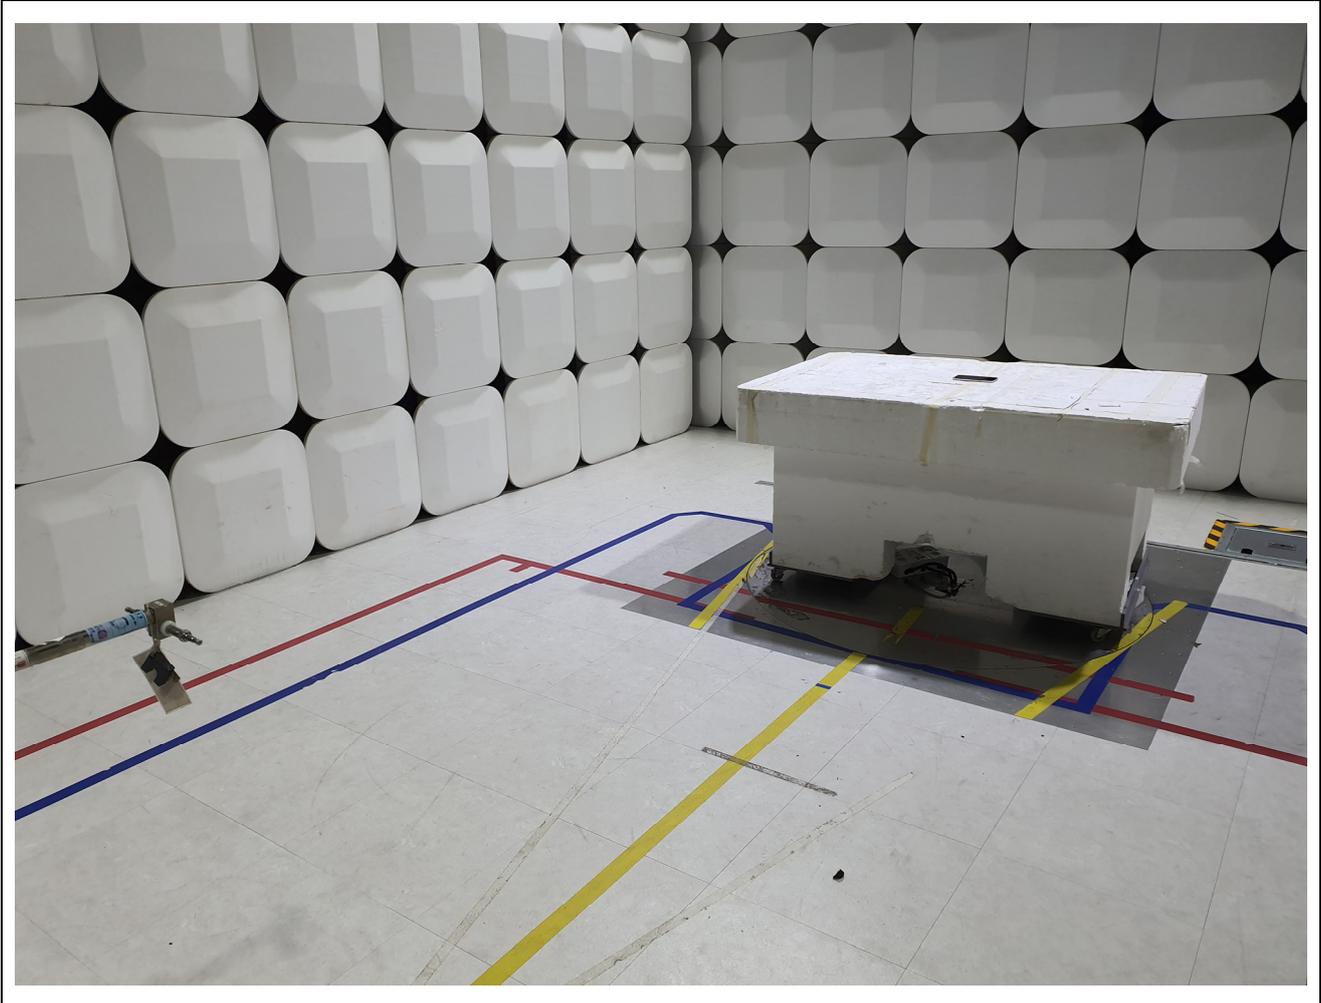## EUT Position: X-axis
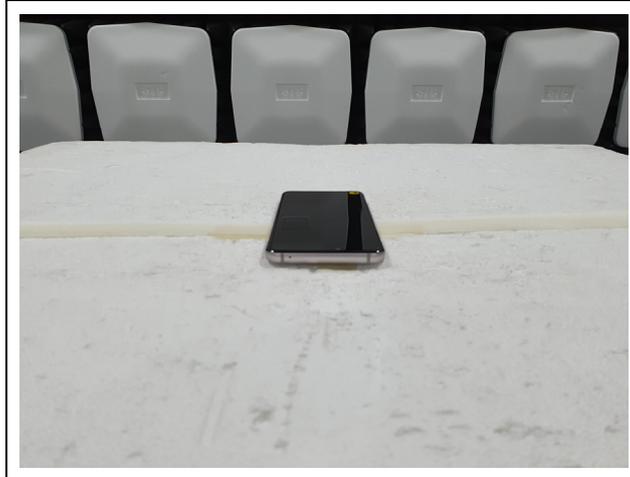
EUT Position: Y-axis

EUT Position: Z-axis

Test Setup Photo of Radiated Measurement (PCE)

Test Setup Photo of Radiated Measurement (PCE)