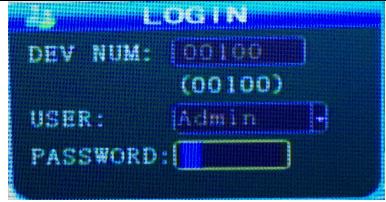
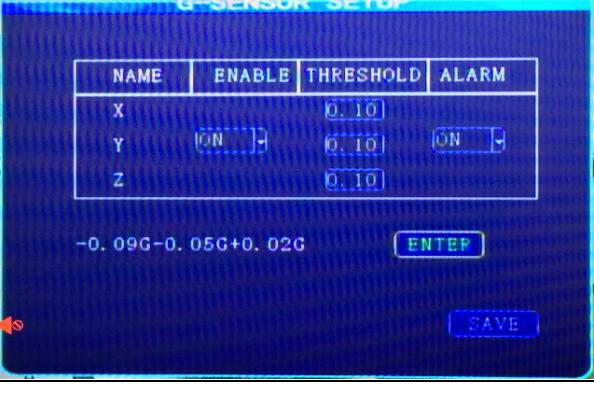
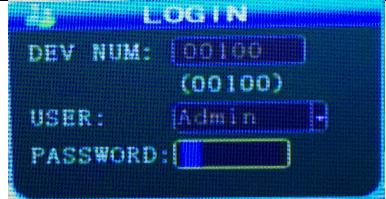


<p>1) Press Login button on remote. Use down arrows to select the password field. Enter 888888.</p>	
<p>2) On Setup menu, use arrow keys to highlight Alarm button. Press Return.</p>	
<p>3) On Alarm Setup menu, use arrow keys to highlight G-Sensor button. Press Return.</p>	
<p>4) On G-Sensor Setup page, use arrow keys to highlight Enter button to the right of the X, Y and Z sensor values. Press Return and watch that the values are now approximately 0.</p>	

4. Installation, confirmation and sign-off are now complete.
5. Ensure all wires are properly stowed and secured, cameras are aligned and MDVR is securely mounted to vehicle.

## Appendix 1: SIM Swapping and Configuration

If the installation requires a change of the cellular SIM and reconfiguration of the MDVR for the new cellular network, use these procedures.

<p>1) Use MDVR security key to unlock SIM and HDD cover. Remove SIM and insert new SIM as shown. Press fully in until it clicks. Close cover and lock with MDVR security key. <b>MDVR will not start with door unlocked.</b></p>	
<p>2) When MDVR is powered up, point remote at front of MDVR and press Login button. Use down arrows to select the password field. Enter 888888.</p>	
<p>3) On Setup menu, use arrow keys to highlight Peripherals icon. Press Return.</p>	
<p>4) On Peripherals Setup menu, use arrow keys to highlight Wireless Setup icon. Press Return.</p>	

- 5) On Wireless Setup page, use arrow keys to select the APN field, press Enter to display keyboard, use arrow keys to move cursor over desired letter and use OK to select each letter. Use BS to delete the entire field before entering the new value shown in the image. When complete, exit from keyboard and select SAVE to save these values. Press Return to exit menus and logout.

- 6) Open System Info page and verify dial-up success.

