


Small Card
10.000pcs

BACK FRONT



CHARGING GUIDE

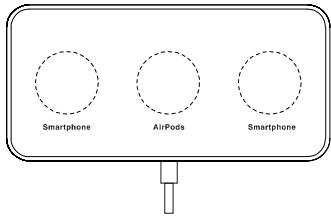

Need help?
Get in touch!
hello@wodaccessories.com

Please read the instruction carefully
before using the Wireless Charger!

INSTRUCTION

1. Connect your charger and USB-C cable to a power socket. Needed: For stable charging connect the USB-C cable to a 30W (or higher) power adapter.

Once the Wireless Charger is connected to power the LED lights will flash for 2 seconds.

2. Place the Charging Pad on a flat surface like your desk.

3. Place your Qi-enabled smartphones on the left and right wireless coil of the charger. Especially for iPhone MagSafe models or cases with built-in magnets it is important to place the smartphones on the correct position. Place your Apple AirPods on the coil in the middle of the Charging Pad.

4. Your smartphone and AirPods will start charging a second after you place it on your charger.

The LED lights will stay on to showcase the charging process.

THINGS TO WATCH

If your phone vibrates your phone might shift position. If this happens often, consider turning off vibration mode.


Your phone might get slightly warmer while it charges. This is totally normal. You might consider moving the charger to a cooler place.

Important: Your phone or phone case cannot carry any metal materials, which will stop the charging process, such as rings, keys, metal plates. The LED starts to flash the FOD (foreign object detection) noticed an object which is disturbing the charging process. Please take off your devices and wait for 10 seconds to re-start the charging process.

If you noticed flashing LED lights a problem might have occurred. In this case take off your devices and re-connect the charger with your power source.

Make sure that the power source is high enough to support the Charging Pad.

RECOMMENDATION

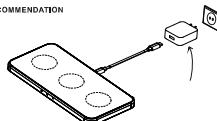

For stable charging use 30W (or higher) power adapter. You also can use a 45, 60, 100W power adapter.

ENJOY FAST & SUSTAINABLE CHARGING!



Kraftpaper Card (Manual)