

LED Indicator

This keypad has two red LED indicator lights.

1.Turn the switch to ON position, the LED1 light will go on and then go out after 3 seconds, then the keypad enters the Power Saving mode.

2.Long press the "Esc+Enter " key for 2-3 seconds, the LED1 will flick red, it indicates the keypad enters the pairing state.

3.When the battery voltage is lower than 2.1V, the LED1 flicks red, please replace the batteries.

4.When the NumLock function is ON, the LED2 will be bright, then you can input numbers by pressing the number keys.

5. When the NumLock function is OFF, the LED2 will go out, and all numeric keys will be not effective,and the following is how the functions keys work:

Press Number 1: End

Press Number 2: Down

Press Number 3: PgDn

Press Number 4: Left

Press Number 6: Right


Press Number 7: Home

Press Number 8: Up

Press Number 9: PgUp

Press Number 0: Ins

Press " . ":Del




LED1

LED2

Instruction Manual

Wireless Mini Numeric Keypad

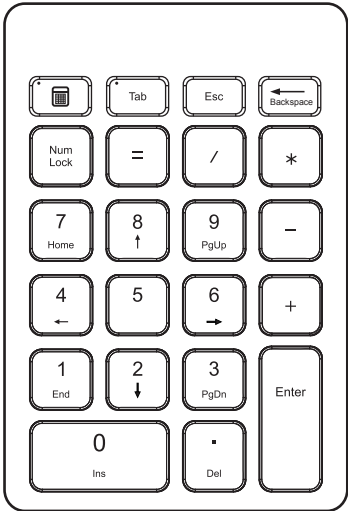

CAUTION: To use this device properly,please read the instruction manual carefully before the usage.

86*108mm

105g铜版纸单色双面印刷

Hotkeys of Keypad

This keypad provides hotkeys of the top cover.


: Open the calculator

Esc: Same as Esc key function (when the calculator is open, it indicates reset)

Other Advantages

1. Power Saving design: when there is no action for the keypad about 10mins, it will enter dormant state,just press any key can active it.

2. Two AAA alkaline batteries: so the whole system voltage is 3V.

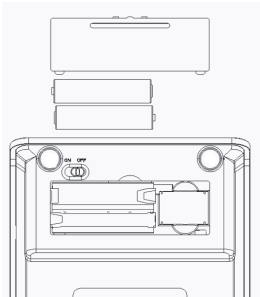

Install the Batteries

This wireless keypad uses two AAA alkaline batteries

Step 1: Remove the battery cover back by squeezing it from the keypad to release it.

Step 2: Put the batteries inside as shown.

Step 3: Recover it.

Bluetooth Pairing

1.Switch to ON position from the back of the keypad.

2. Long press the "Esc+Enter " key for 2-3 seconds, the LED1 will flick red, it indicates the keypad enters the pairing state.

3. Plug the receiver into the computer's USB port.

4. LED1 goes out, the keyboard and receiver are successfully coded. Now you can use the keyboard normally

