



# Assembling the Product


## Assembling Yarbo

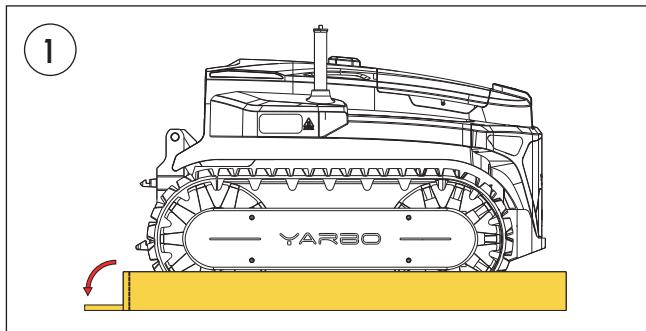


**Cut** the box along the line on the box.

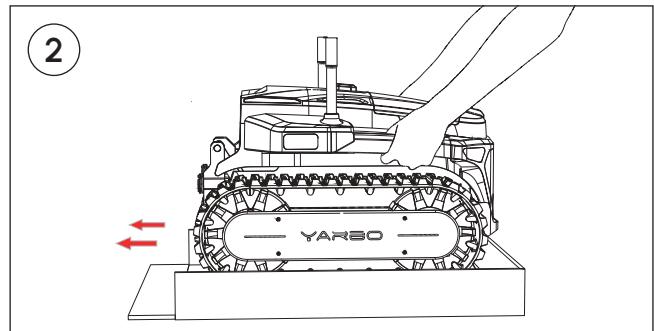


**Push** the Universal Body out from the packaging box.  
**DO NOT** grab on the antenna poles.

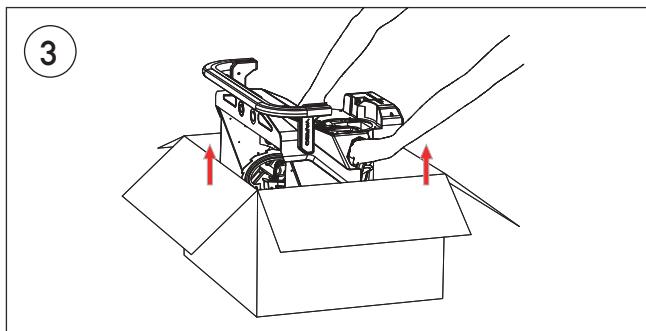


**Lift** the Snow Blower S1 out from the packaging box.  
DO NOT pull on the Bumper.

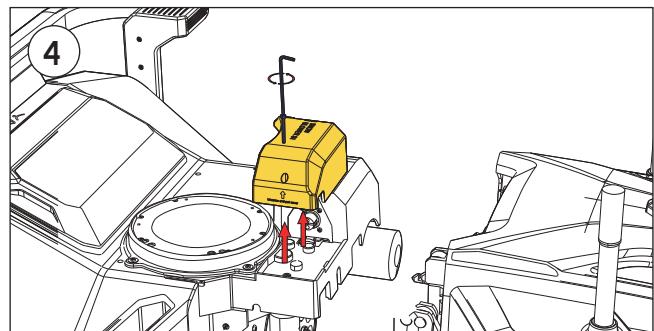

**Remove** this cover, with Allen Key #1.

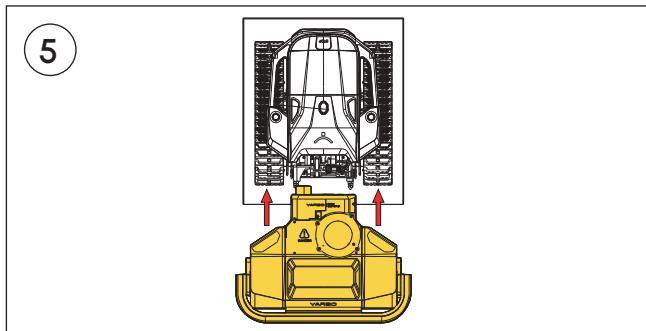


Position the Snow Blower Module next to the Universal Body closely.  
**DO NOT** connect these two parts now.

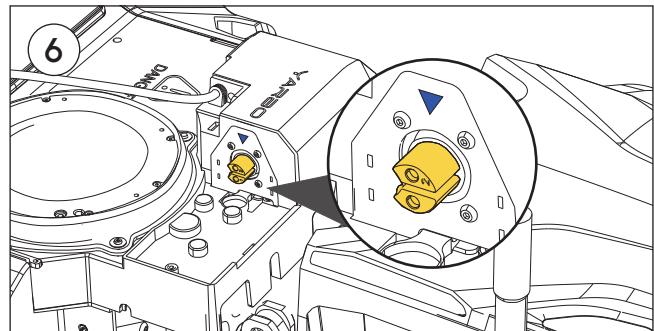


**Locate** this port on Snow Blower Module.

# Assembling Yarbo

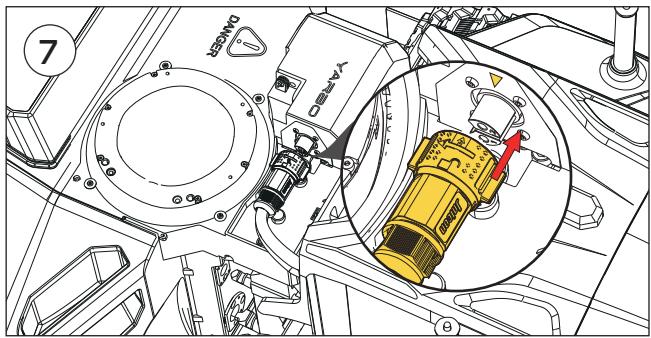


**Locate** the cable inside the Universal Body.  
**Forcefully insert** until you hear or feel a click.

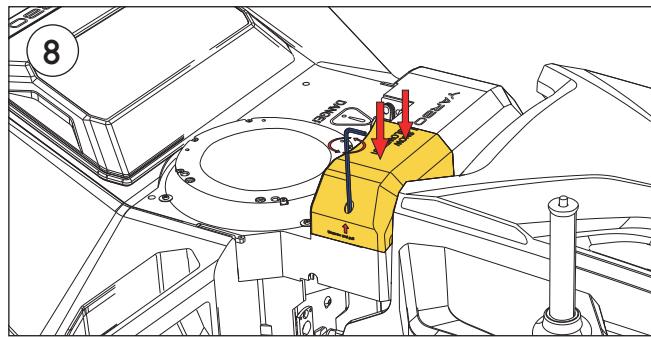


**Place** the cover removed in step 4 back to its original position.

**Tighten the bolt\***.


\*DO NOT skip this step.

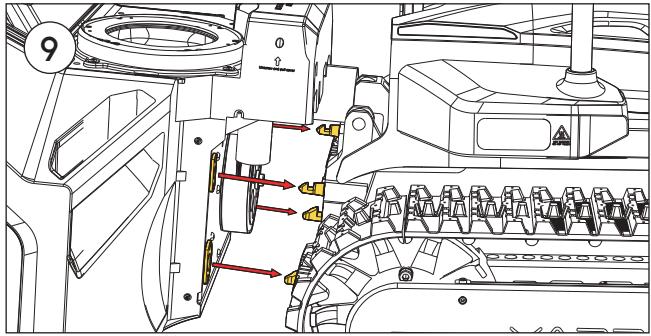


**Locate** the holes and shafts.  
Raise the 2 locks on the Snow Blower Module

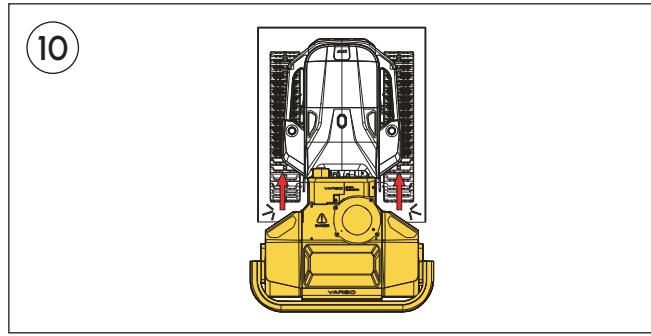

**Slightly lean** the Snow Blower Module backward.  
**Gently push** together, until you hear or feel a click.  
**Press down** the locks on the Snow Blower Module.

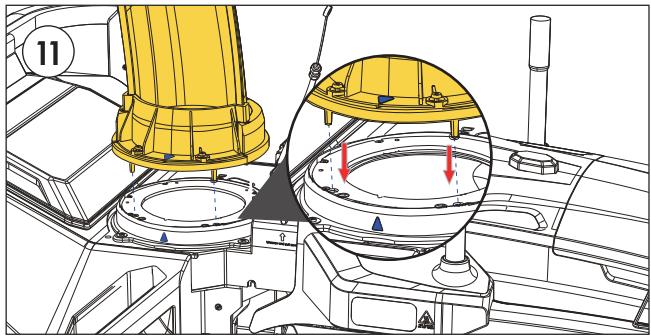

**Align** two engraved triangle signs.  
**Place** the discharge chute on the module.

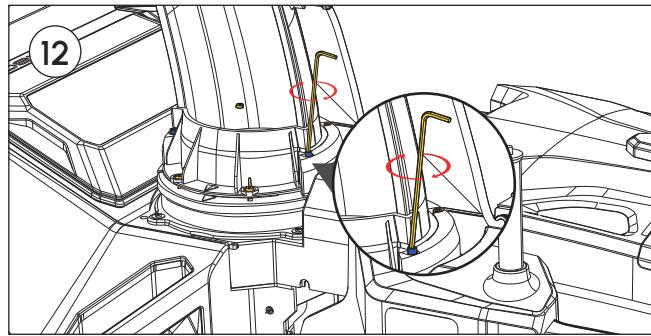

**Tighten** the 2 bolts on the edge first with Allen Key #2  
Then tighten the remaining 4 bolts.