



1.1 Set-up for Conducted RF test at Antenna Port

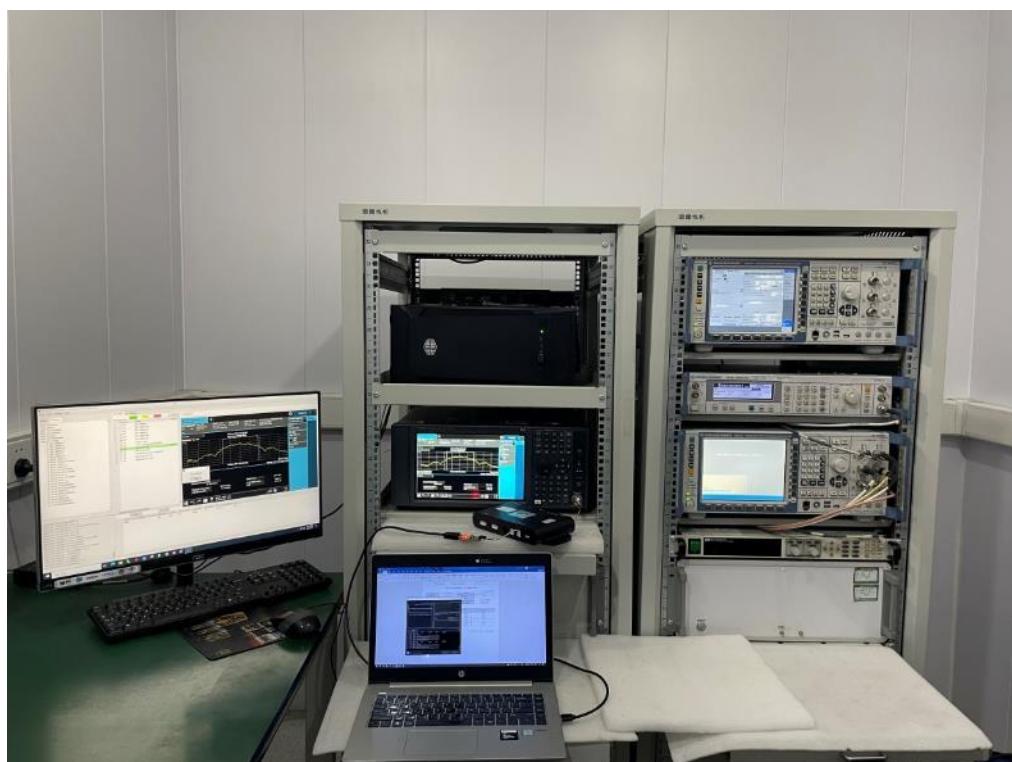

1.2 Set-up for Conducted Emissions on AC Mains

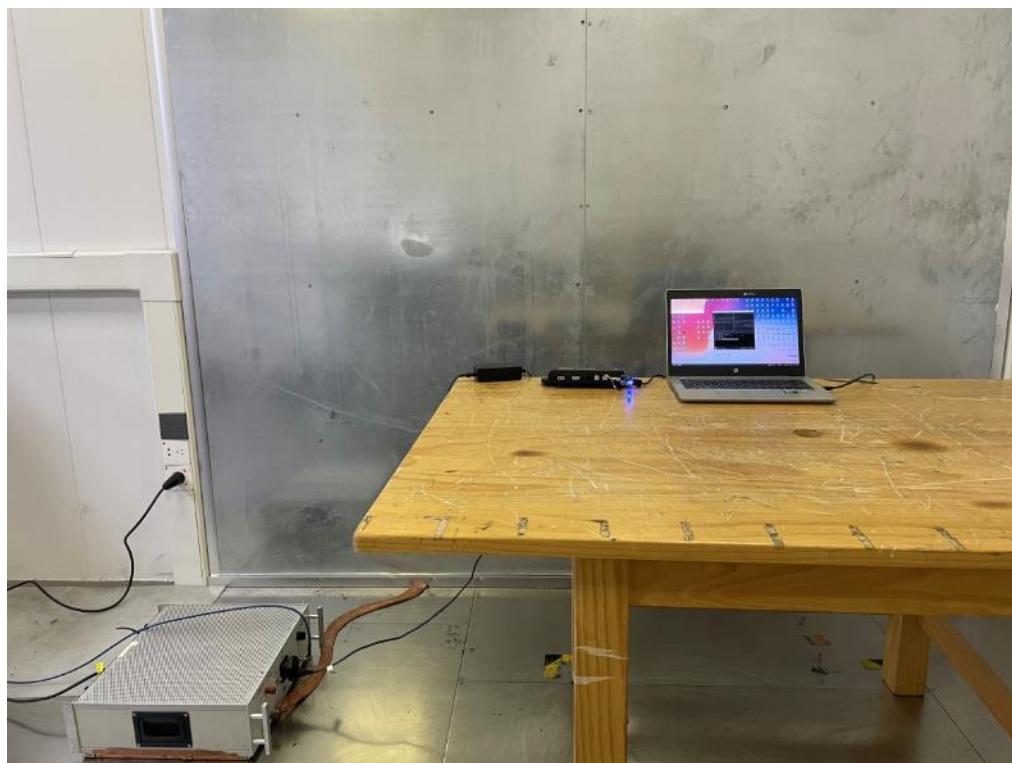


BLE



SRD

1.3 Set-up for Spurious Emissions below 1GHz

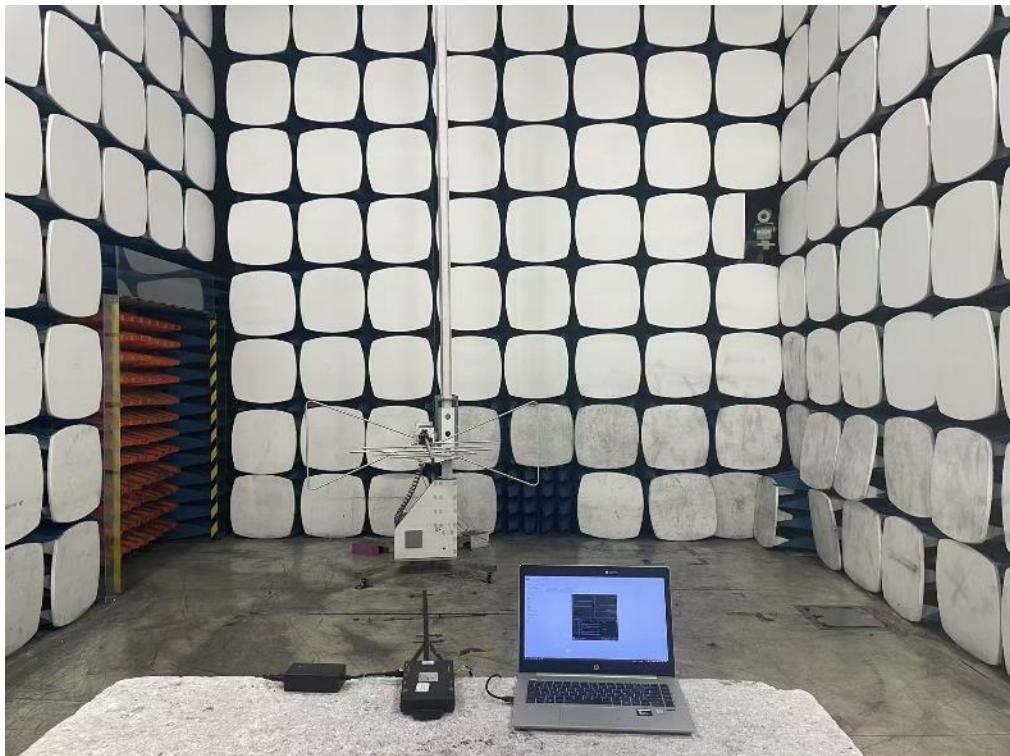


BLE



SRD

1.4 Set-up for Spurious Emissions above 1GHz

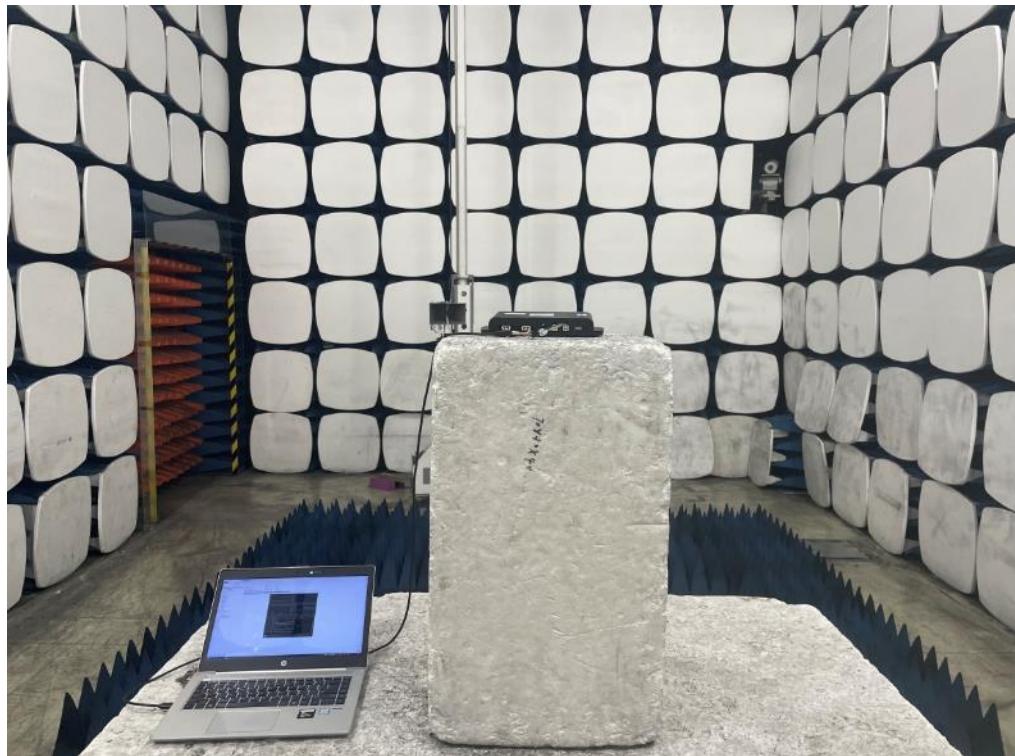

BLE



SRD