



ASSEMBLY INSTRUCTIONS



STEP 1: Carefully open the carton and remove all boxes then lay out the top and the bottom of the base as one unit as shown. Cut all zip ties and remove.



STEP 2: Attach the center tube with the two center legs and tighten the four center leg bolts with the allen wrench.



STEP 3: Attach each motor by sliding the pins through motor slot attached to the frame. The head motor will have a longer shaft than the foot motor.



STEP 4: The label on the motor should be facing up when you are attaching the motor.



STEP 5: Before plugging each cable into the control box, remove the plug lock that is located between the ports for the cables next to the color stickers on the control box. Use your forefinger and thumb to press on the sides of each plug lock to pull off. Plug the cables in the appropriate color ports and replace the plug lock. This lock will hold the cables in tightly.




STEP 6: For the remaining legs, choose the leg height that works for you. To attach the corner bed legs, rotate the end bolts into the holes in the corner brackets. Rotate the center legs into the hole in the pre-attached leg.



STEP 7: Put remaining legs on the base and tighten. When ready to flip the base over, make sure you do not use the legs as leverage as they may damage the legs and/or base.



STEP 8: Insert the mattress retainer bar into the grommets as shown.

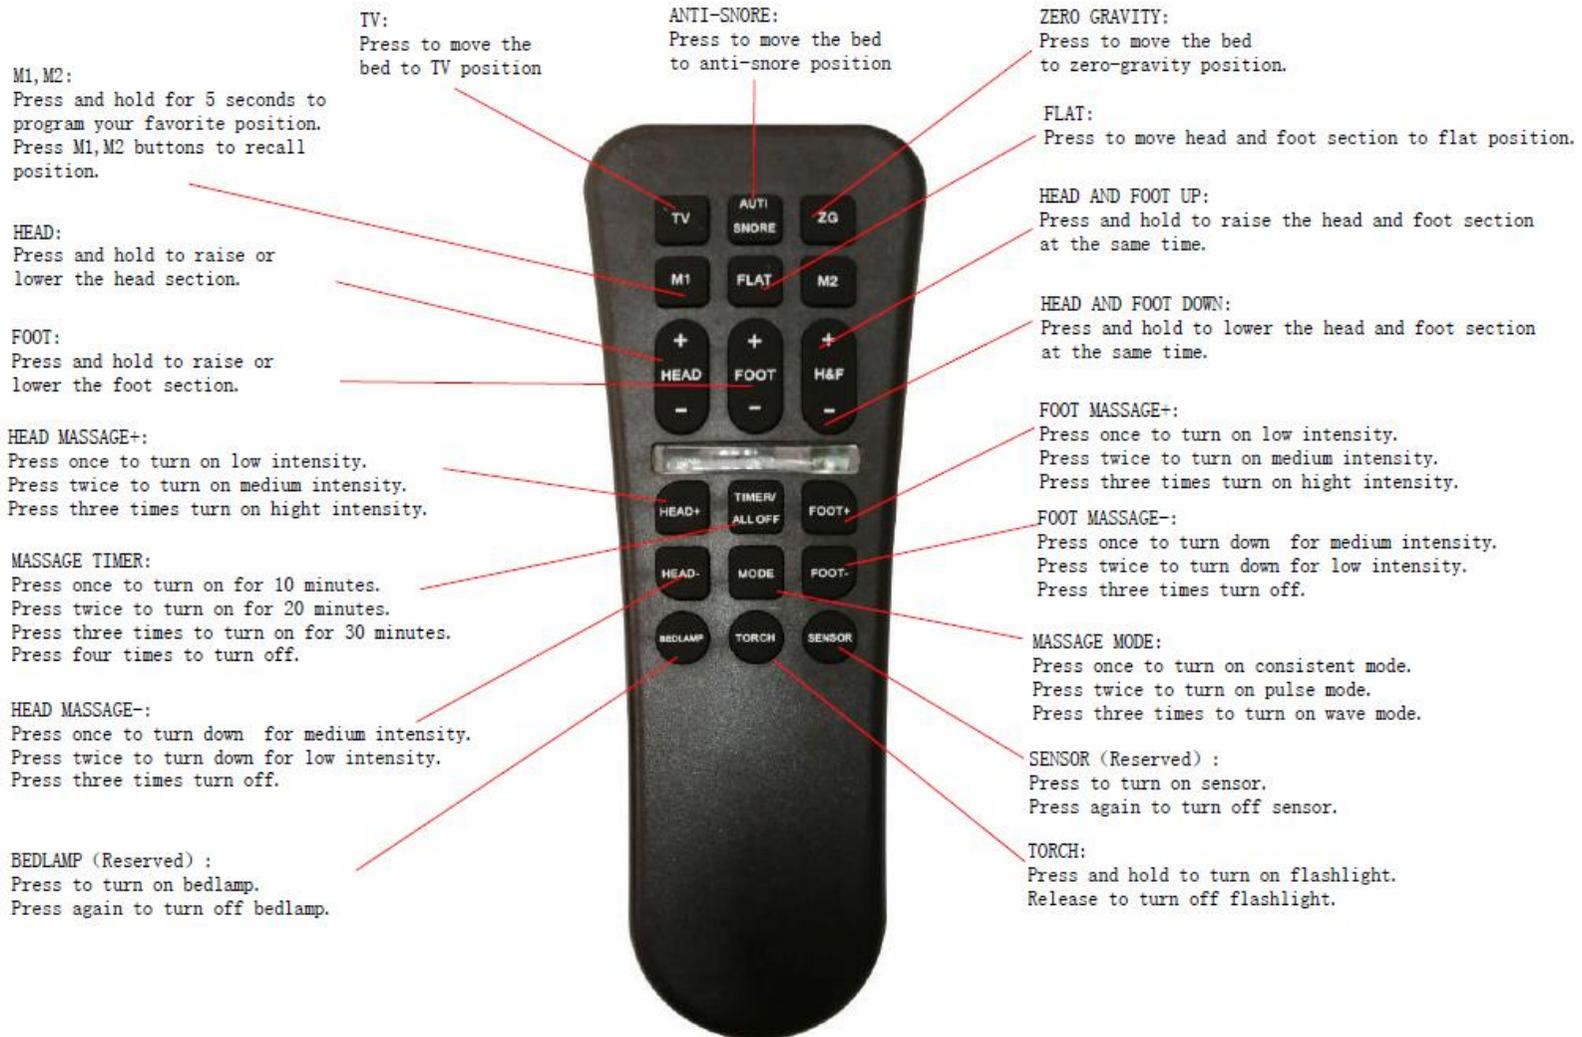

SYNCING REMOTE:

Step 1: On the remote press and hold the "HEAD-" button and the "H&F+" button at the same time for 10 seconds.

Step 2: Push the button on the side of the control box.

Step 3: Once you hear a beep that will indicate that the remote is synced.

