



1.1 Set-up for Conducted Emissions



1.2 Set-up for Conducted RF test at Antenna Port

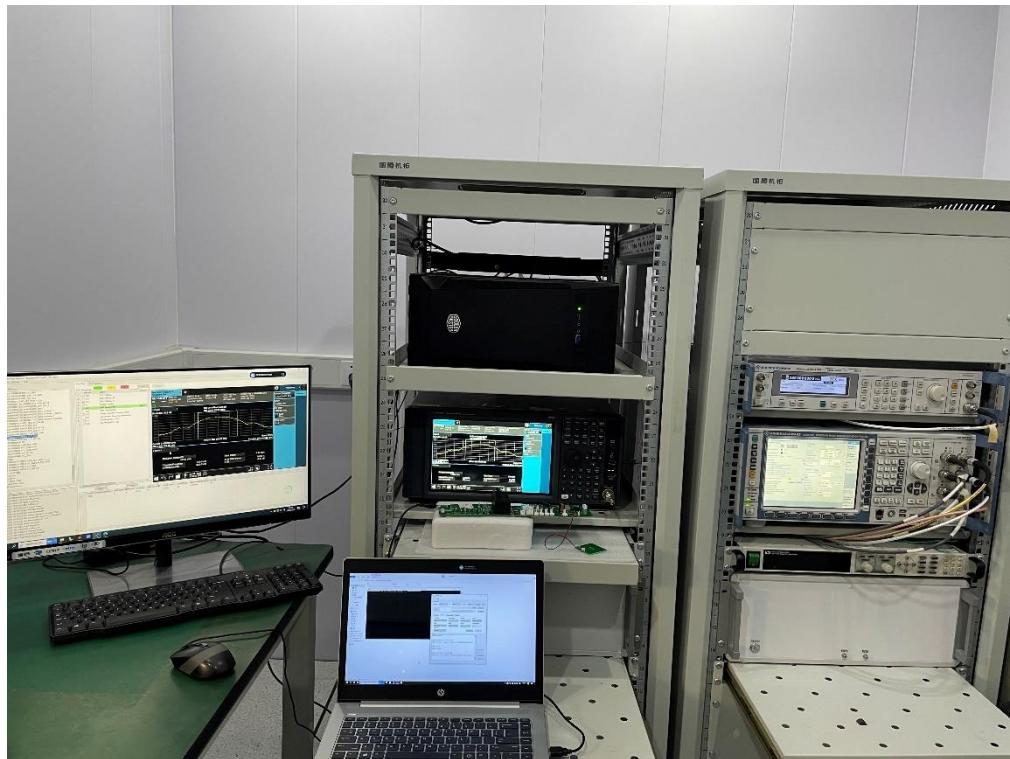


1.3 Set-up for Spurious Emissions below 1GHz

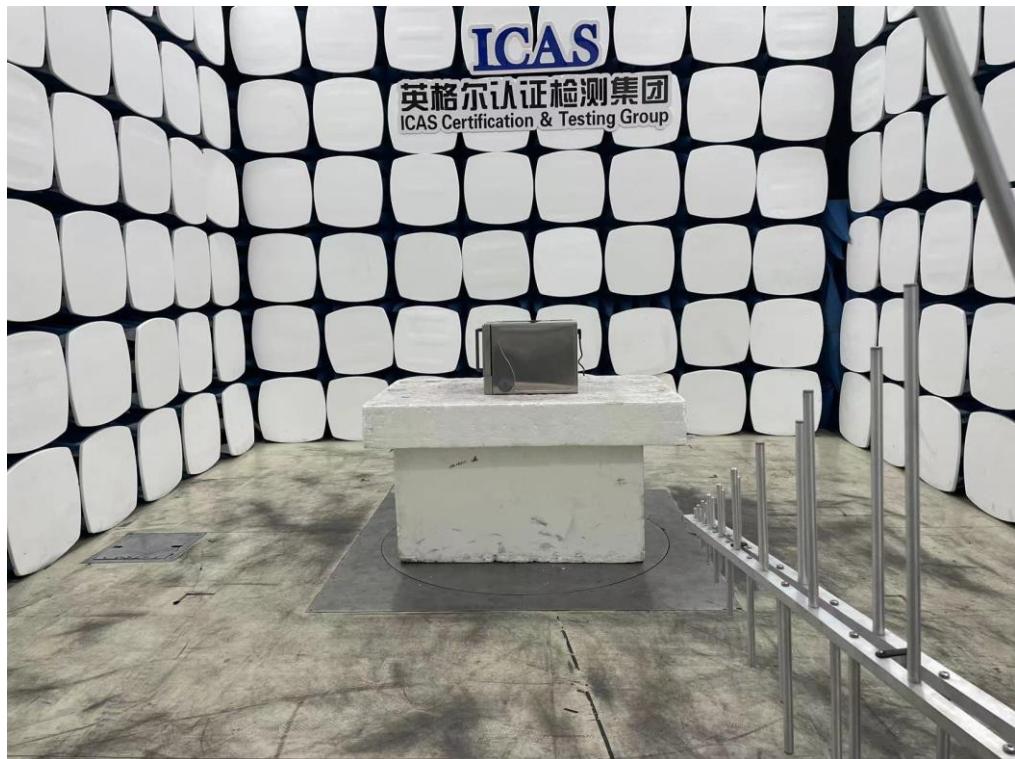

Below 1 GHz

1.4 Set-up for Spurious Emissions above 1GHz

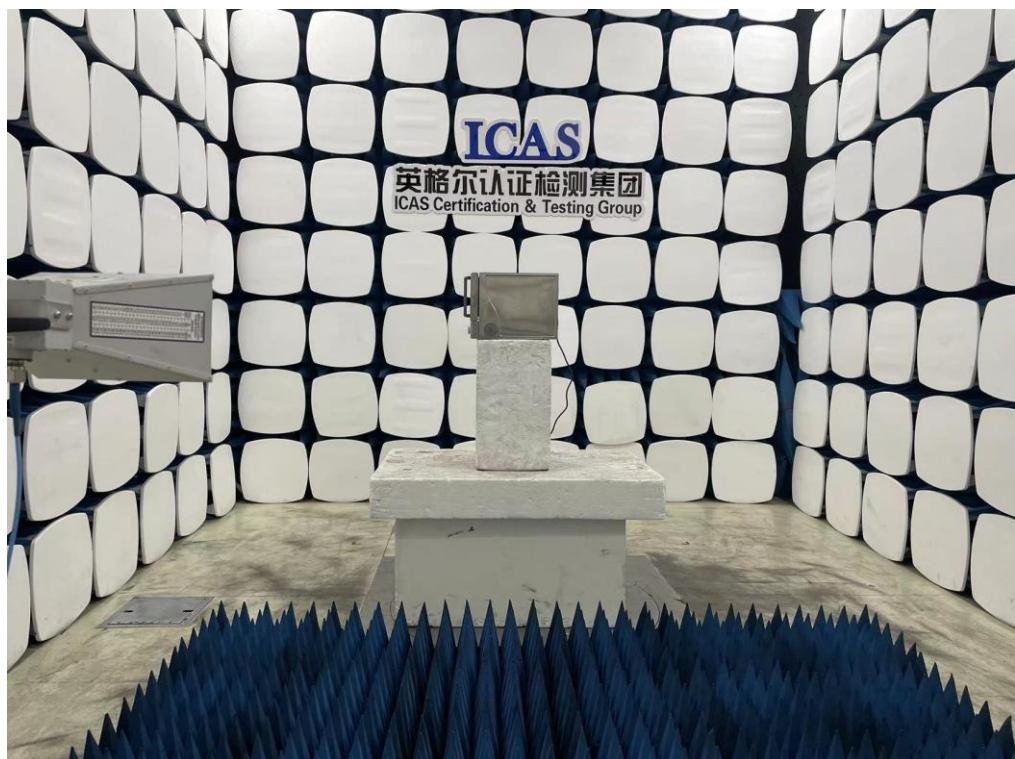

Above 1GHz

1.5 Set-up for NFC below 30MHz



Below 30MHz

1.6 Set-up for NFC above 30MHz



Above 30MHz