


TEST SETUP

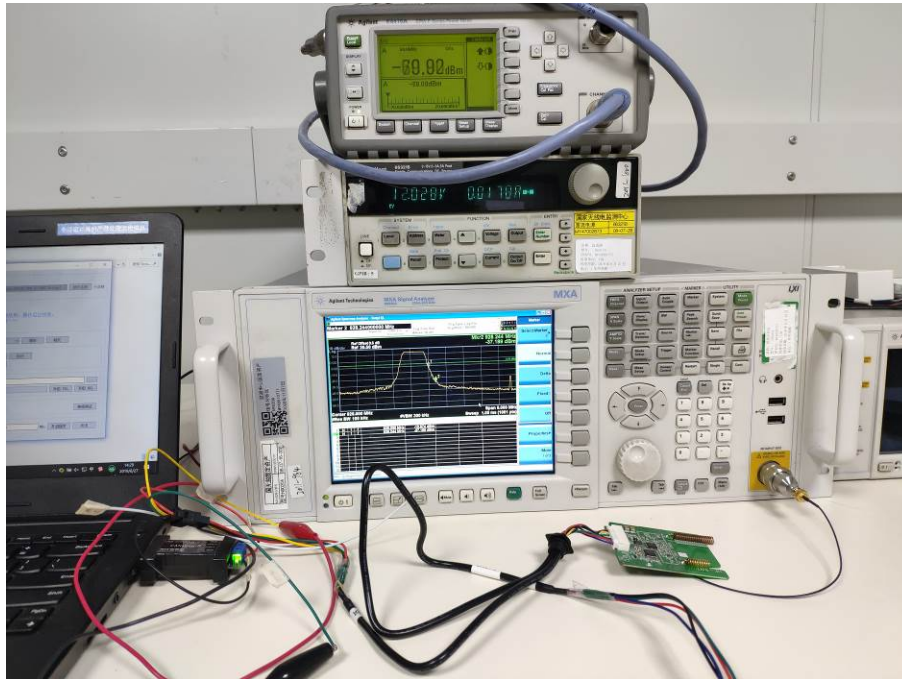


RF Conducted Test setup (LORA)



RF Conducted Test setup (WCDMA/LTE)



Spurious Radiated Emissions Test setup (30-1000MHz)

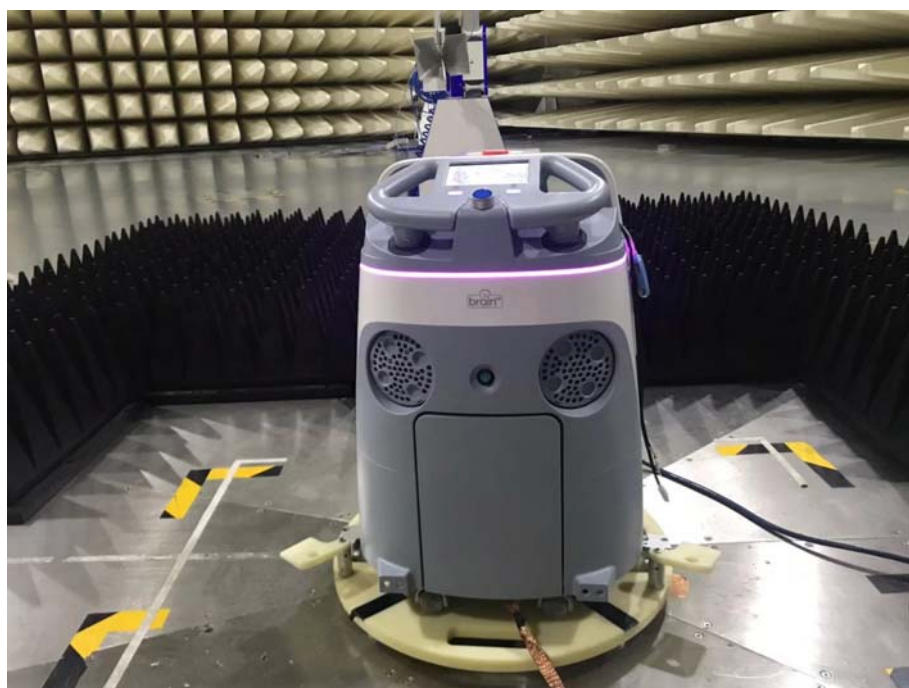

Spurious Radiated Emissions Test setup (above 1000MHz)