


# wGravity

Smart lock

## Installation Manual

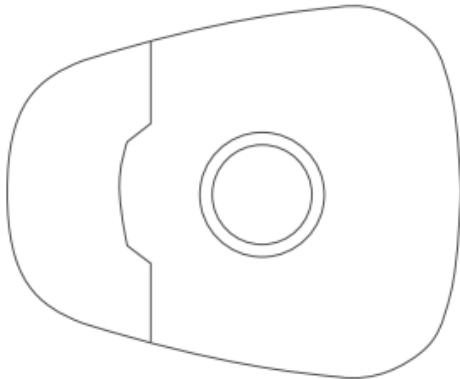

wGravity  
WATCHMAN DOOR



Bluetooth®

MADE IN  
SPAIN

## BOX CONTENTS

- ✓ Lock
- ✓ Receiver
- ✓ Installation pieces
- ✓ 4 AA batteries 1.5 volt
- ✓ Screws
- ✓ Instructions


## DOWNLOAD YOUR APP



After downloading the App, sign up as a user.  
Read product QR that is on the back of the wGravity  
or on the battery cover.

## INSTALLATION TIPS

Make sure that the door frame is at least 7 centimeters wide and choose the height you wish to install the **wGravity**

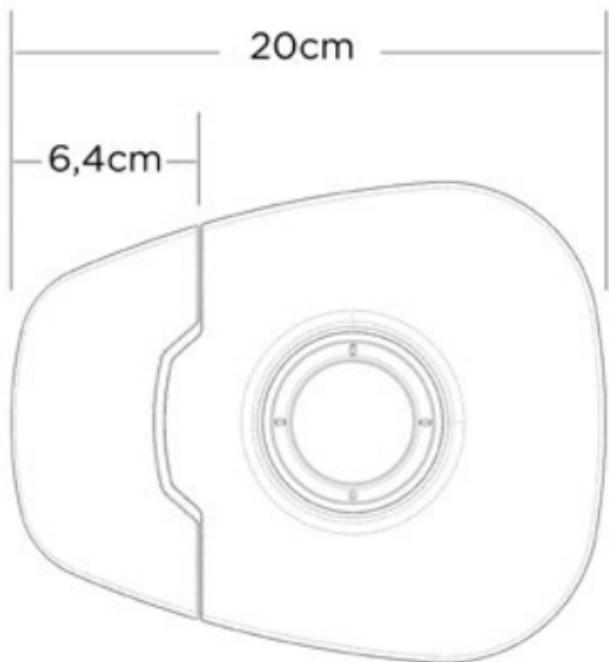

## Tools required:


PZ2 star screwdriver




We recommend the use of an electric screwdriver.

## INSTALLATION INSTRUCTIONS


NOTE: To change the batteries of the **wGravity** more conveniently, it is recommended to remove the lid of the closure to better access the battery housing.

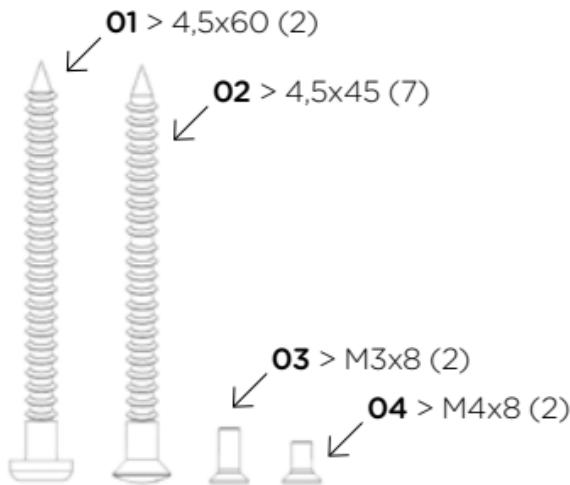


**1** Check the difference in height on the outside of the flap and the door to correctly use the given spacers.

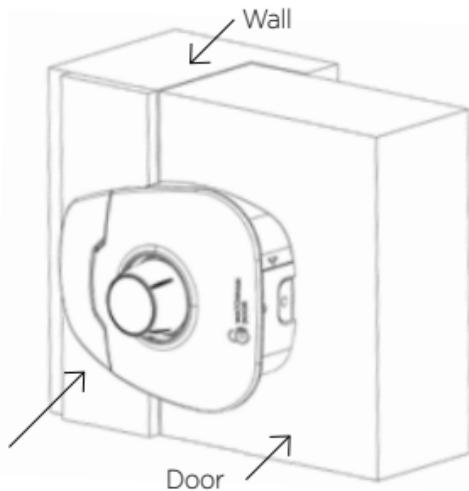


**2** Place the base of the wGravity at the desired height and flush with the edge of the door.

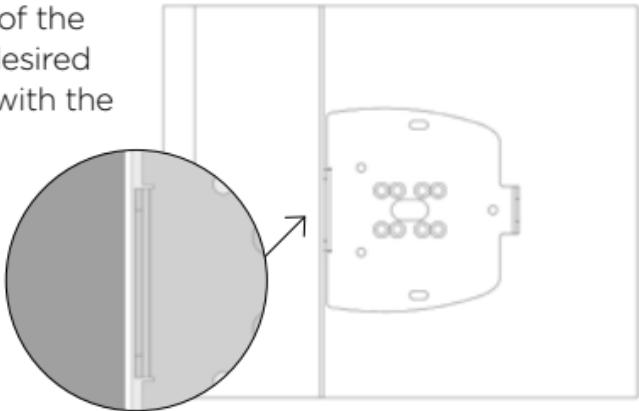


**3** Anchor the base with the wGravity with the upper and lower straight slot. *Do not squeeze too much to allow movement of the base.*

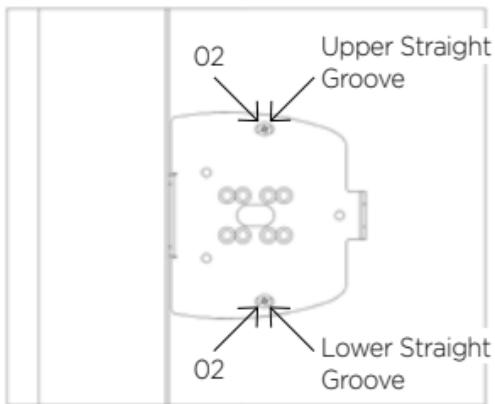


**4** Using the straight grooves finish adjusting the base to the door.

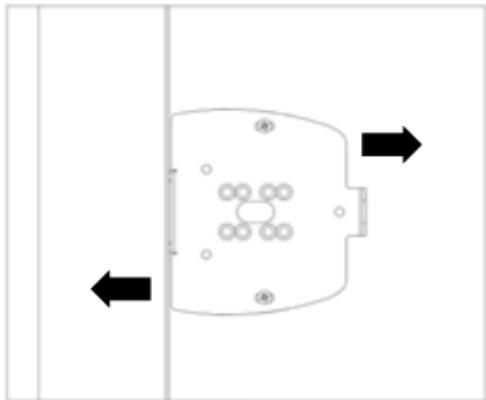


**5** Tighten the five screws of the base.

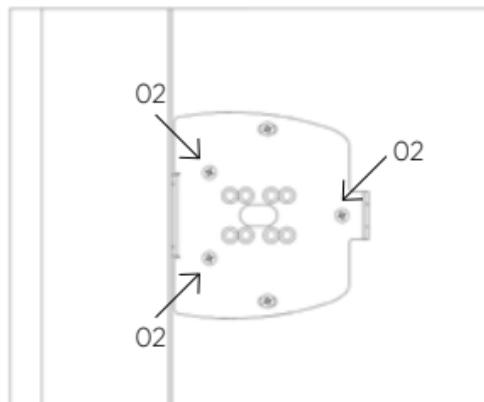


**6** Place positioner in the base.

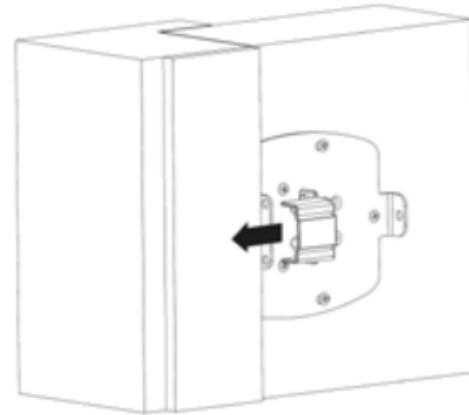


**7** Fit the Receiver on top of the Positioner.

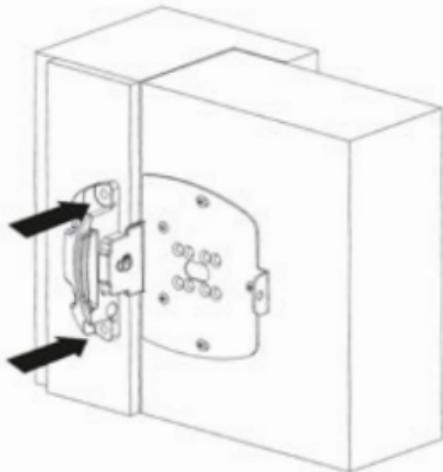


**8** Fix the receiver, together with the necessary spacers.

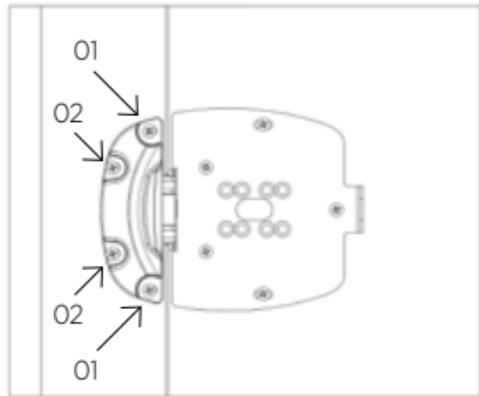


**9** Once the receiver is installed, you can remove the positioner from the base.

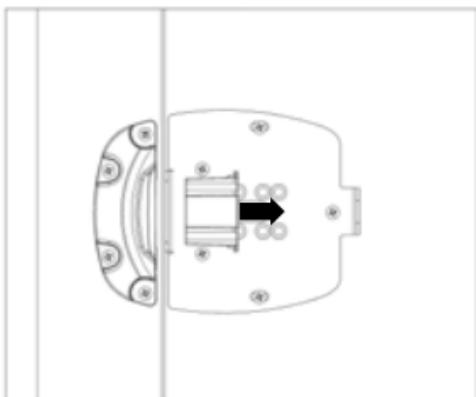

**10** Place the cover trim with its two corresponding screws.

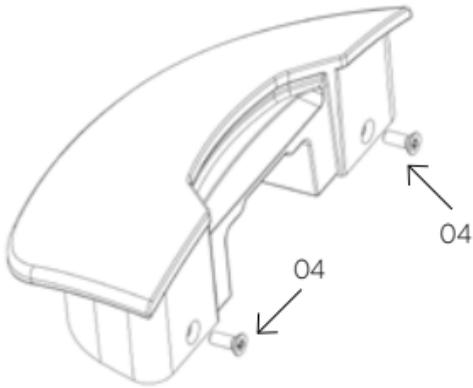

**11** Fit the lock on the base placed on the door.

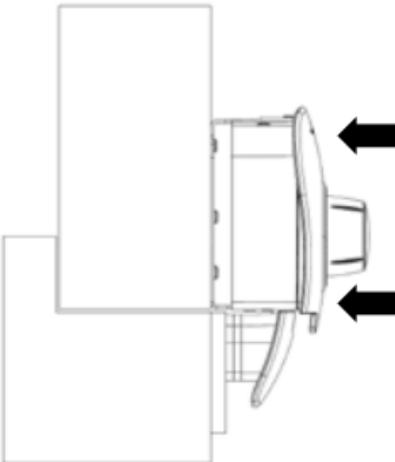

**12** Screw the lock to the base.

