

oit'sme

Smart Doorman mini

Installation & Use Guide

It takes about 20 minutes to install the SL-1. Follow the instructions to install the device and then initialize the device.

To confirm if your lock is suitable for installing SL-1, please check the type of SL-1 adaptation on our website: <http://www.itsme.com/install.html>

Or contact our customer service directly at 021-5466 8200 for assistance.



1


Install

2

Initialize

3

Use Guide

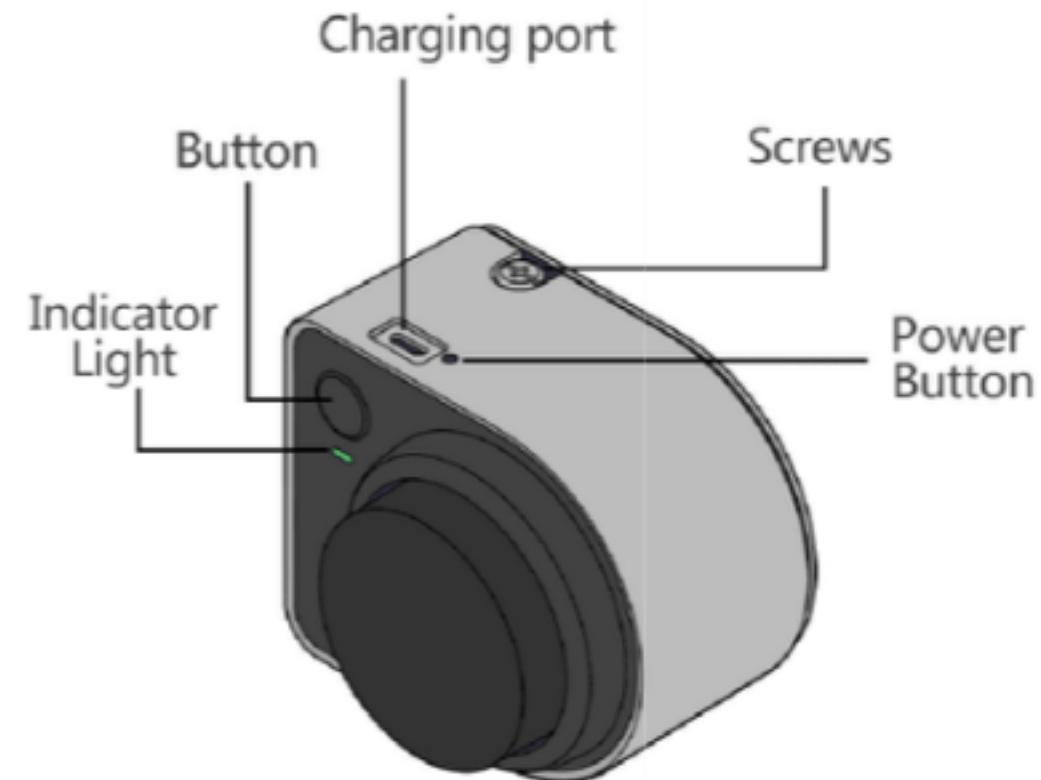

1

Preparation before install



2

Push the power button with the eject pin or paper clip, when hearing the sound “beep”, it means the SL-1 is on.




3

Loosen the screw on the bottom of the SL-1, then take out the faceplate




4

Loosen the screws on the inside part of your original lock

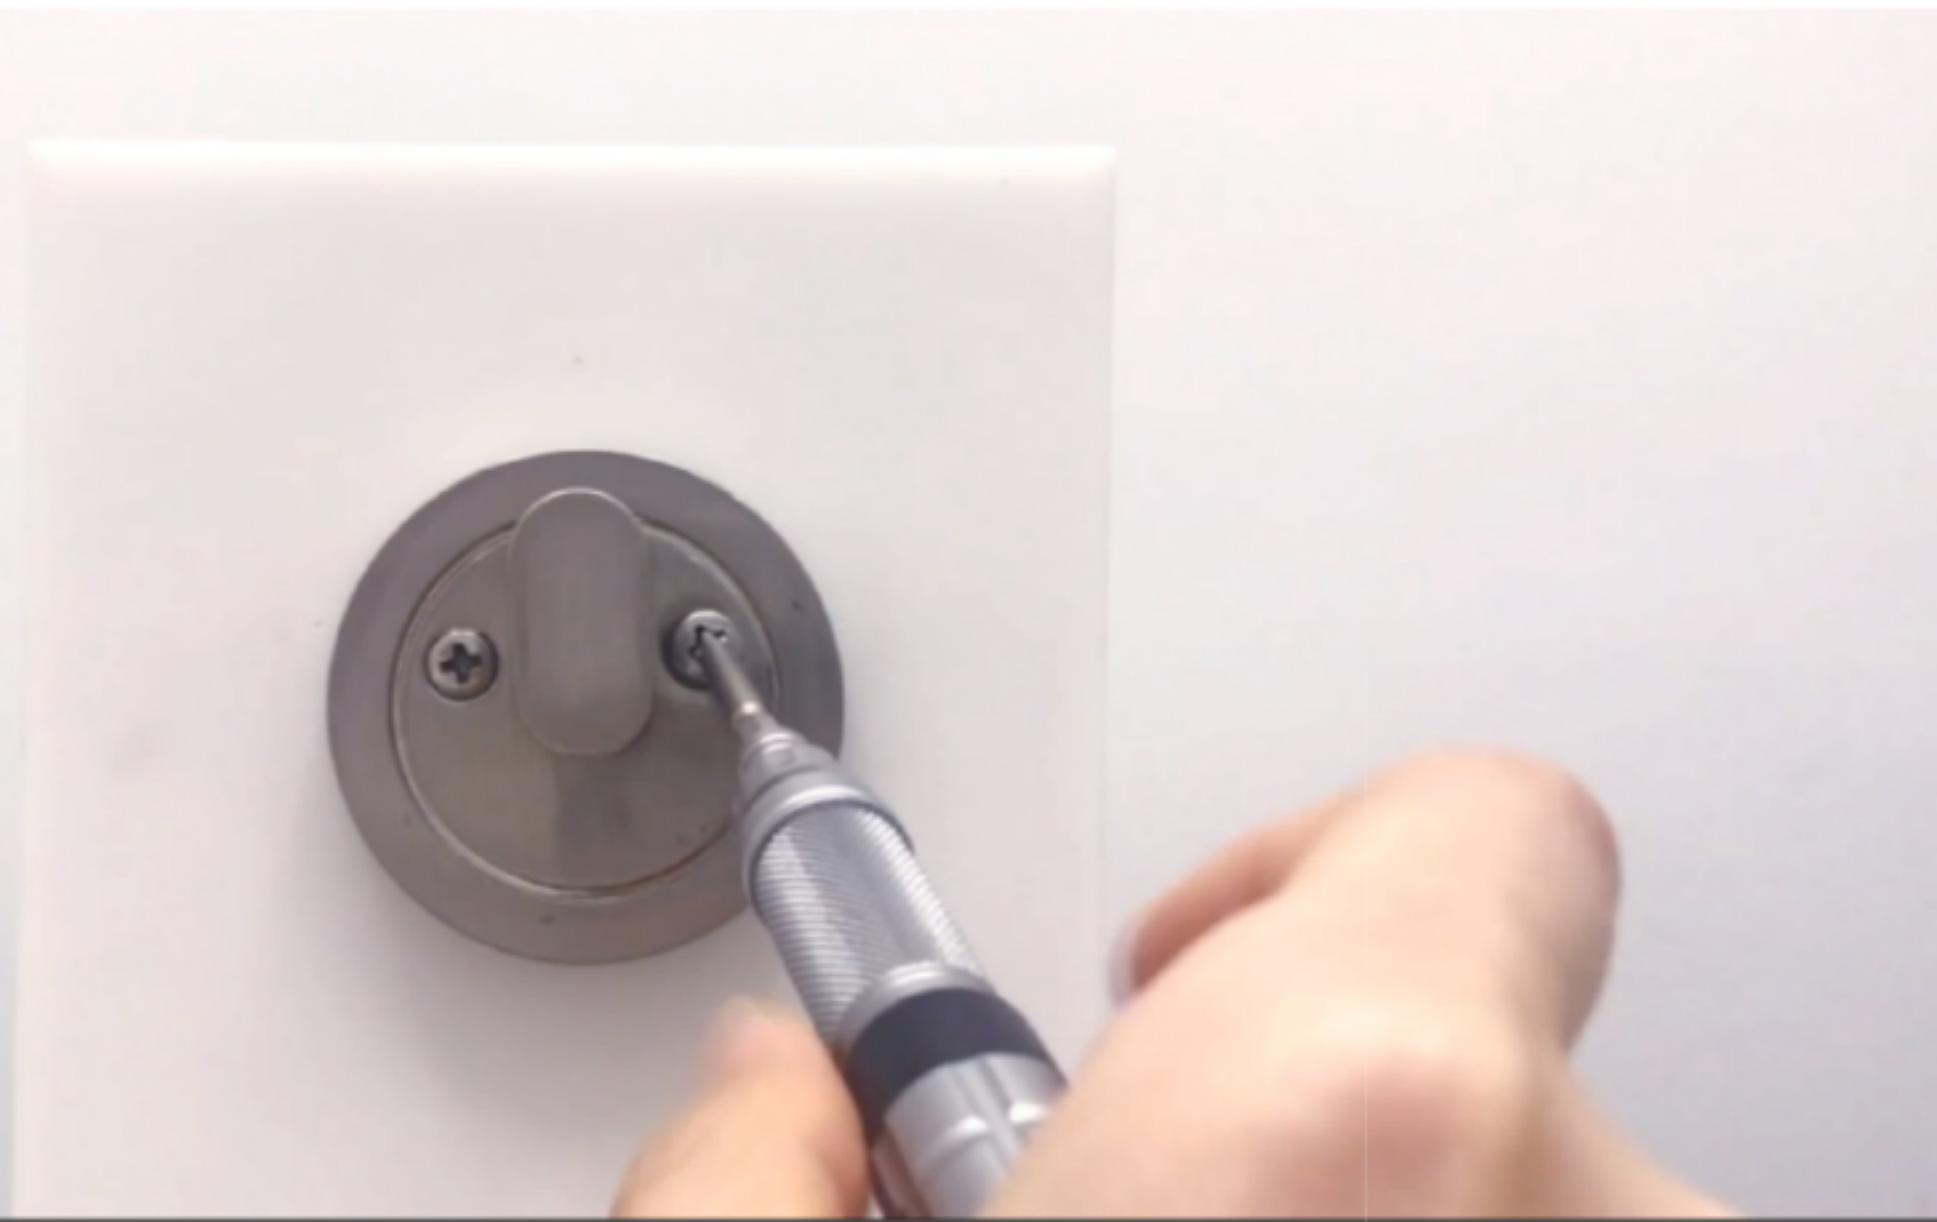

5

Pick out the screw washer from the parts and go ahead put the screws inside the washers, then you can put the faceplate inside the lock we just disassembled. And go head tighten the screws back.

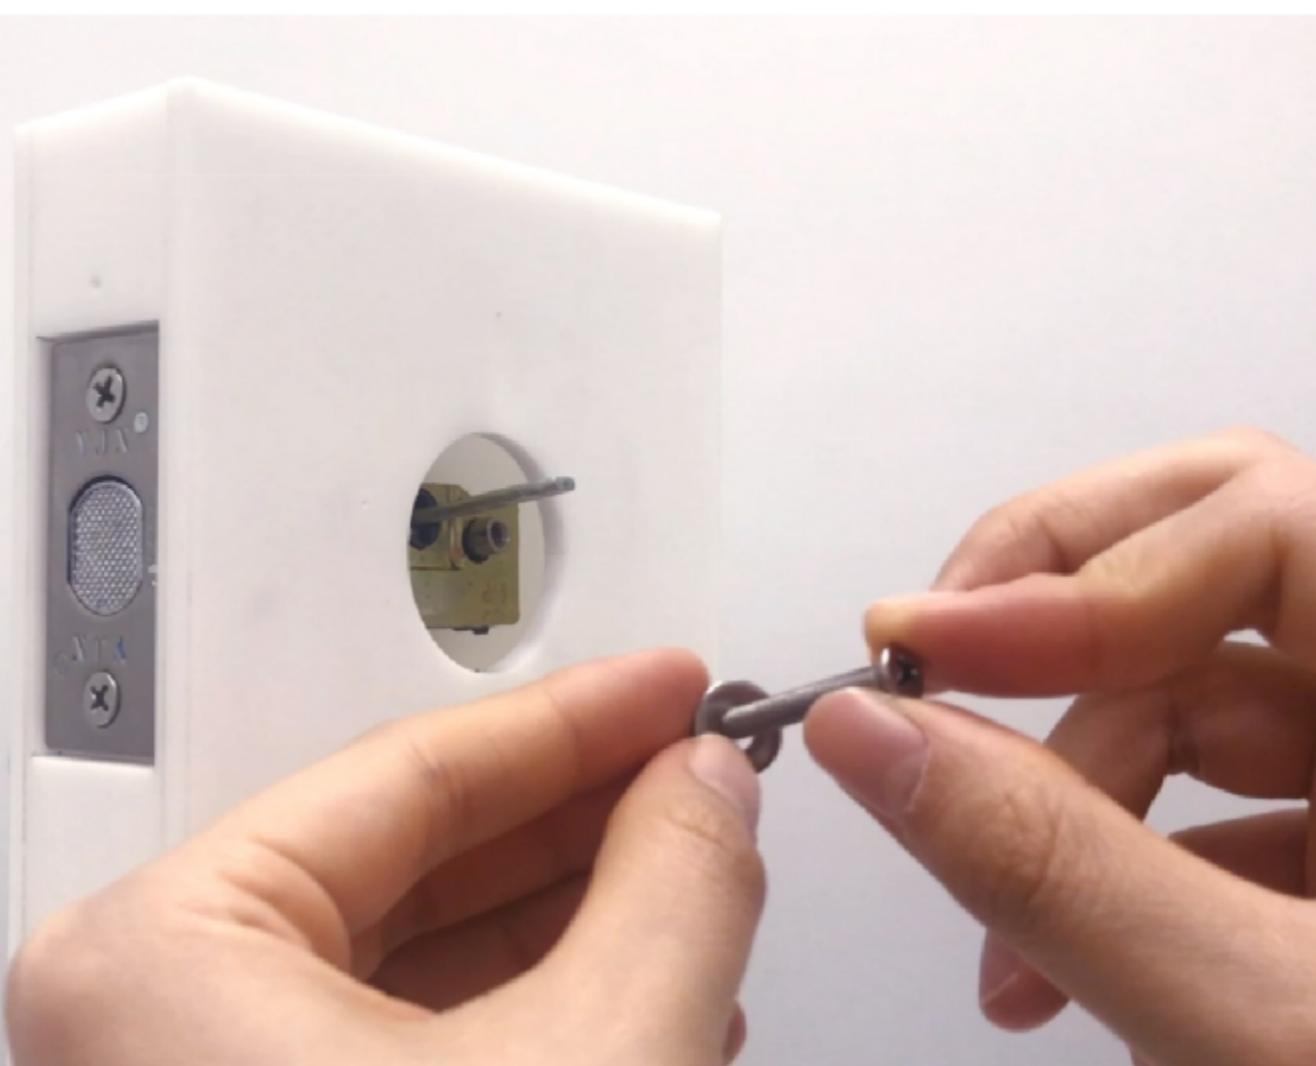

6

Pick out the key box and adapters. Go ahead and loosen the two screws on the bottom of the key box. The parts in the key box will not be used in this installation

