



ATTACH THE FIN


- 28** Take 4 Strawbees and connect as illustrated below. Make sure the Strawbees are not loose.

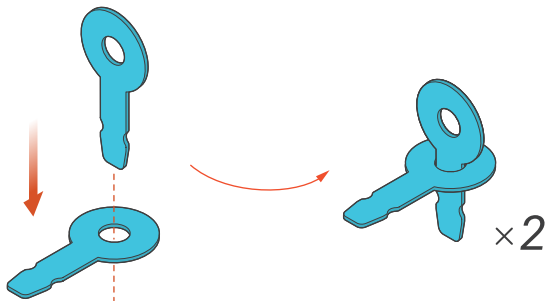


- 29** Attach Strawbees to the fin as below.

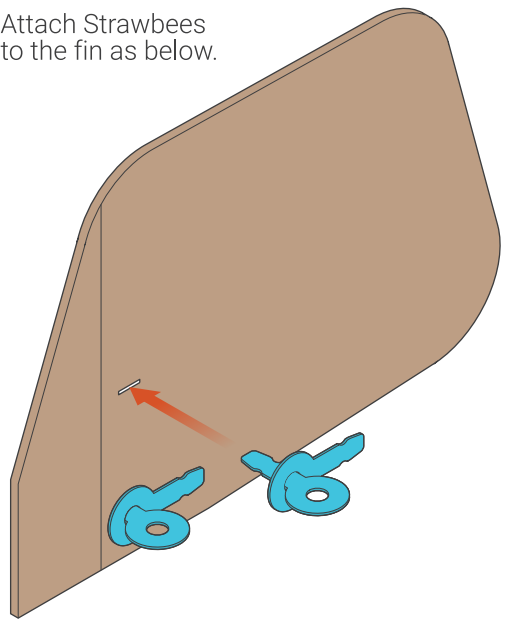


- 30** Collect 2 more Strawbees and lock the them to the legs sticking on the other side. Make sure **nothing is loose.**

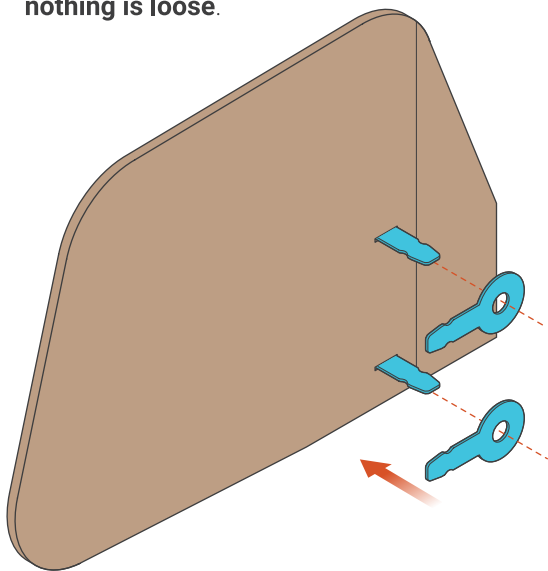

- 31** Following the image below, cut and connect construction pipes on the Strawbees.

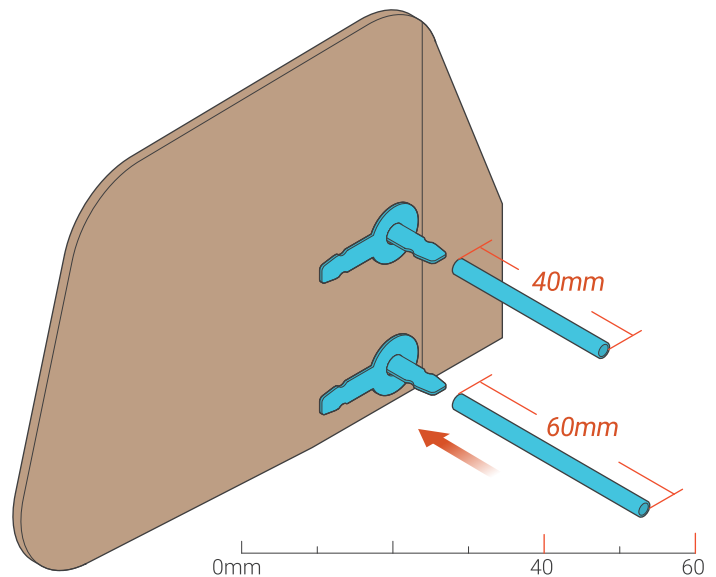


- 32** Take 4 Strawbees and connect like below.

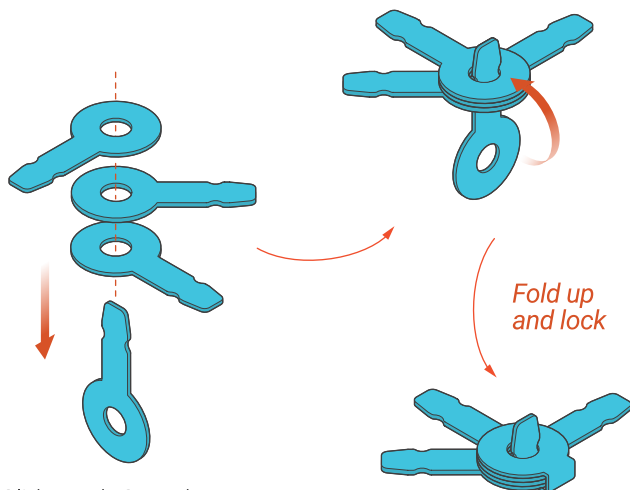


Slide each Strawbee
one at a time!


- 33** Connect the Strawbees to the pipes.

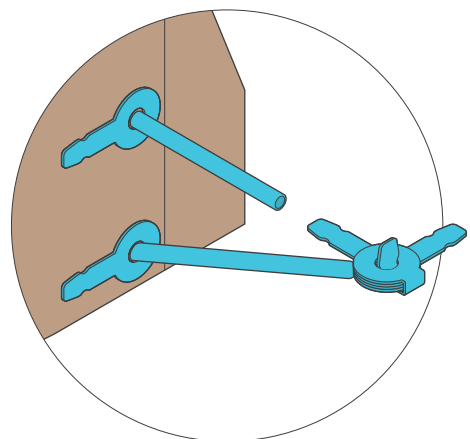

34 Take 3 Strawbees and connect as below.

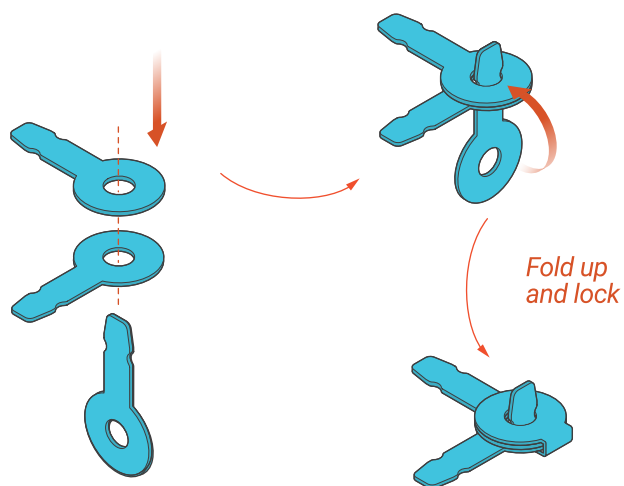

35 Cut and connect the pipes to the strawbees.

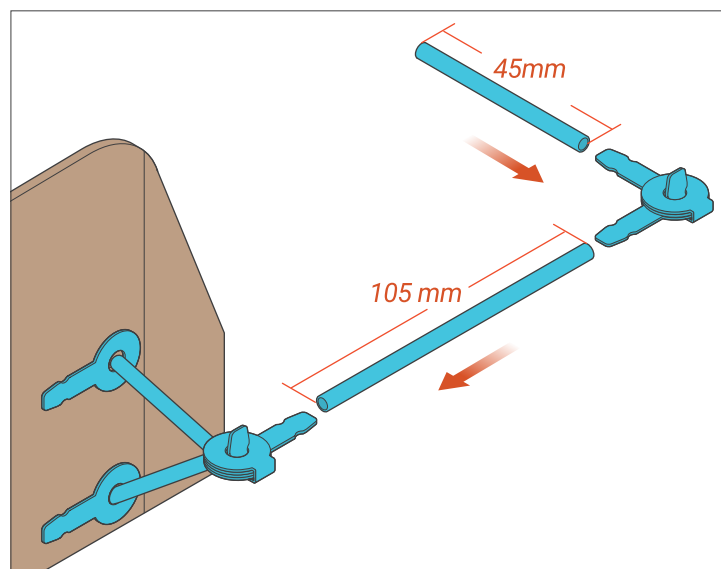


0mm


45

105

36 Attach the fin into the back of the cover and use Strawbees to secure it in place.

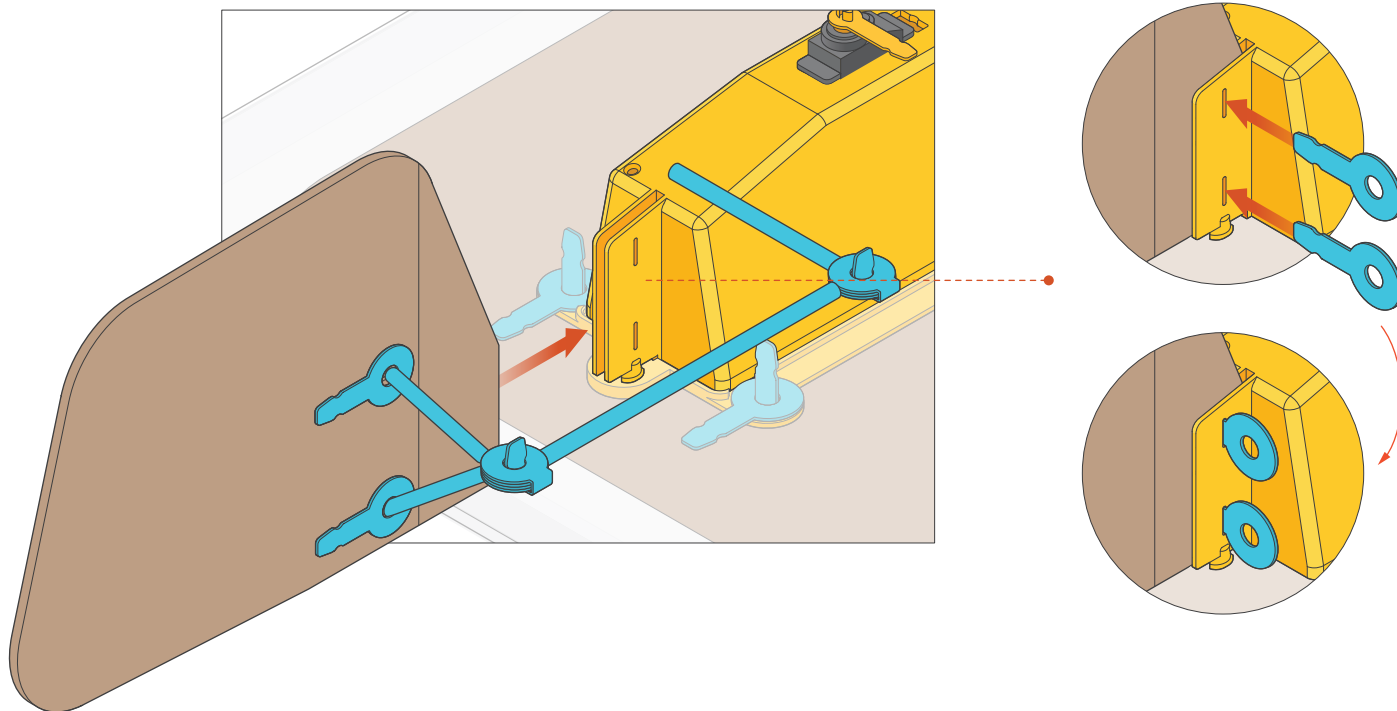

37 Connect the pipe to the servo arm.

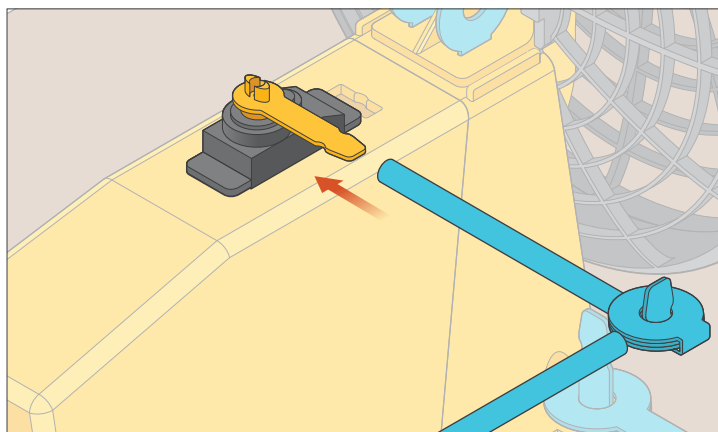

38 Connect the cables with their right color.

