


400mm

150mm


750mm



HUGOBLOX
FCC ID: 2AVSH-HU0304

HU03
Installation Guide

Installation Guide

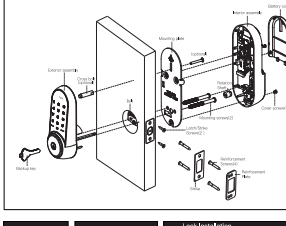

Additional Parts

Optional Kit: 1. 2x 3mm Screws, 2. 2x 3mm Washers, 3. 2x 3mm Spacers, 4. 2x 3mm Nuts, 5. 2x 3mm Bolts


Tool needed

1. Phillips screwdriver, 2. Allen key, 3. Hex key, 4. Torx screwdriver, 5. Flathead screwdriver


Lock Installation

1. Prepare the door, 2. Prepare the lock body, 3. Prepare the handle, 4. Prepare the mounting plate, 5. Prepare the lock body

Exterior assembly

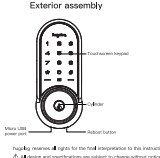


Interior assembly

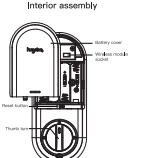


Preparing for Installation


A. Measure the dimension of the hole shown. If the measurement is 1-1/2" (38mm), remove the fire cap.

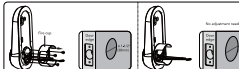


B. Change faceplate if necessary.



C. Adjust the deadbolt.


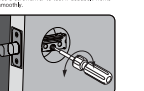


D. Adjust the tailpiece according to your door's thickness.




400mm


Installation


3. Make sure the lock is extended and locked position.




4. Fold the exterior assembly to fit the door, pull the key tailpiece and slide through the door hole.




5. Position the inside mounting plate by first routing the cable and connector through the mounting plate's cable hole.




6. Secure both assembly using 6/32 (1.65mm) and 1/4 (6.35mm) screws. Make sure that exterior assembly is vertical. Tighten securely with a #2 Phillips screwdriver.




7. Place rotation shaft in the hole on the inside assembly.

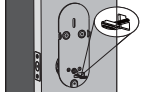


8. Attach cable assembly to the interior assembly. PCB by using zip ties to the top of cable connector to lock the PCB connector. Please connector it firmly using thumb and forefinger, completely connected.

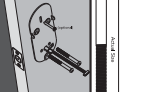


9. Insert interior assembly on inside mounting plate.




10. Secure using screw through the interior assembly into the mounting plate.




11. Insert the lock to the orientation of your door.



12. Insert battery cover.




13. Insert reinforcement plate and strike into door jamb.



Download APP


Bluetooth network configuration must be restored to factory settings first, and network configuration completed within 5 minutes after factory reset.



正面


150mm

750mm



HUGOBLOX
HU03
Guía de Instalación

Guía de Instalación

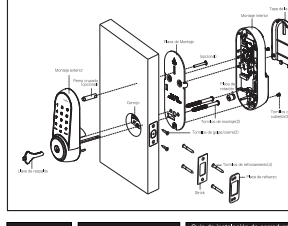

Partes adicionales

Opcional Kit: 1. 2x 3mm Tornillos, 2. 2x 3mm Arandelas, 3. 2x 3mm Espacers, 4. 2x 3mm Tuercas, 5. 2x 3mm Bujes


Herramientas necesarias

1. Destornillador Phillips, 2. Llave Allen, 3. Llave hexagonal, 4. Destornillador Torx, 5. Destornillador plano


Guía de instalación de versiones

1. Preparación de la puerta, 2. Preparación del cuerpo, 3. Preparación del mango, 4. Preparación de la placa de montaje, 5. Preparación del cuerpo

Montaje exterior

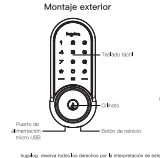


Montaje interior

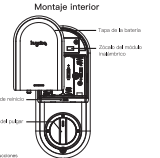


Preparando la Instalación


A. Mida la dimensión del orificio que se muestra. Si la medida es de 1-1/2" (38 mm), retire la tapa de fuego.




B. Cambie la placa frontal, si es necesario.



C. Ajuste el cerrojo.





D. Ajuste el cordón de acuerdo con el grosor de su puerta.




400mm


Installation


3. Asegure de que el cerrojo está extendido (extended) posición.




4. Intente el conjunto exterior al que de la puerta, pule la parte de la llave y el cable a través del agujero de la puerta.




5. Coloque primero la placa de montaje interior dentro del cable y el conector a través del agujero en la placa de la puerta.




6. Segure ambos conjuntos usando 6/32 (1.65mm) y 1/4 (6.35mm) tornillos. Asegure de que el exterior es vertical. Apriete bien con un destornillador Phillips #2.




7. Coloque el eje de rotación en el orificio en el interior montaje.




8. Conecte el conjunto de cables al conjunto interior. PCB. Asegure tornillos en la parte superior del conector del cable. No tire de la placa de la PCB. Presione el conector hacia adentro usando los dedos. No tire de la placa de la PCB.




9. Inserte el interior montaje en la placa de montaje.




10. Asegure con un tornillo a través del interior montaje en la placa de montaje.




11. Presione la llave de rotación a la orientación de su puerta.



12. Inserte la tapa de la batería.




13. Inserte la placa de refuerzo y golpe en el marco de la puerta.



Descargar APP

Debe de restaurar primero la configuración de la red Bluetooth a configuración de fábrica, y completar la configuración dentro de 5 minutos de haber restaurado a configuración de fábrica.



背面

材质：80克双胶纸
折法：风琴折
尺寸：折后尺寸：200X150mm

The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction Federal Communication Commission (FCC) Radiation Exposure Statement Power is so low that no RF exposure calculation is needed.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user ' s authority to operate the equipment.