


Hai Shower Head Adaptor

Installation instructions

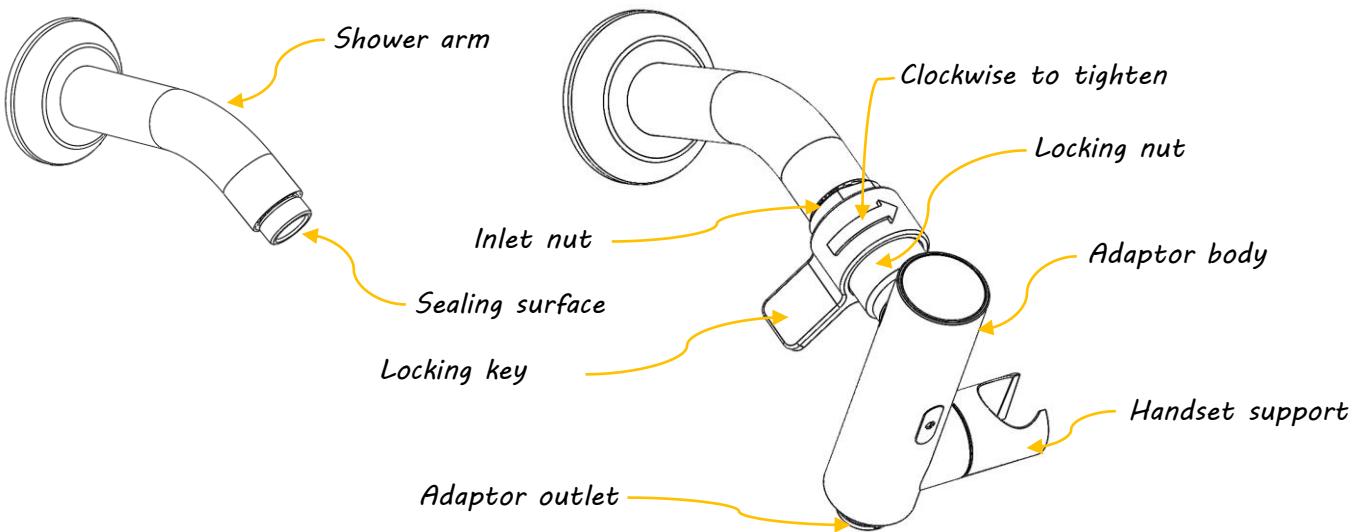


Step 1. Remove Original Shower Head

- 1a. Ensure the shower is off and remove the showerhead by unwinding the head from the shower arm. Take care not to twist the shower arm – you may need pliers to hold this steady.
- 1b. Remove any old thread tape, and check that the sealing surface is clean and free of any limescale residue. If the sealing surface of the shower arm is in poor condition, it may not seal properly.

Step 2. Attach the Hai Adaptor to the wall outlet

The Hai Adaptor Locking Key has three distinct positions:

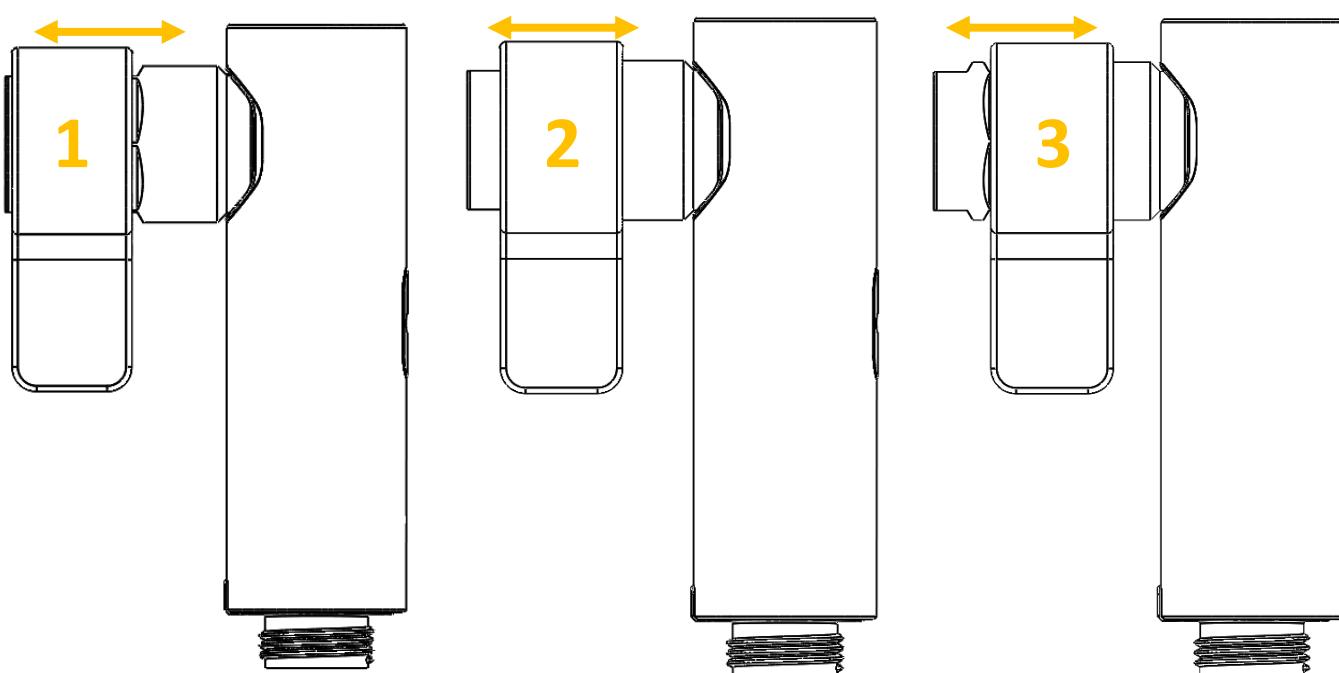

- 2a. To screw the Hai Adaptor to the shower arm, the Locking Key needs to be in this position 1.
- 2b. Hold the Adaptor up to the Shower Arm and engage the thread.
- 2c. While the Locking Key is in position 1, rotate the Inlet Nut **clockwise** until the nut is fastened tightly to the wall arm. The Hai Adaptor is now attached to the shower arm.
- 2d. The Hai Adaptor body is still able to swivel. To lock the rest of the unit, move the Locking Key to position 3, hold the adaptor body vertically, and lightly tighten again by rotating **clockwise**, as with step 2c. **No not overtighten!**
- 2e. Now move the Locking Key into the resting position 2 and leave in a tidy position.
- 2f. Fit the hose to the Adaptor Outlet, ensuring that the small connecting cone attaches to the adaptor, and connect the large connecting cone to the handset/shower head.
- 2g. Check for any leaks. If there is a leak at the Shower Arm/Inlet Nut, you will need to start over and apply thread tape to the Shower Arm thread. To remove the Hai Adaptor, follow steps 2a-2f in reverse.

Your Hai Shower Head Adaptor is now installed.