


## 1.1 Set-up for Conducted Emissions on AC Mains



## 1.2 Set-up for Conducted RF test at Antenna Port

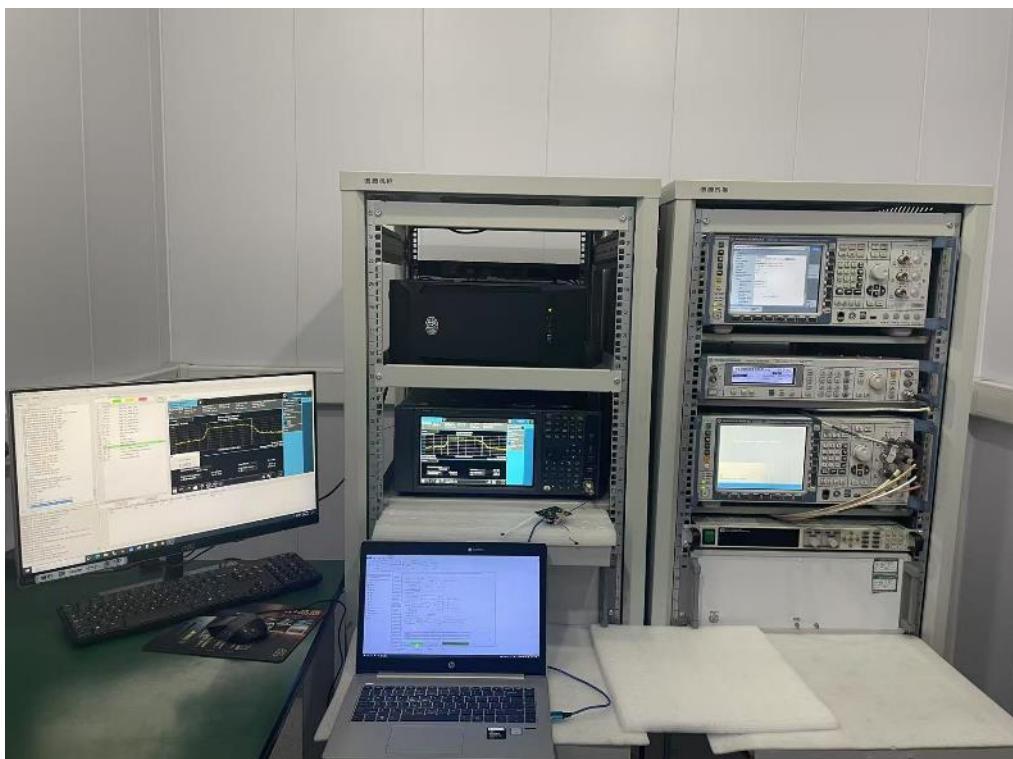

## 1.3 Set-up for Spurious Emissions below 1GHz



## 1.4 Set-up for Spurious Emissions above 1GHz

