



3. Photographs of setup



Left Cheek Close display

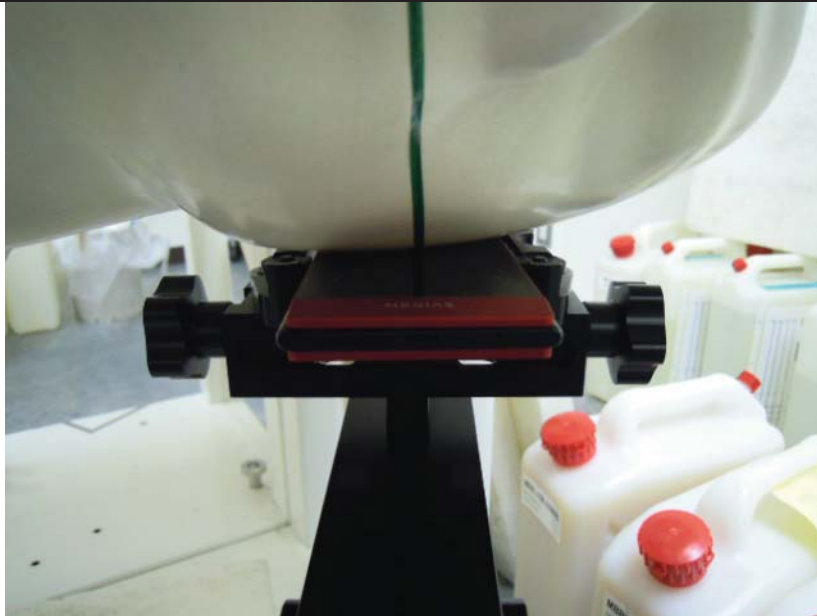



Left Cheek Open display

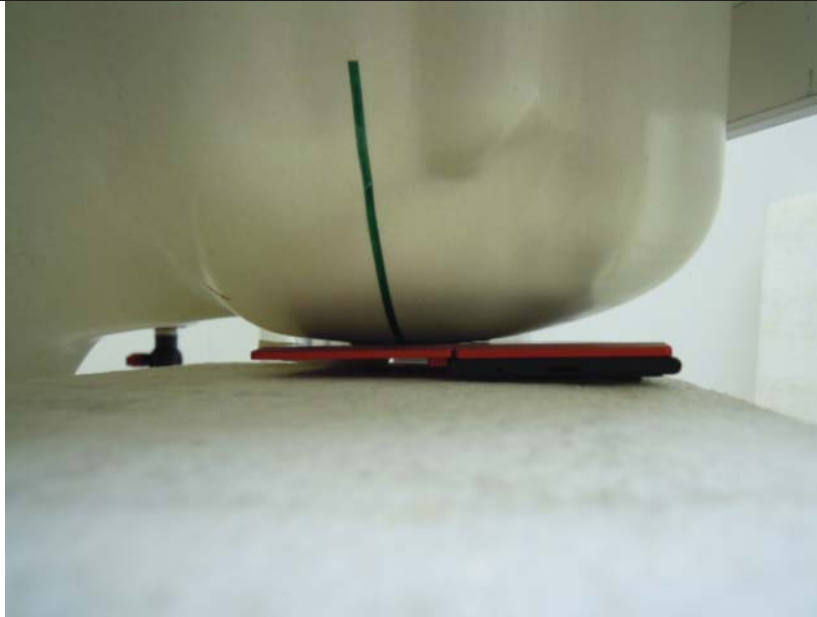

Left Tilt Close display

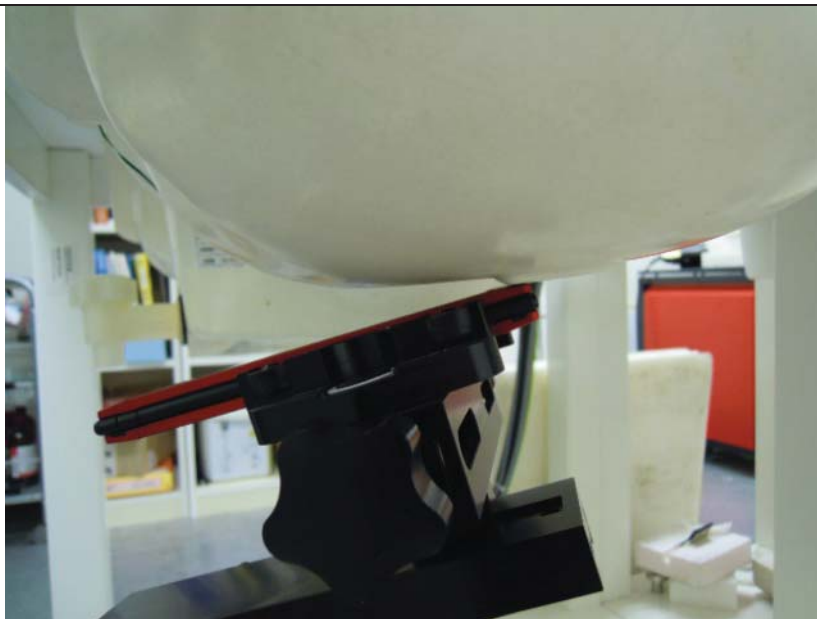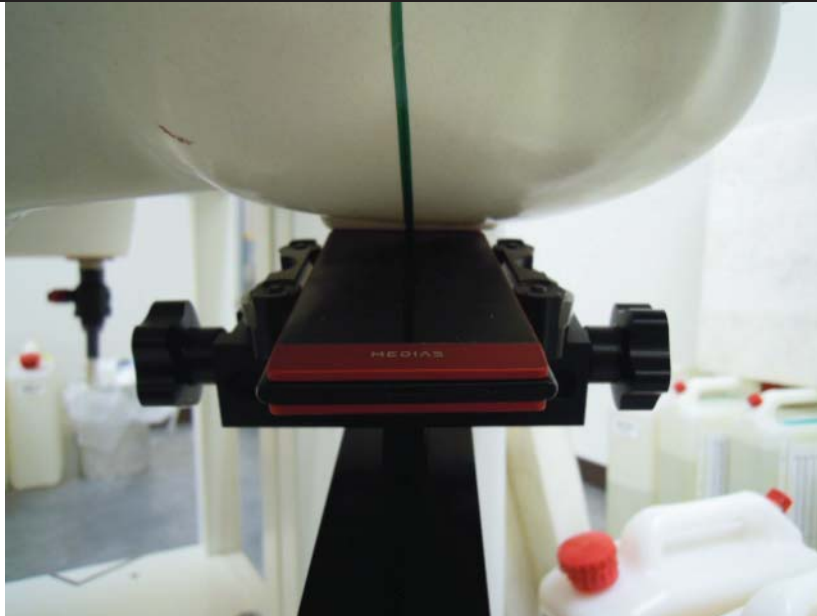


Left Tilt Open display

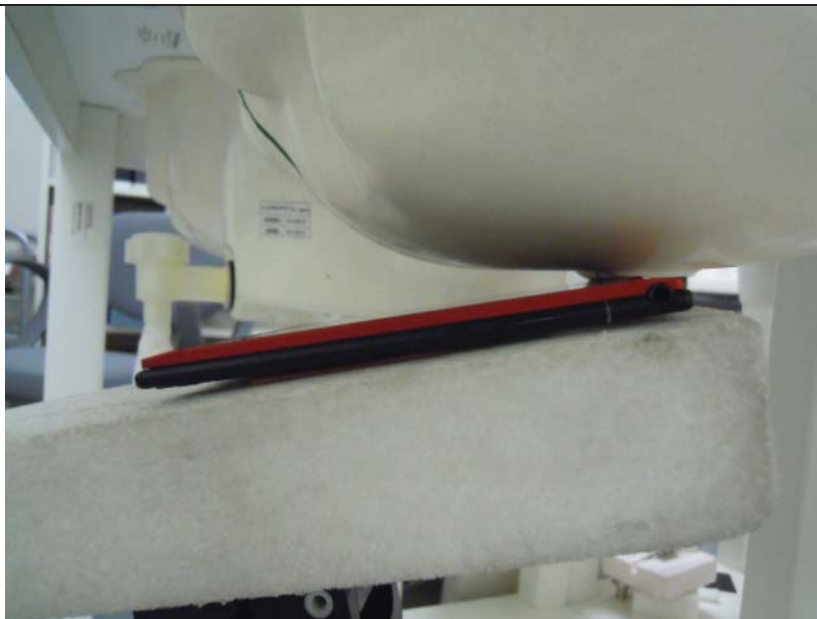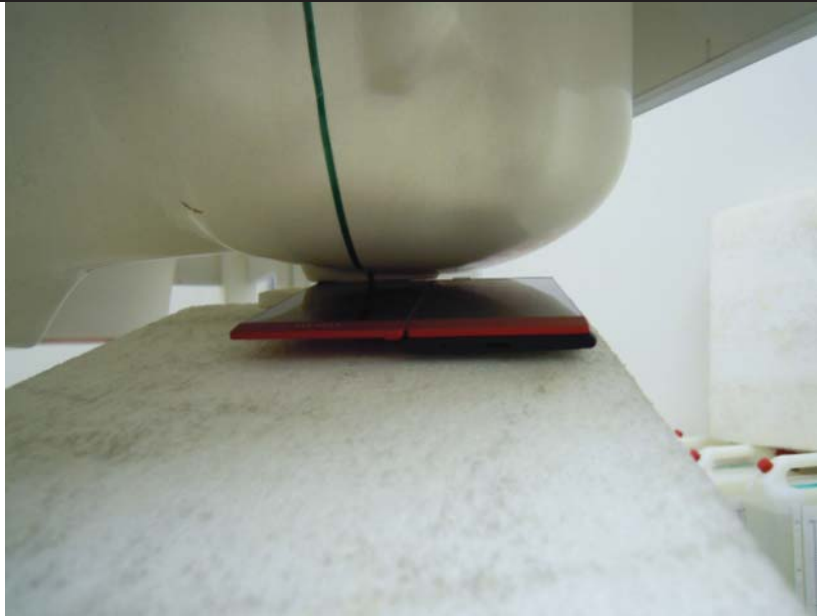

Right Cheek Close display




Right Cheek Open display

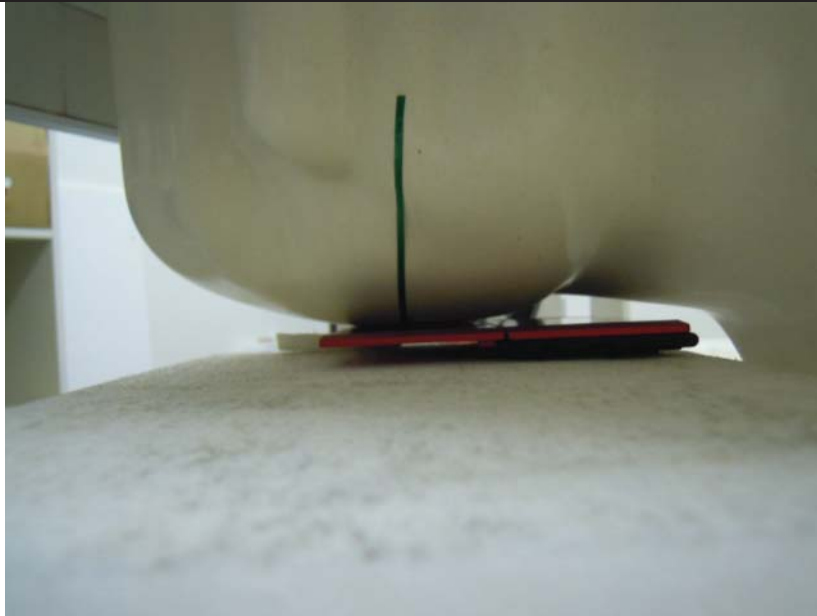

Right Tilt Close display



Right Tilt Open display

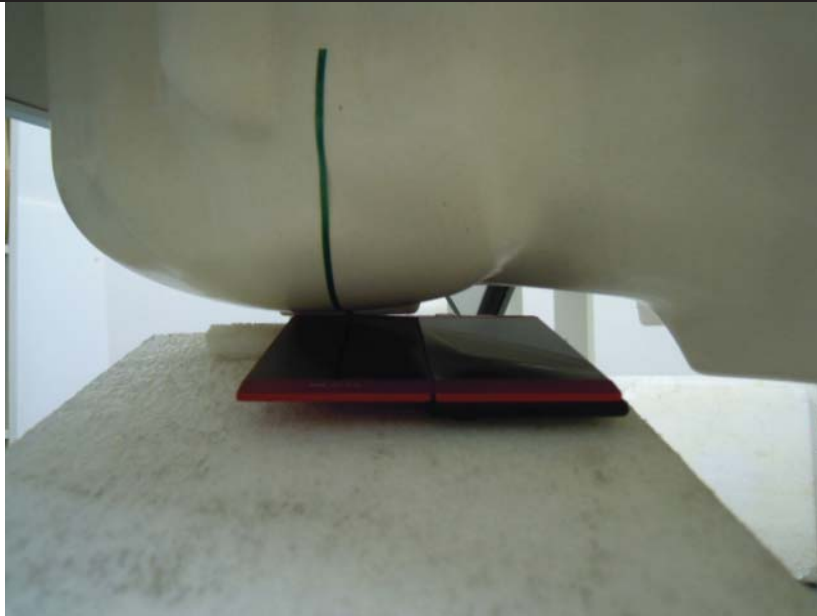

Head setup for WWAN

The measurement procedure using a flat phantom according to the KDB648474 D04.



- Distance provided by the cheek touching position using SAM

Right Cheek




Min distance : 10mm


- Rectangular shaped phones should be positioned with its bottom edge positioned from the flat phantom with the same distance provided by the cheek touching position using SAM. The ear reference point (ERP, as defined for SAM) of the phone should be positioned 0.4 cm from the flat phantom shell.

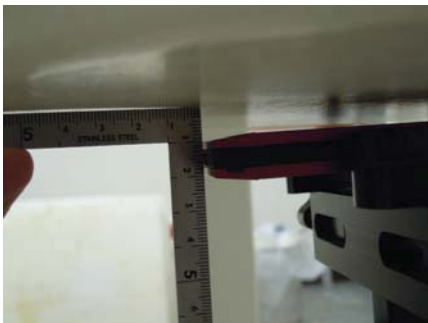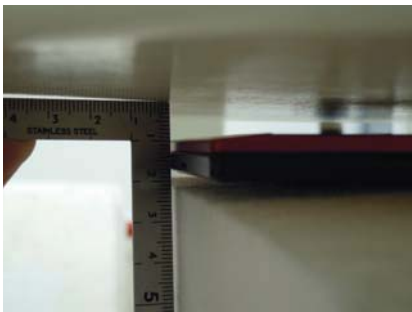WWAN Head at Flat phantom Front (ERP 4mm / Bottom edge 10mm) Close display	WWAN Head at Flat phantom Front (ERP 4mm / Bottom edge 10mm) Open display
 	 


Front Open display 10mm (Hotspot mode)

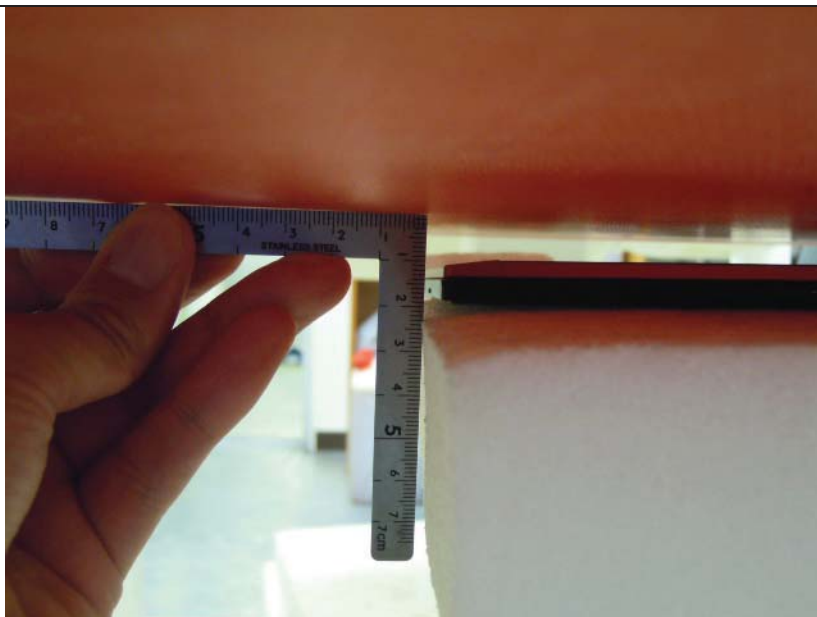


Rear Close display 10mm (Hotspot mode)

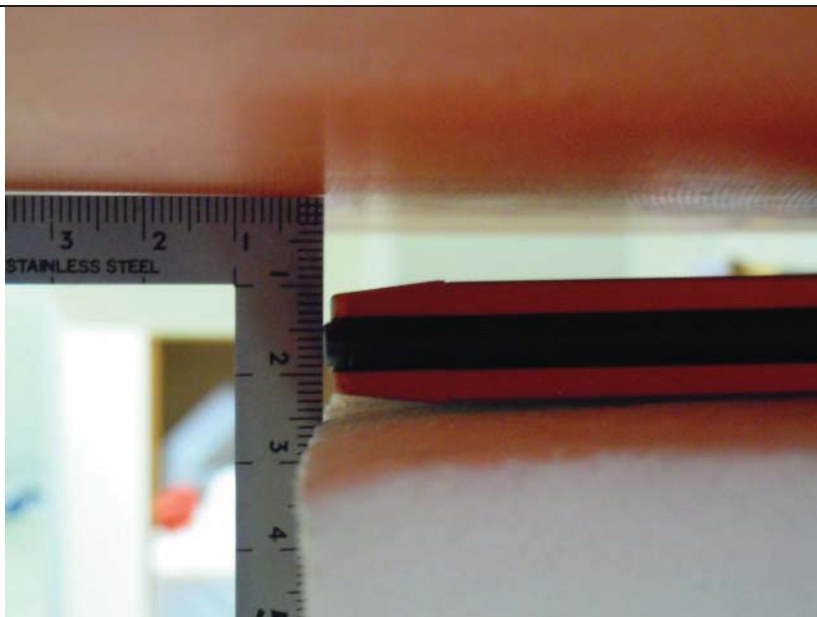


Rear Open display 10mm (Hotspot mode)

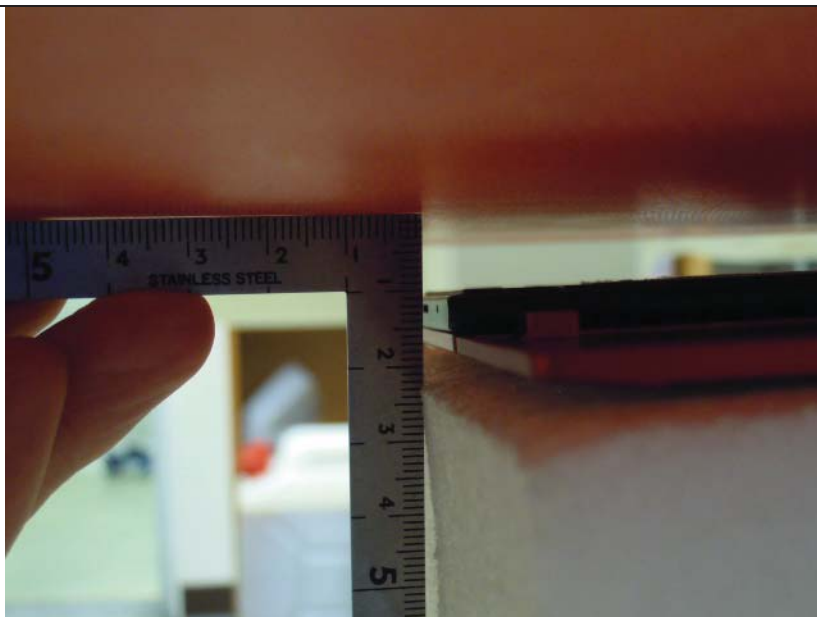

Left Open display 10mm (Hotspot mode)

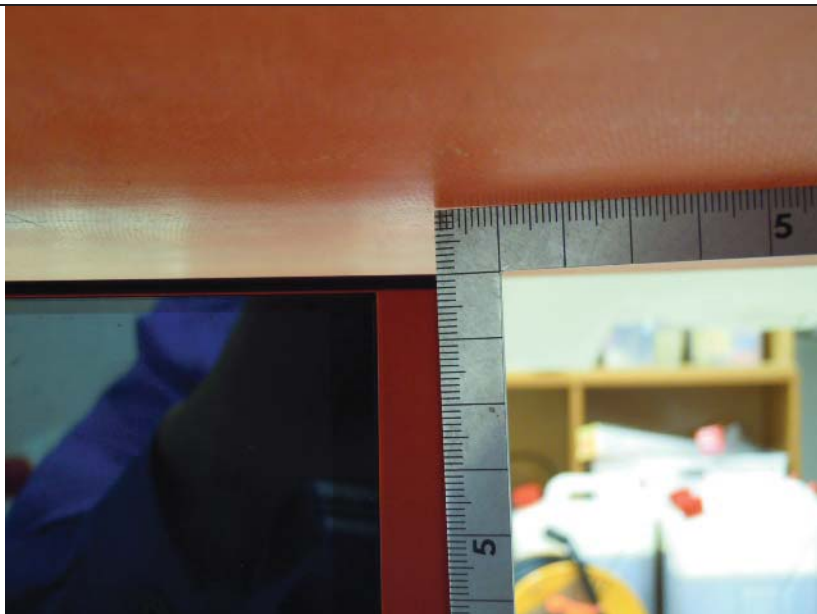

Bottom Open display 10mm (Hotspot mode)

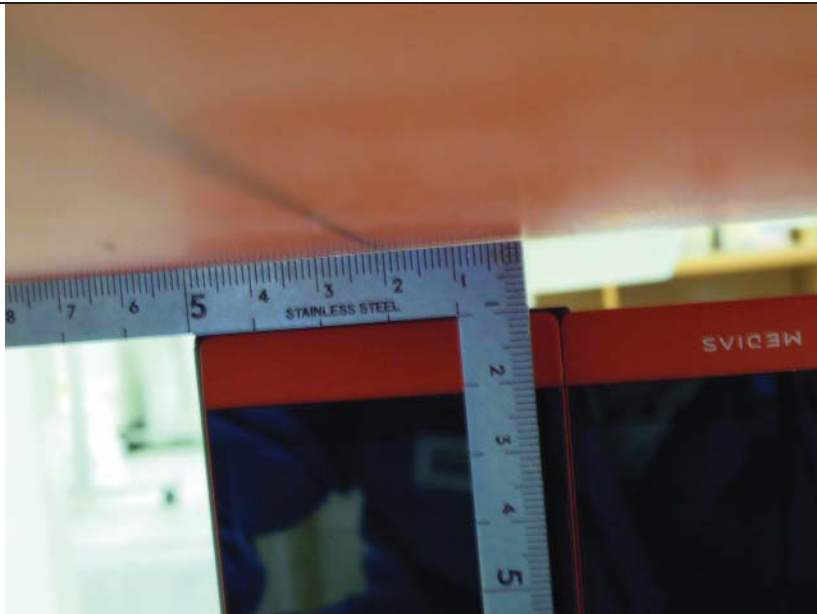

Top Open display 10mm (Hotspot mode)



Top Close display 10mm (Hotspot mode)



End of Report