



# Ferrite Strips Installation Leaflet

MN004580A01-AA



MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license.

All other trademarks are the property of their respective owners.


© 2018 Motorola Solutions, Inc. All rights reserved.

**Printed in**







1. Clean the surface of the taser with alcohol swab and leave to dry thoroughly.

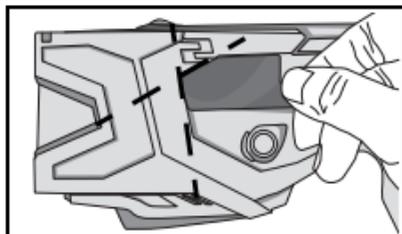


4. Hold the film tab and align it within the finger rest recess area.

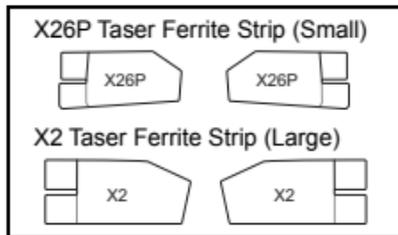


2. Select the corresponding ferrite strips. **Note:** Keep the extra ferrite strips for future use.

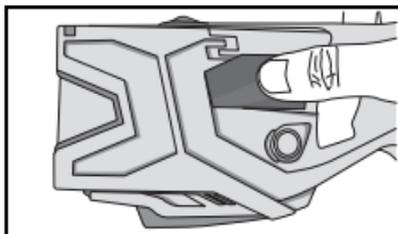

5. Press firmly for 60 seconds. Let it bond for one hour to secure the strip. **Repeat step 1-5 on the other side of the taser.**

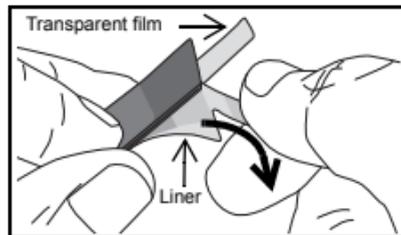

3. Gently peel off the liner. Avoid touching the adhesive.

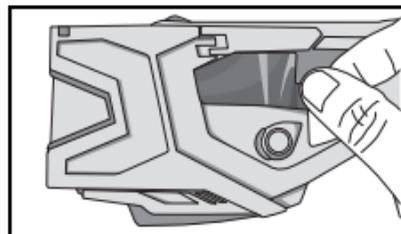

6. Peel off the transparent film before use.