


O2 BT Board Assembly

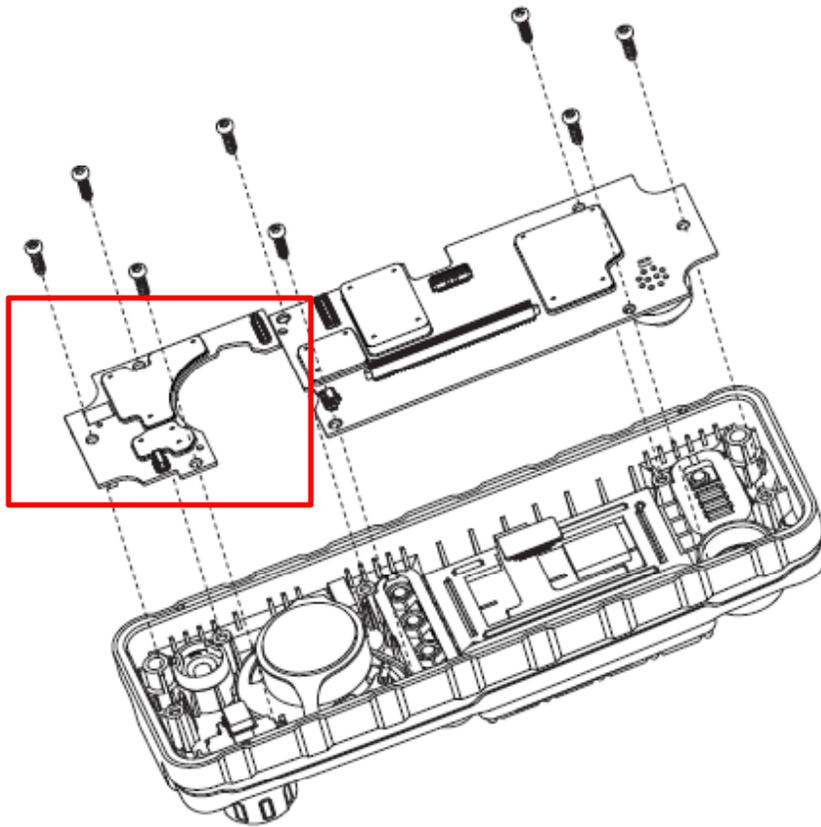

1. Plug the Bluetooth flex into the Bluetooth PCB, and insert the Bluetooth PCB into the front housing assembly.
2. place, and to align the board with the guide pin on the front housing assembly.
3. Plug the Bluetooth flex into the main
4. Using a Torx T10 screwdriver, fasten the remaining three PCB screws following the sequence