



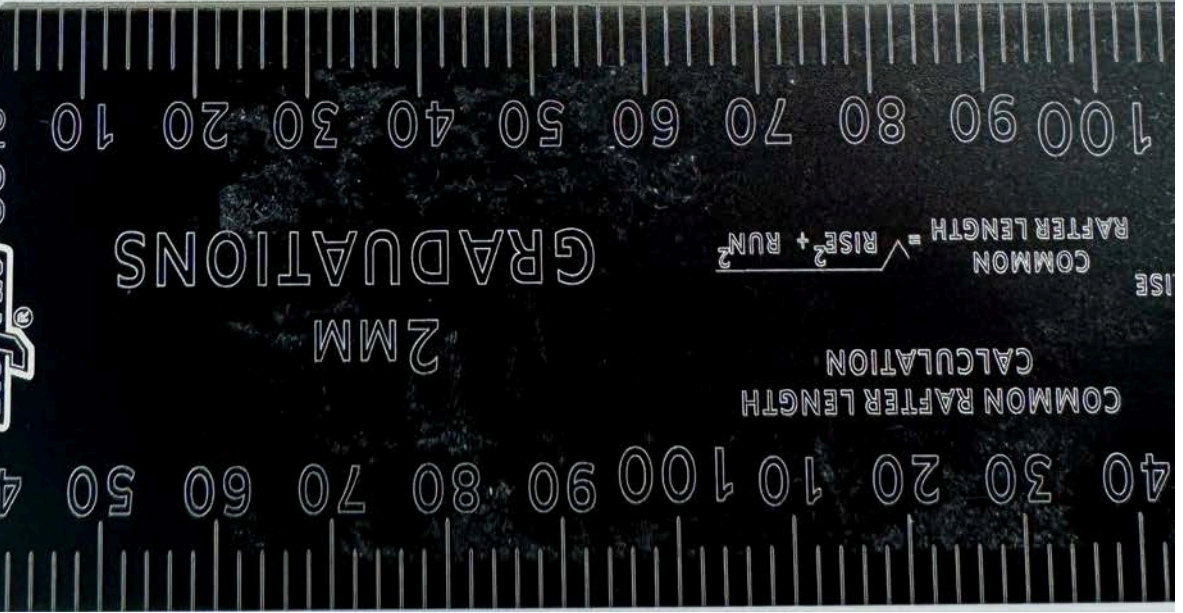

COMMON RAFTER LENGTH CALCULATION
$$\text{COMMON RAFTER LENGTH} = \sqrt{\text{RISE}^2 + \text{RUN}^2}$$


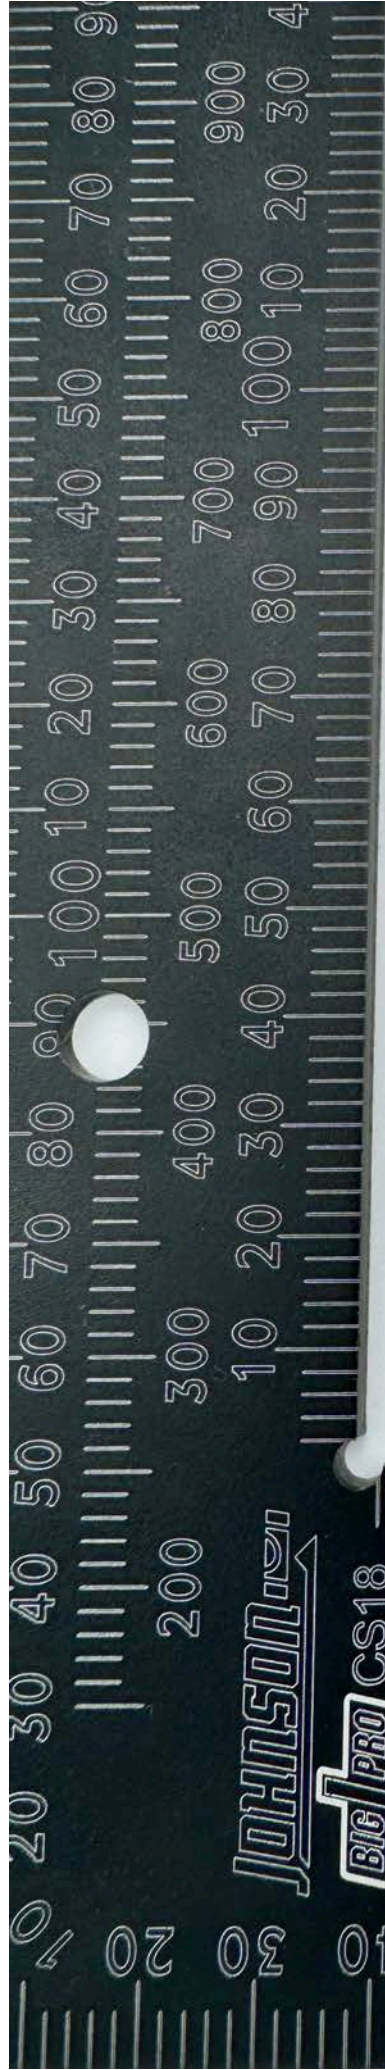



JOHNSON
BIG PRO CS18





COMMON RAFTER LENGTH
CALCULATION
$$\text{COMMON RAFTER LENGTH} = \sqrt{\text{RISE}^2 + \text{RUN}^2}$$

GRADUATIONS
2MM

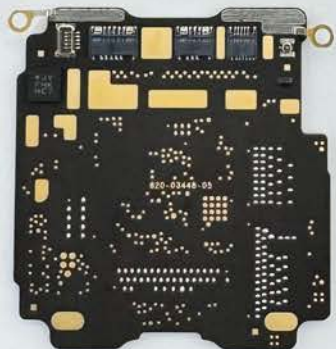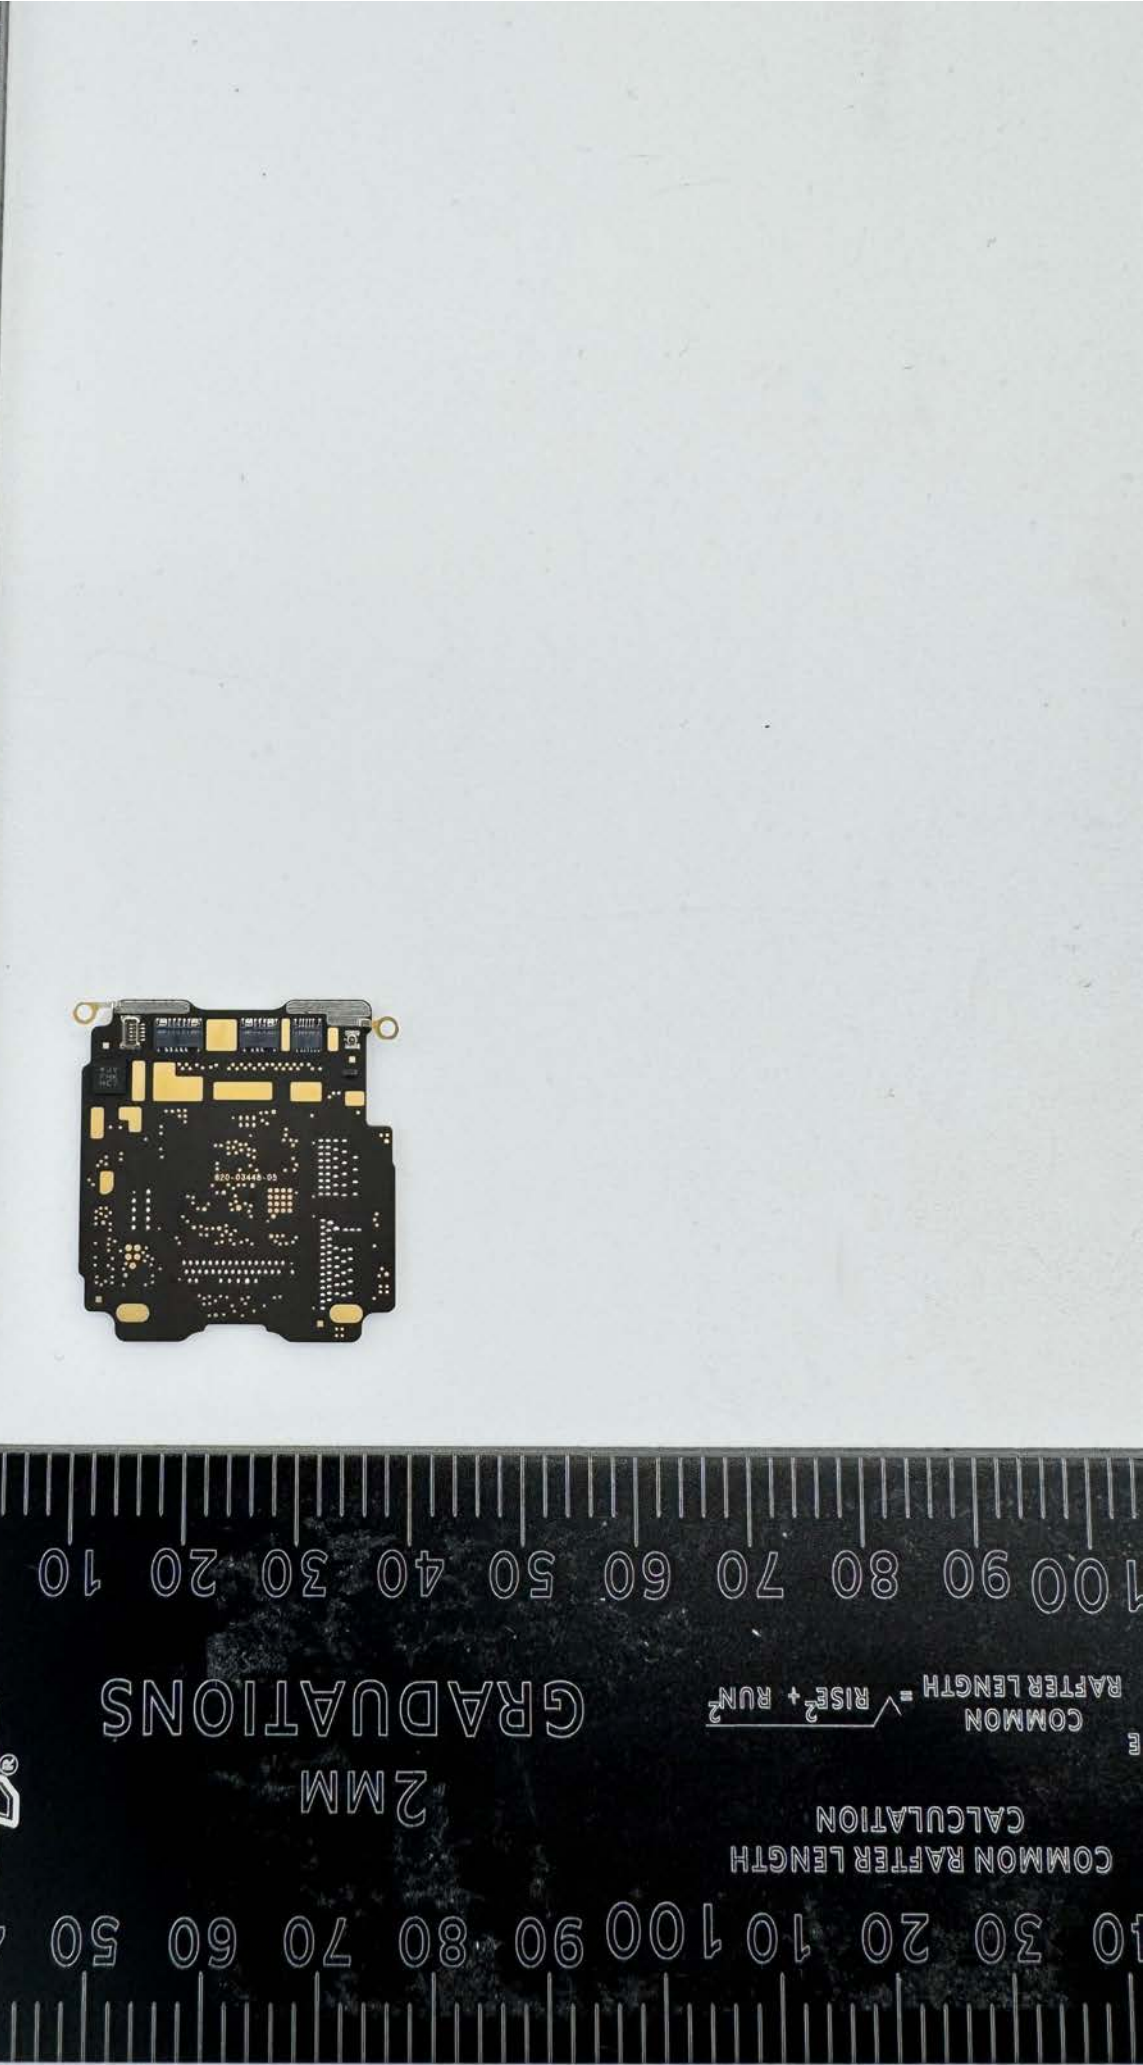

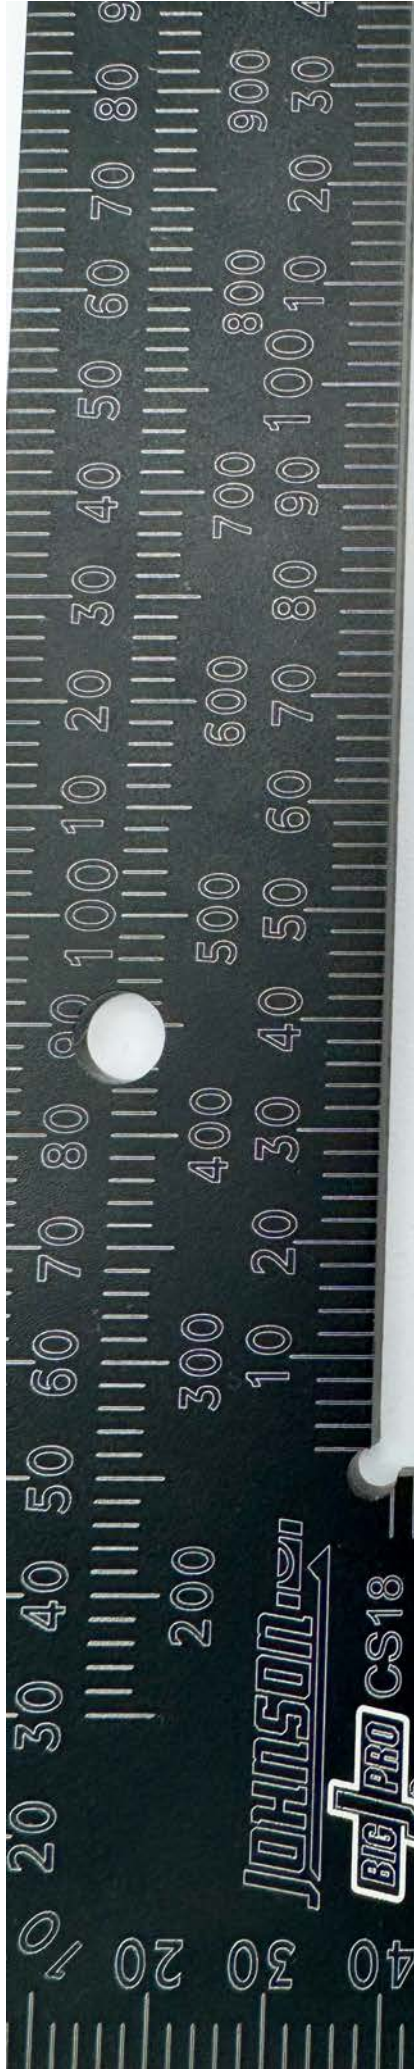


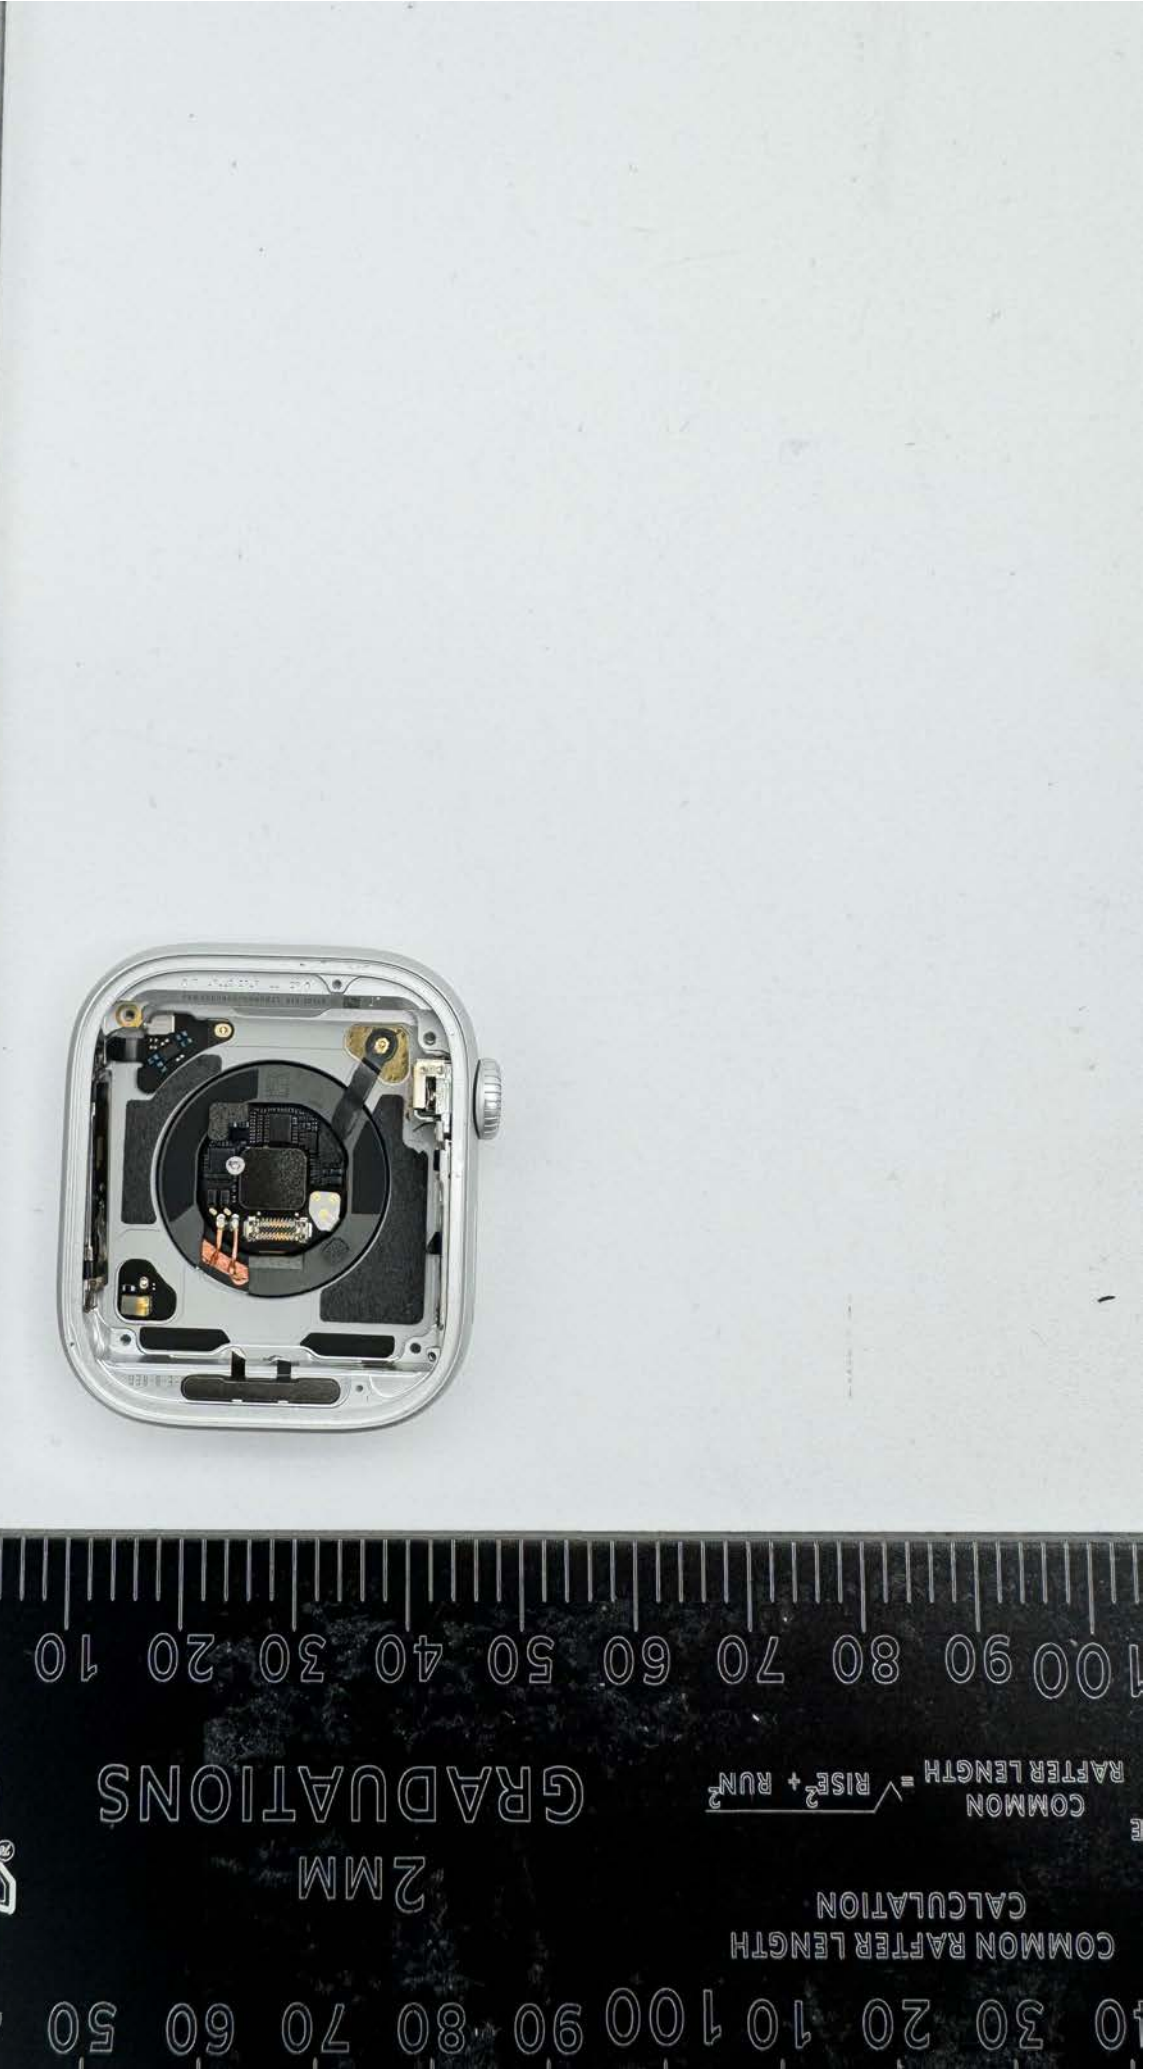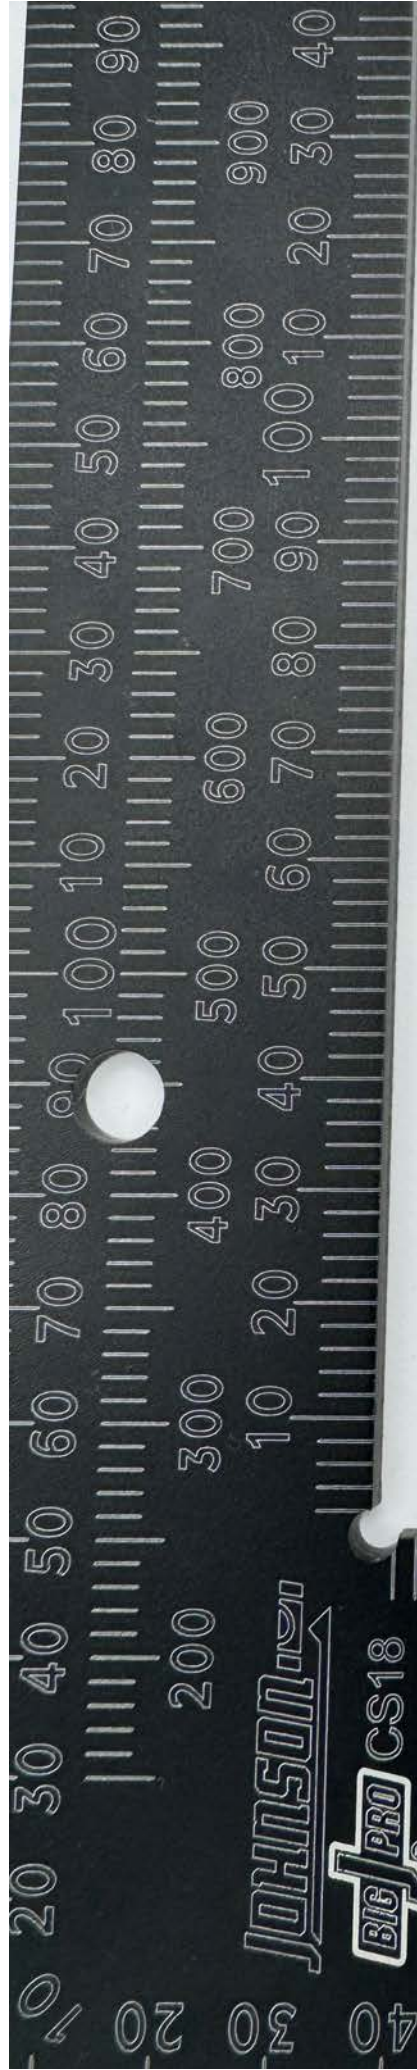


JOHNSON
BIG PRO CS18

GRADUATIONS
2MM

COMMON RAFTER LENGTH
CALCULATION
$$\text{COMMON RAFTER LENGTH} = \sqrt{\text{RISE}^2 + \text{RUN}^2}$$

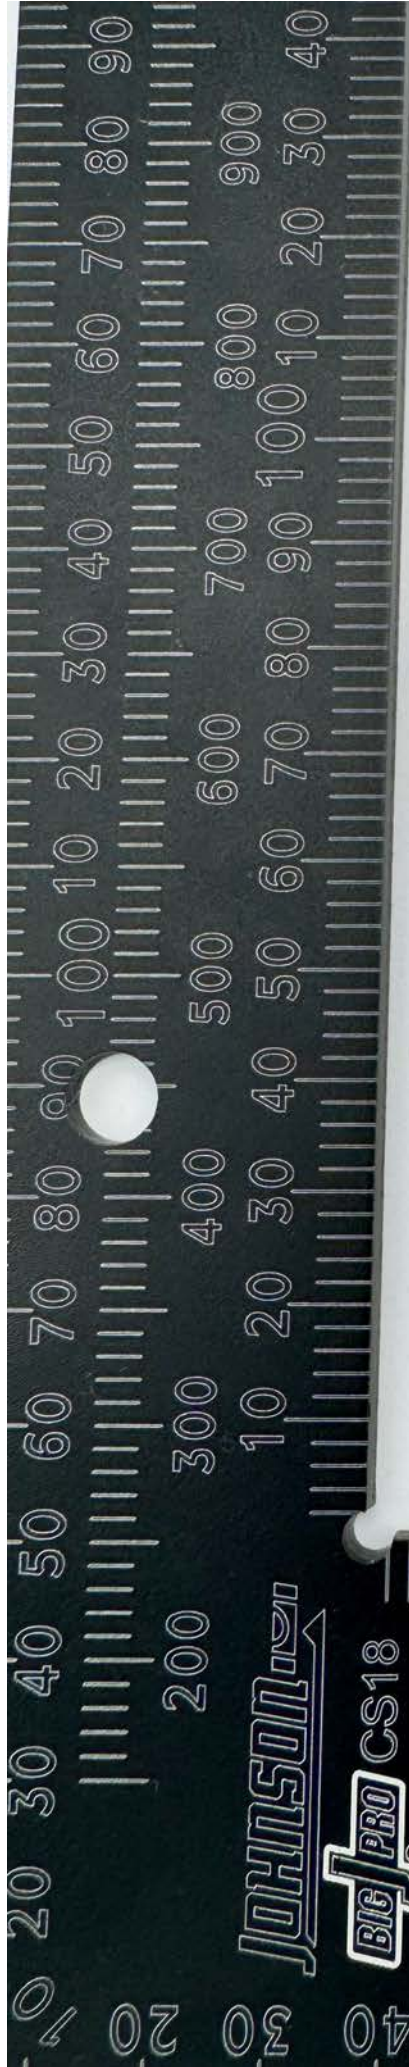

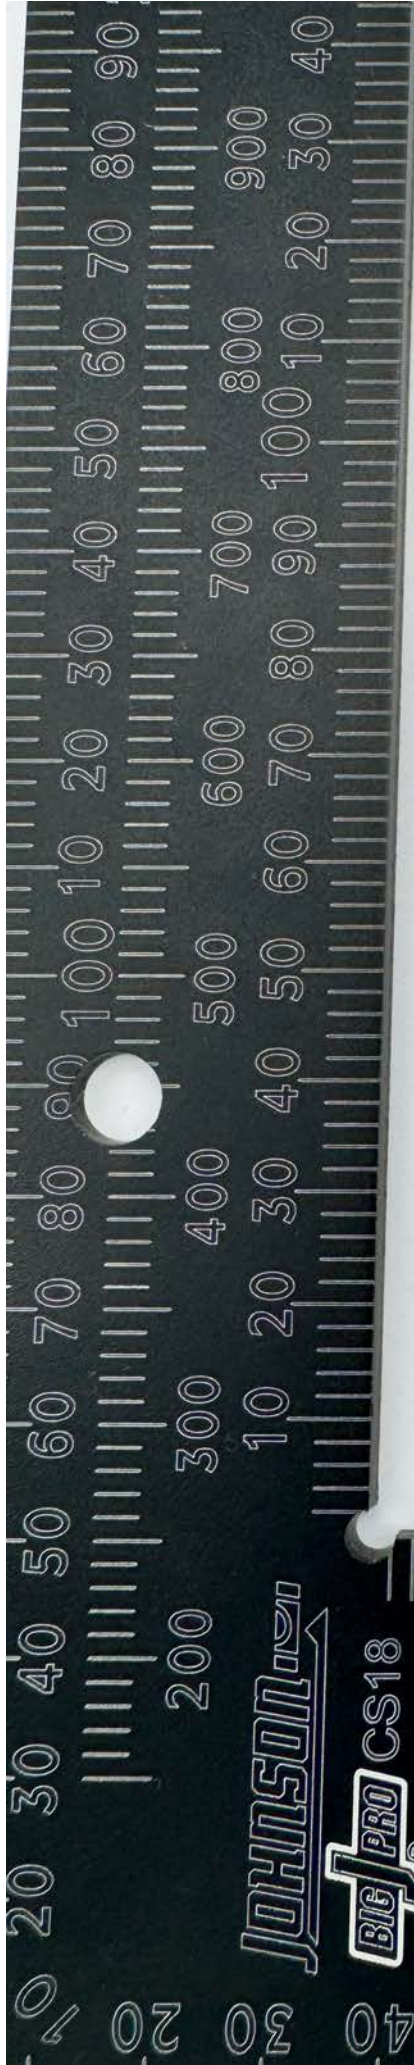

JOHNSON
BIG PRO CS18

GRADUATIONS

2MM

COMMON RAFTER LENGTH = $\sqrt{\text{RISE}^2 + \text{RUN}^2}$

COMMON RAFTER LENGTH CALCULATION