

APPENDIX B
: PLOTS OF CONDUCTED EMISSIONS

■ Monitor power port

Scan Settings (1 Range)


Frequencies			Receiver Settings				
Start	Stop	Step	IF BW	Detector	M-Time	Atten	Preamp
150k	30M	5k	9k	PK+AV	20ms	AUTO	LN OFF

Final Measurement: x QP / + AV

Meas Time: 1 s

Subranges: 25

Acc Margin: 60dB

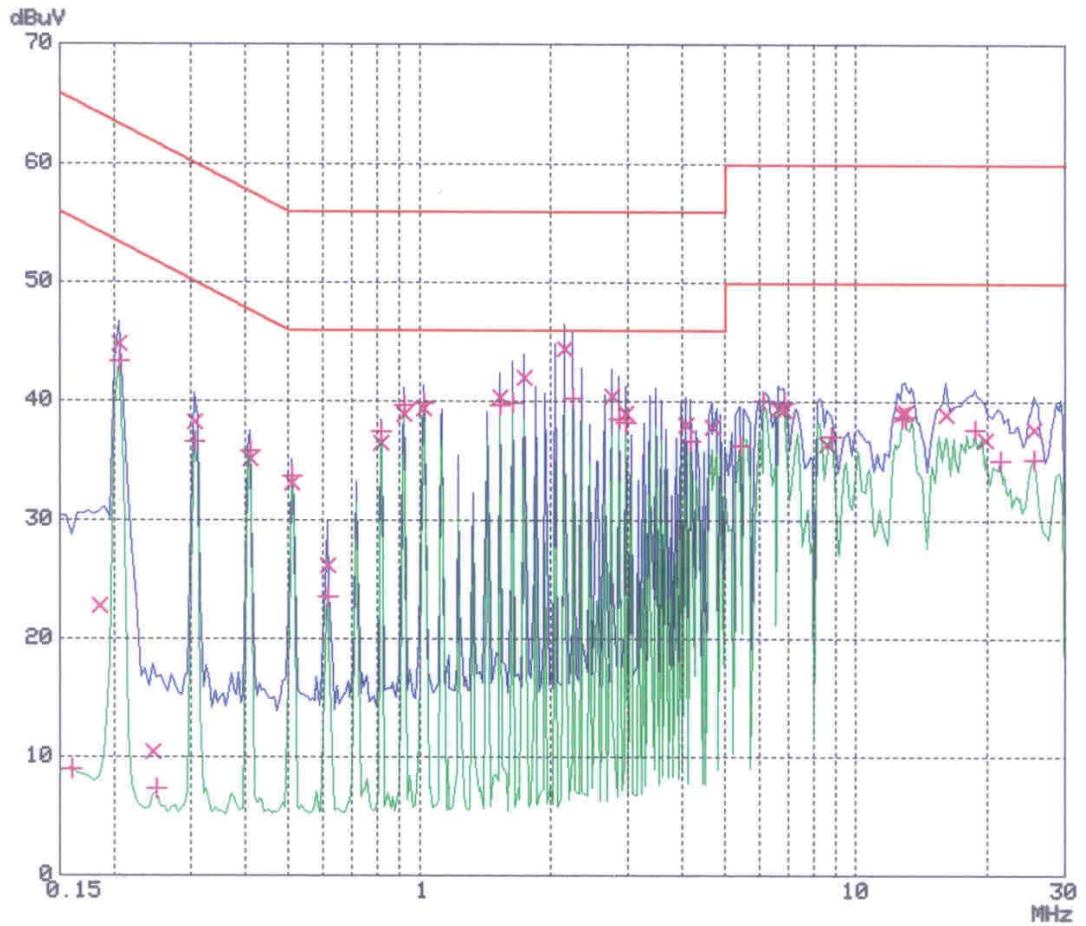

<Hot line>

Scan Settings (1 Range)


Frequencies			Receiver Settings				
Start	Stop	Step	IF BW	Detector	M-Time	Atten	Preamp
150k	30M	5k	9k	PK+AV	20ms	AUTO LN	OFF

Final Measurement: x QP / + AV

Meas Time: 1 s

Subranges: 25

Acc Margin: 60dB

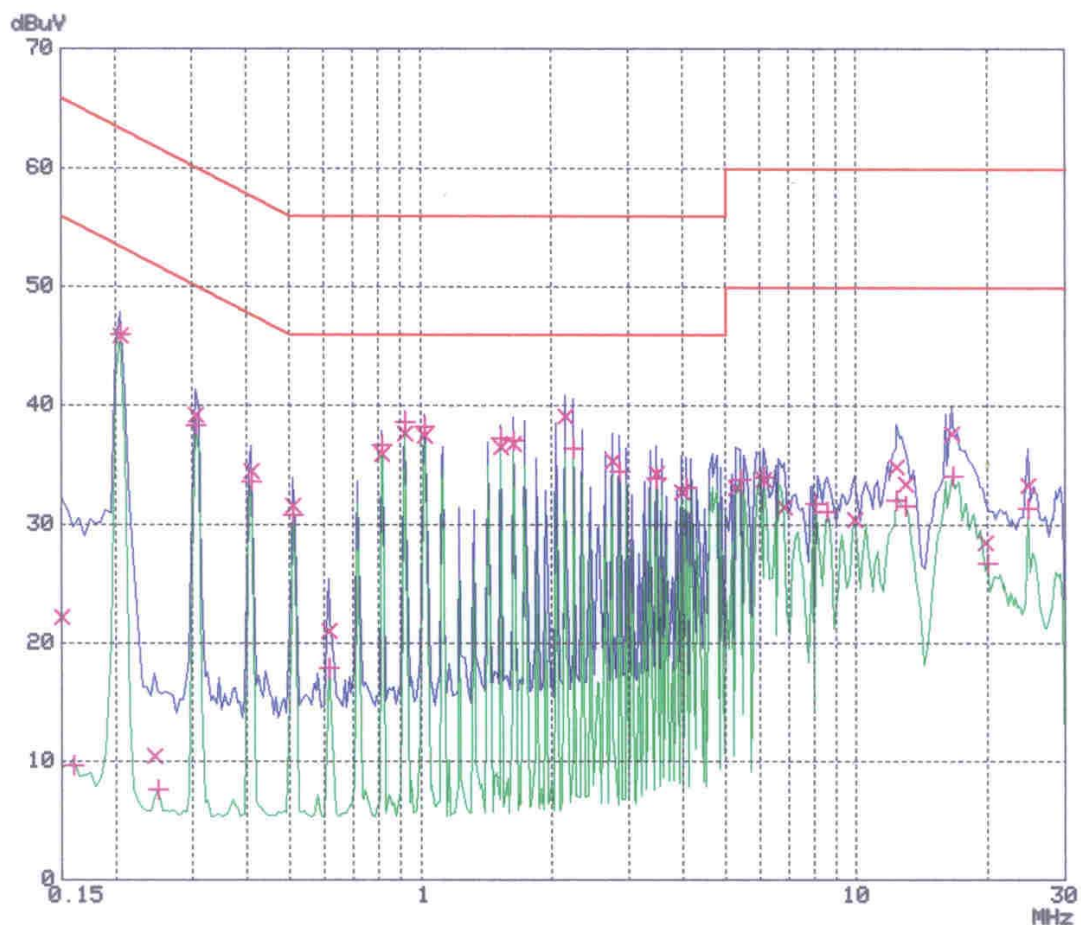


<Neutral line>

■ PC power port

Scan Settings (1 Range)

Frequencies			Receiver Settings				
Start	Stop	Step	IF BW	Detector	M-Time	Atten	Preamp
150k	30M	5k	9k	PK+AV	20ms	AUTO LN	OFF

Final Measurement: x QP / + AV
Meas Time: 1 s
Subranges: 25
Acc Margin: 60dB

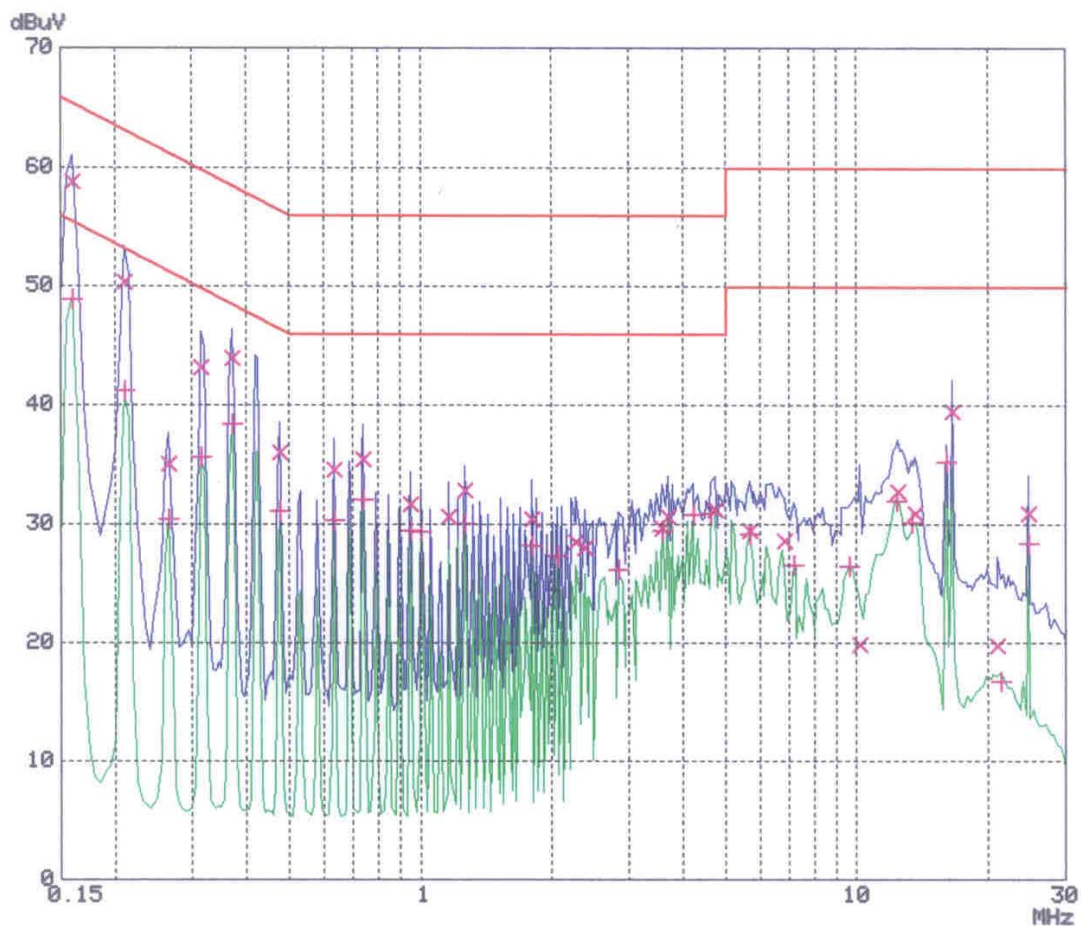

<Hot line>

Scan Settings (1 Range)


Frequencies			Receiver Settings				
Start	Stop	Step	IF BW	Detector	M-Time	Atten	Preamp
150k	30M	5k	9k	PK+AV	20ms	AUTO LN	OFF

Final Measurement: x QP / + AV

Meas Time: 1 s

Subranges: 25

Acc Margin: 60dB

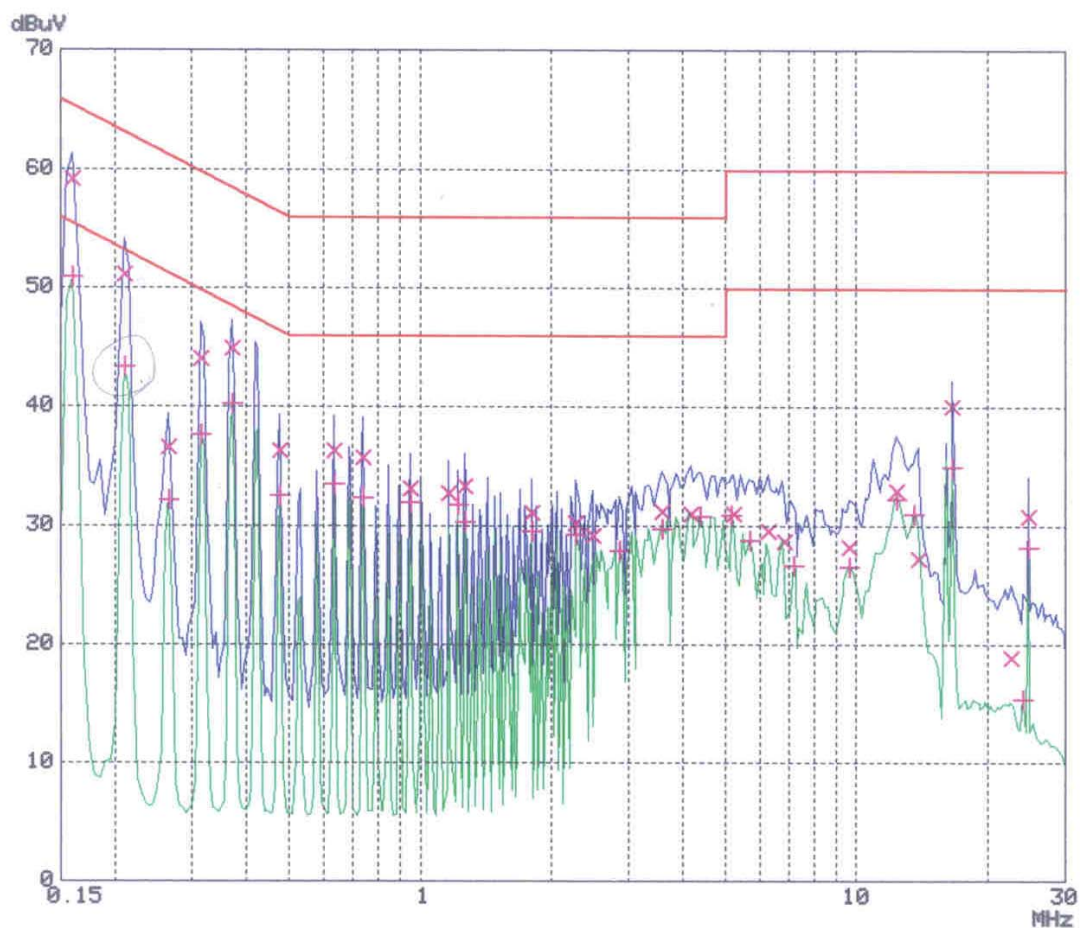

<Neutral line>