




1 PK
VIEW

Ref -10 dBm *Att 0 dB RBW 1 MHz Delta 1 [T1]
 *VBW 1 MHz 0.00 dB
 SWT 120 ms 100.320000 ms

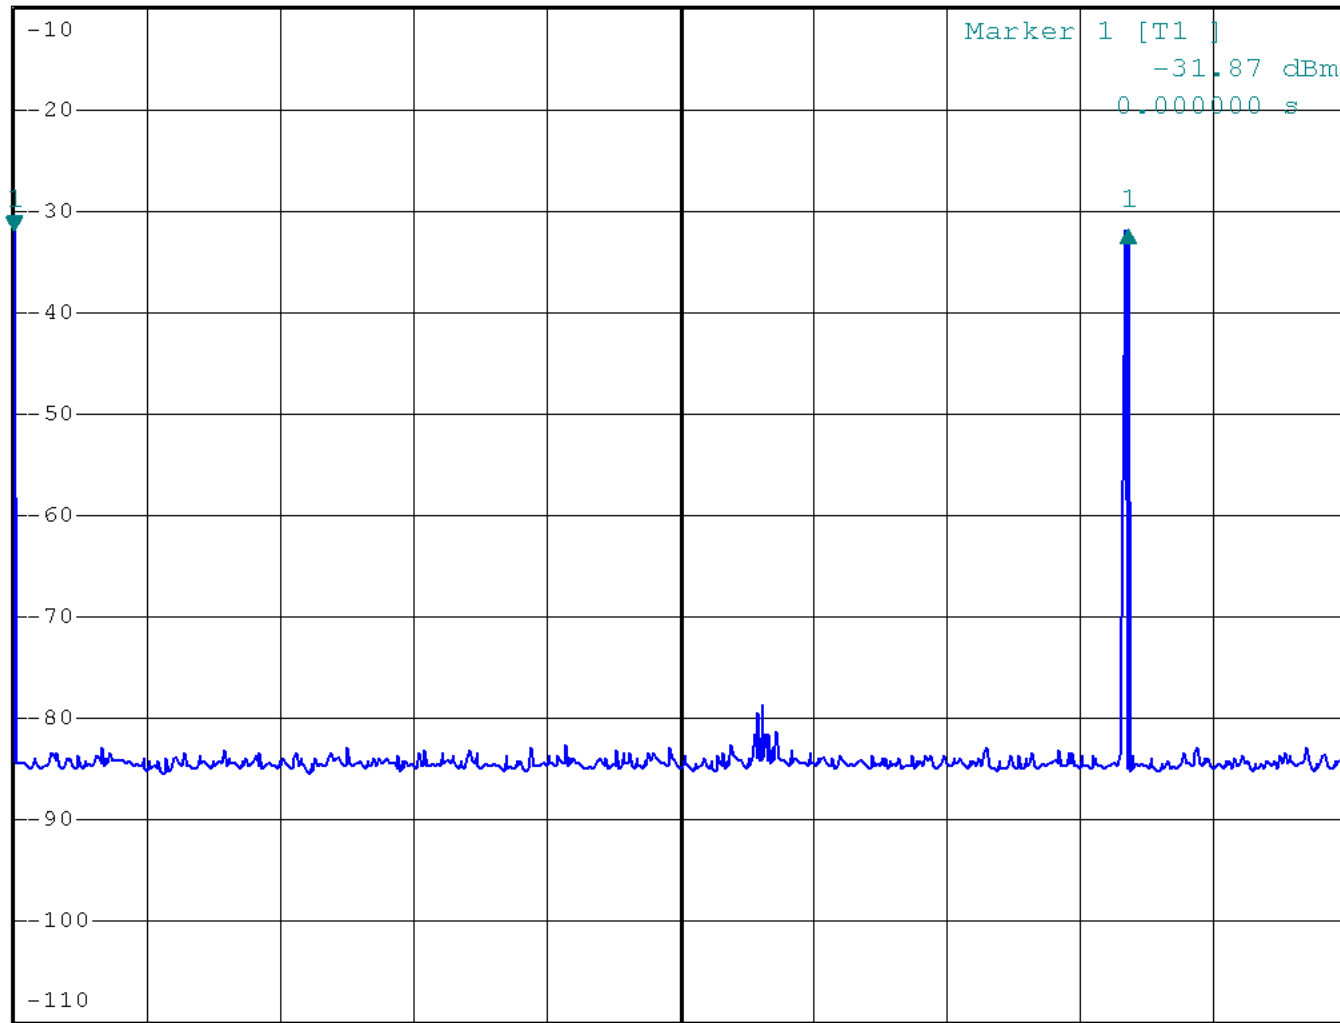

Center 2.46568 GHz

12 ms/

Duty Cycle

$$= 0.196 / 100$$

$$= 1.96 \times 10^{-3}$$

Average Factor

$$= 20 \log (1.96 \times 10^{-3})$$

$$= -54 \text{ dB}$$




RBW 1 MHz

*VBW 1 MHz

SWT 1 s

Ref -10 dBm

*Att 0 dB

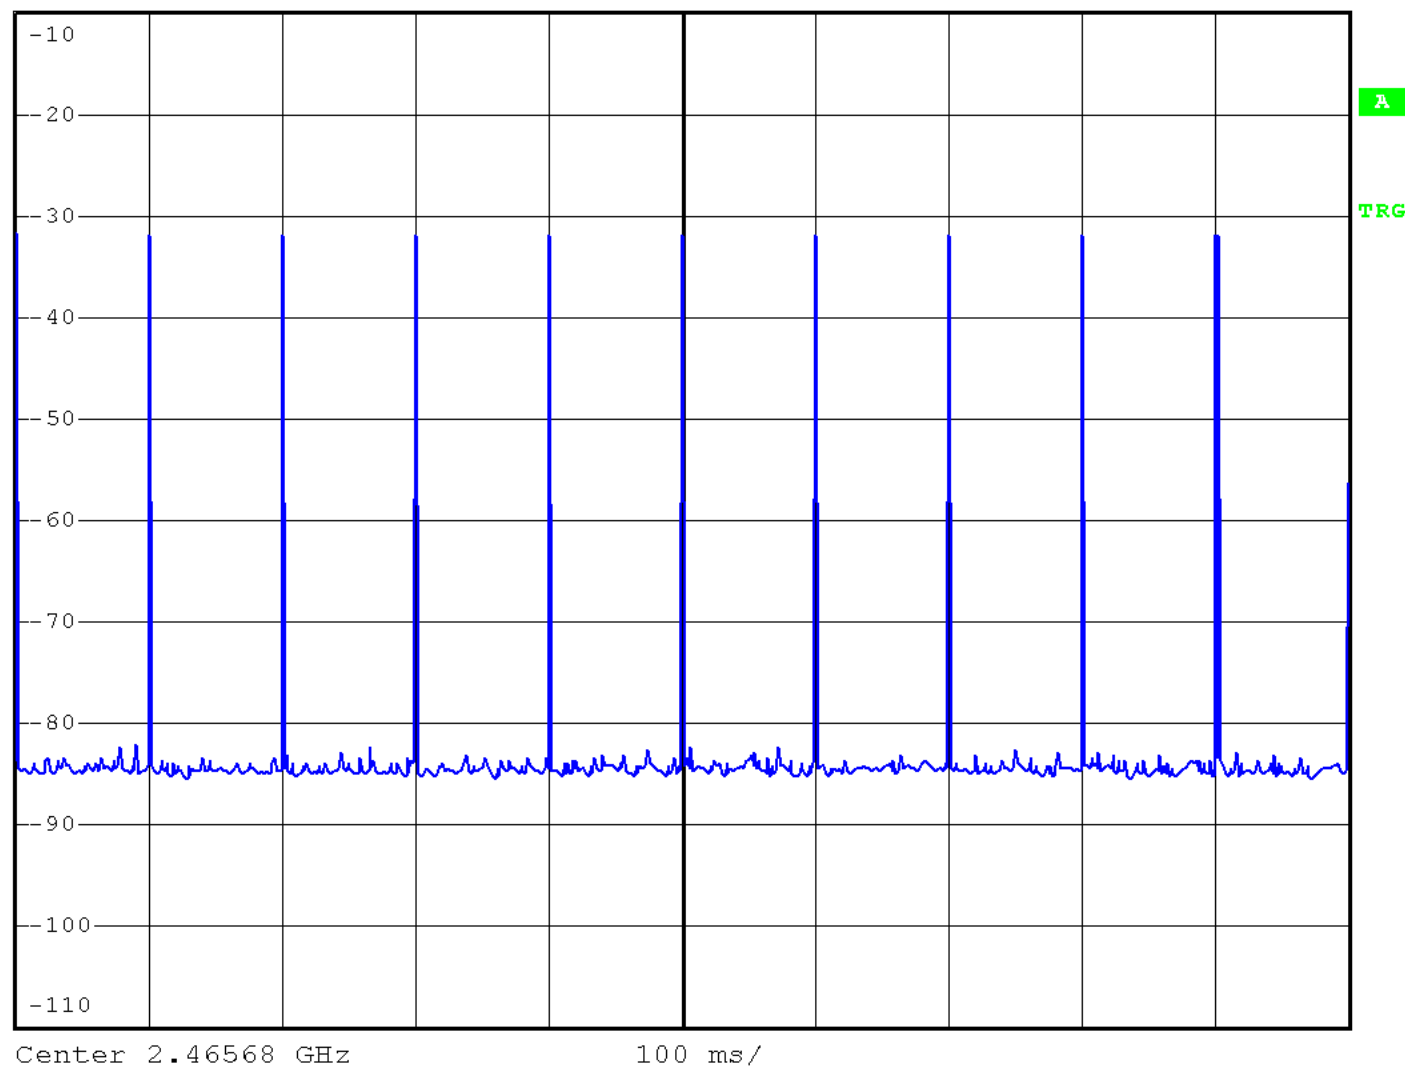1 PK
VIEW




RBW 1 MHz Delta 1 [T1]
*VBW 1 MHz 2.18 dB
SWT 1 ms 196.000000 μ s

Ref -10 dBm

*Att 0 dB

1 PK
VIEW

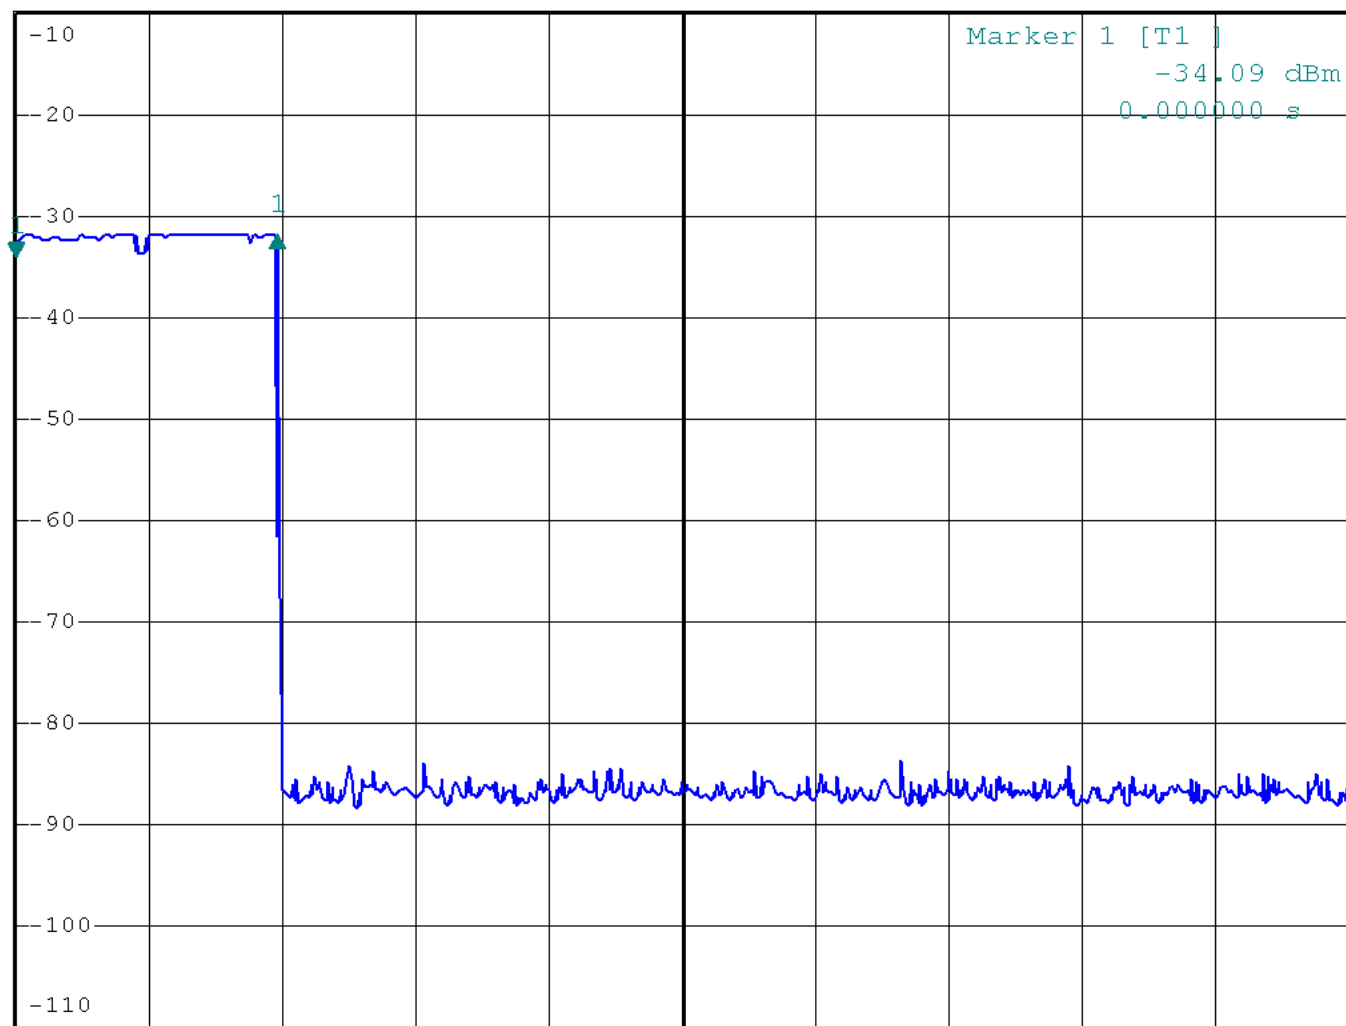

Center 2.46568 GHz

100 μ s/