



Serial number -> Continued number on all POs
 For example,
 0000001, 0000002, 0000003..... 0003000(for current order);
 Next PO start from 0003001, 0003002.....NNNNNNN;
 A02 = Date code
 A = 2024, B = 2025, C = 2026, ...; 02 = production week, 生产周数

Base label

GB label

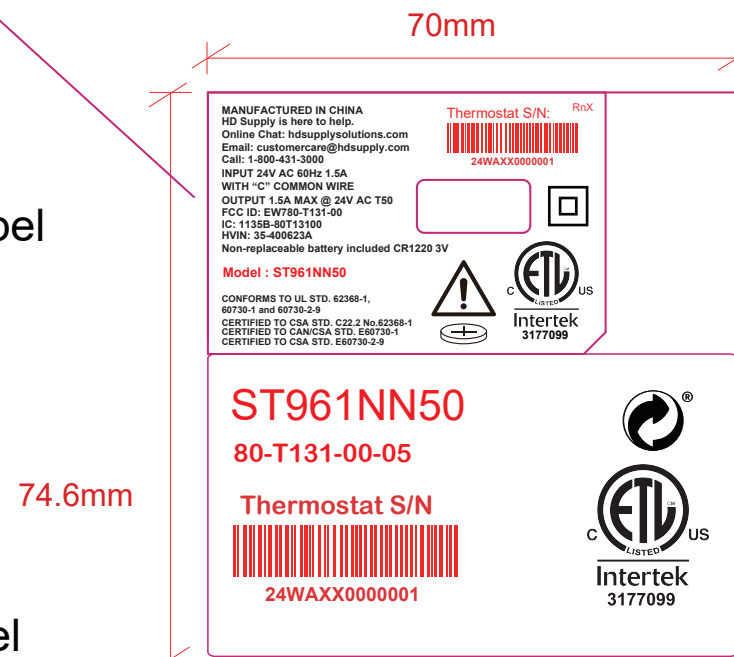

SIZE: 74.6*70mm

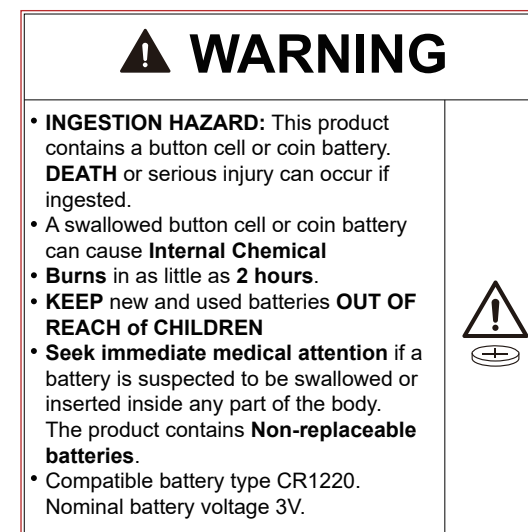

Box label: label size: 70 x 70 mm





Label size: 110 x 70 mm



BOX label location

T961 NN50 White

DATE: JULY 25, 2025

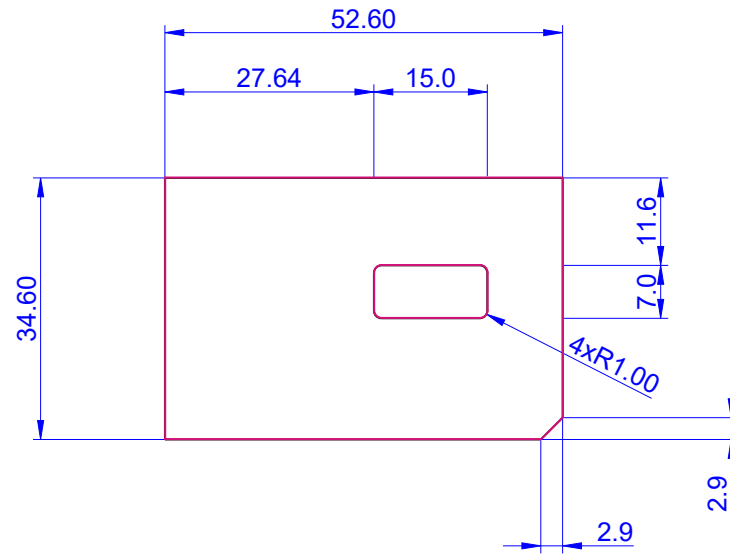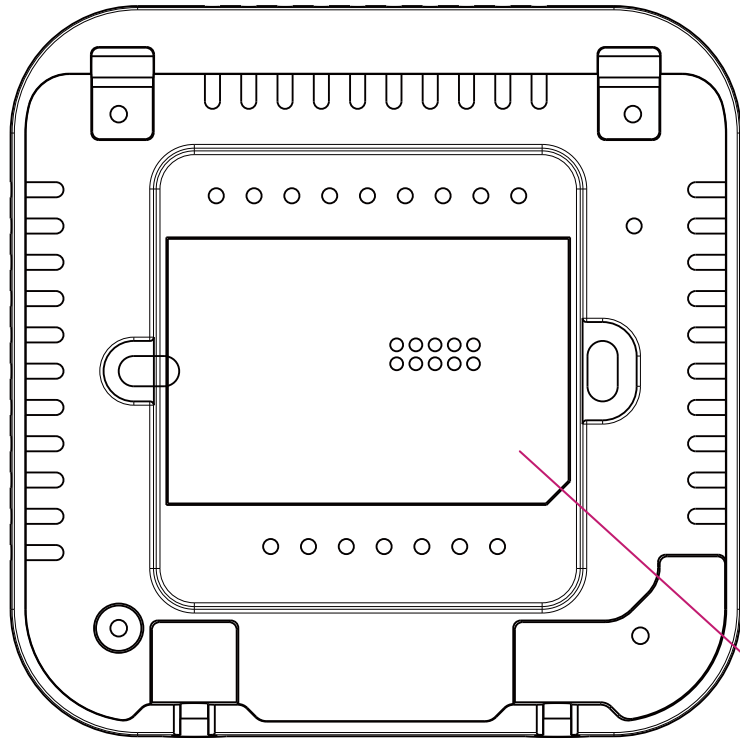

红色部分公司内部打印

Base label



104.6mm

GB label

SIZE: 104.6*70mm

T961NN50	
12L A02 0000001	
Serial number	
Date code	
Product code	
Serial number -> Continued number on all POs	
For example, 0000001, 0000002, 0000003..... 0003000(for current order);	
Next PO start from 0003001, 0003002.....NNNNNNN;	
A02 = Date code	
A = 2024, B = 2025, C = 2026, ...; 02 = production week, 生产周数	

CTN LABEL 92-005428-000-100(公司内部打印)

SN:	
1HAA02000001	1HAA02000006
1HAA02000002	1HAA02000007
1HAA02000003	1HAA02000008
1HAA02000004	1HAA02000009
1HAA02000005	1HAA02000010