


Photograph 1: Set-up for Conducted Emission on AC Mains



Photograph 2: Set-up for Radiated Spurious Emission, Up to 1GHz

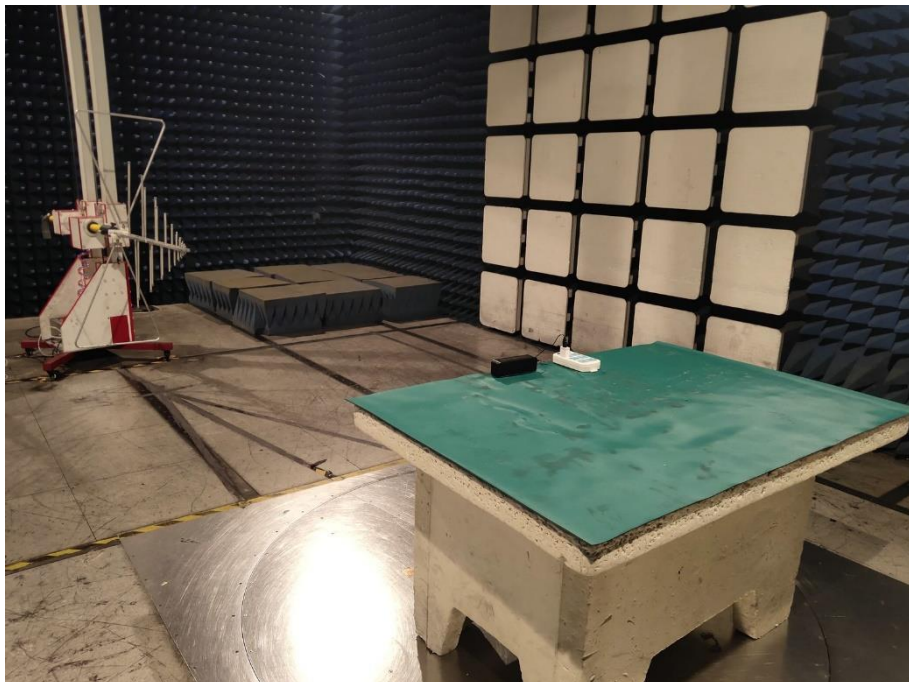

Photograph 3: Set-up for Radiated Spurious Emission, Above 1GHz

