


DO NOT SCALE DRAWING

REVISIONS				
REV.	E.C.O. OR CHANGE DESCRIPTION	BY	APPD	DATE
A	PER ECO 15811	STU		4/13/00

ASSEMBLY INSTRUCTIONS:

- 1.) PLACE (010) OVER THE COMPONENT SIDE OF (050) SO THAT THE LEGS OF (010) FIT INTO THE HOLES IN (050) ORIENT AS SHOWN AND SOLDER AT THE 4 CORNERS. MAKE SURE THAT THE SHIELD (010) IS TIGHT TO THE BOARD (050).
- 2.) APPLY (060) CENTERED ON (010), ORIENT AS SHOWN.

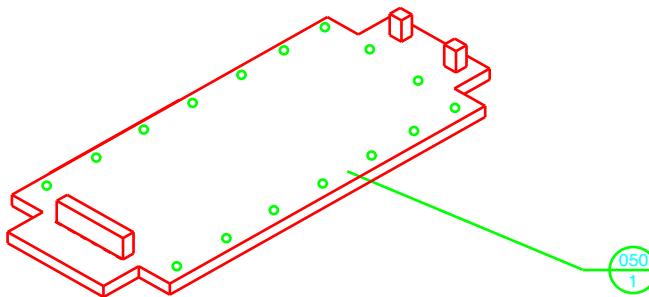

PROPRIETARY NOTE
INFORMATION DISCLOSED HEREIN IS THE PROPERTY OF COMTEC
INFORMATION SYSTEMS INC. AND SHALL NOT BE USED FOR ANY
OTHER PURPOSE EXCEPT AS SPECIFIED BETWEEN THE RECIPIENT
AND COMTEC INFORMATION SYSTEMS INC.

		MATERIAL	SIGNATURES	DATE	 Comtec Information Systems, Inc. 30 Plan Way, Warwick, Rhode Island 02886 USA (401) 739-5800 FAX(401) 724-0296						
	DRAWN R.E. GORDON		06-12-97								
		CHECK			916 MHZ SRRF ASSEMBLY INCLUDING ALL SHIELDING						
		ENGR'D MIKE D.	APPROVED								
		ALL DIMENSIONS ARE GIVEN IN INCHES		ISSUED							
		TOLERANCES UNLESS OTHERWISE SPECIFIED				SIZE	PROJ. NO.	DWG. NO.	REV		
		X	.1	in.							
		XX	.01	in.							
		XXX	.005	in.							
NEXT ASSY	USED ON										
APPLICATION		ANGLES 4 1/2"		AUTOCAD		SCALE	2:1	FILE	C15431A1.DWG	SHEET	1 OF 1