



*Figure 1. Computer Peripheral AC Line Conducted Emissions Measurement Setup*




*Figure 2. Computer Peripheral Radiated Emissions Measurement Setup*



*Figure 3. AC Line Conducted Emissions Measurement Setup*



*Figure 4. Radiated Emissions Measurement Setup*

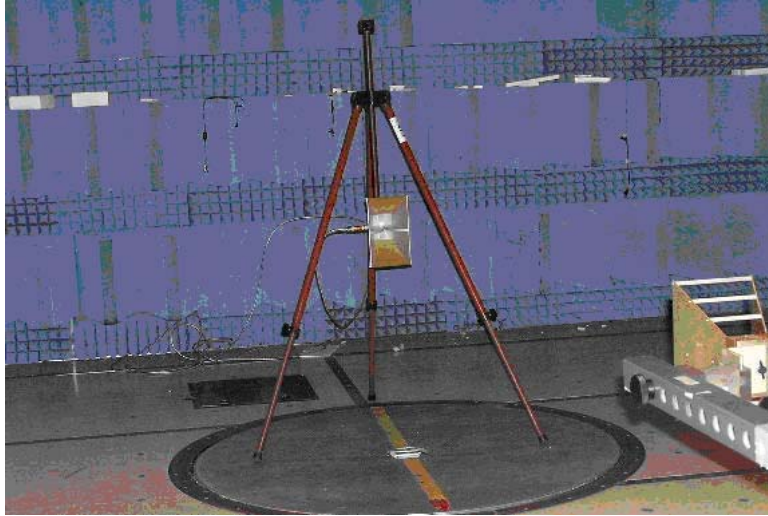

*Figure 5. Antenna Substitution Method*