



Figure 1. Phone Closed



Figure 2. Phone Open



Figure 3. Phone Open - Orientation and Measurement Plane for RF Emissions Testing

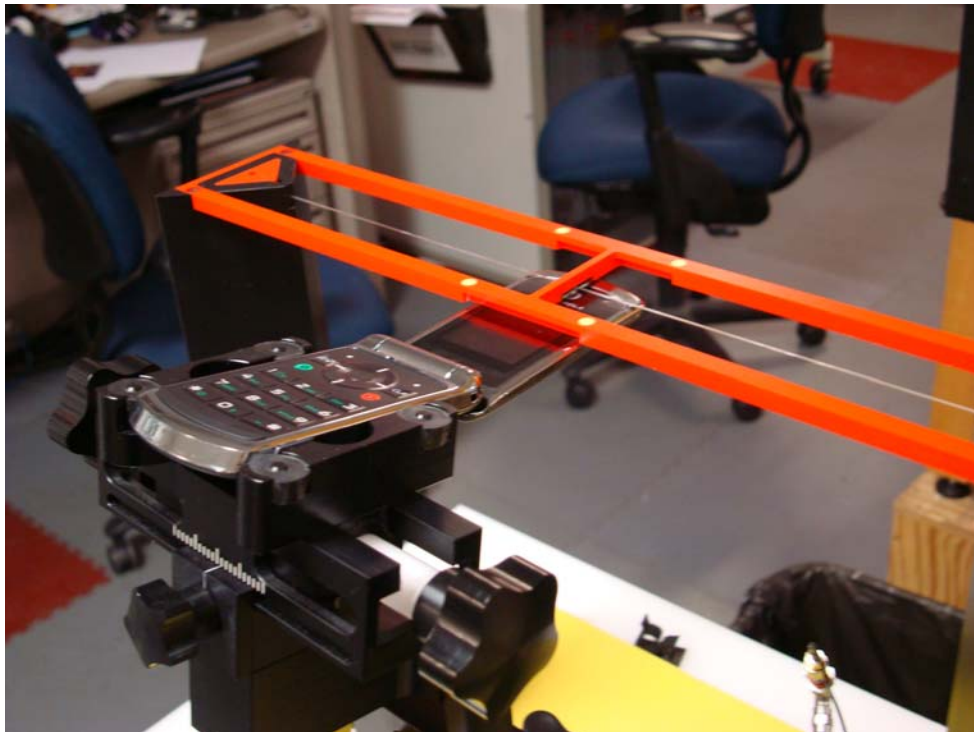


Figure 4. Positioning for RF Emissions

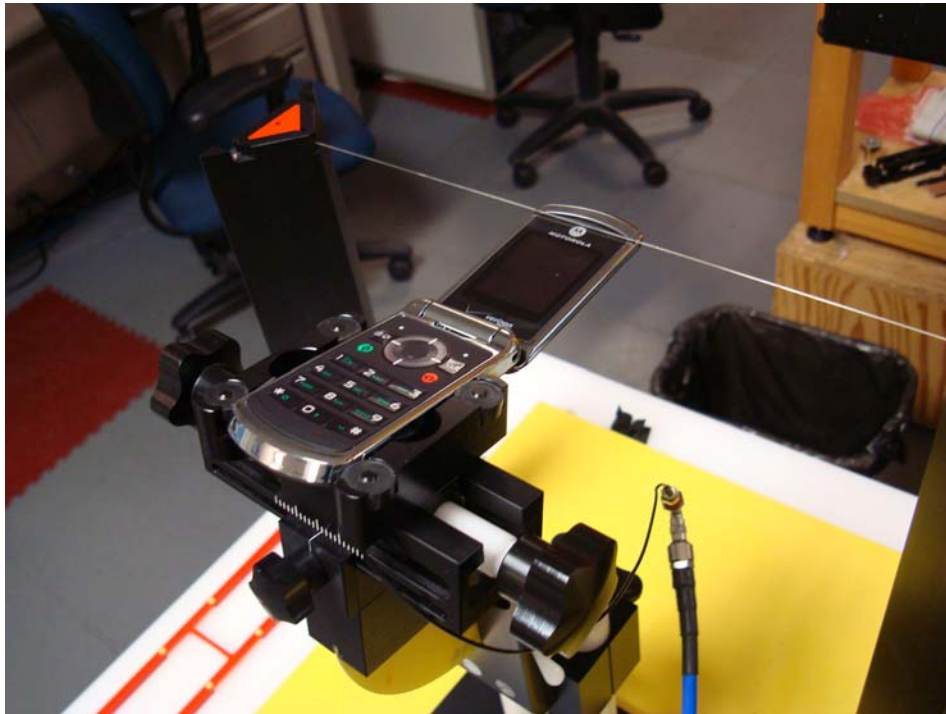


Figure 5. Measurement for RF Emissions