

Photograph 1


Setup for conducted emission at AC line measurements



Photograph 2

Spurious emission measurement setup in anechoic chamber,

Loop antenna in vertical polarization

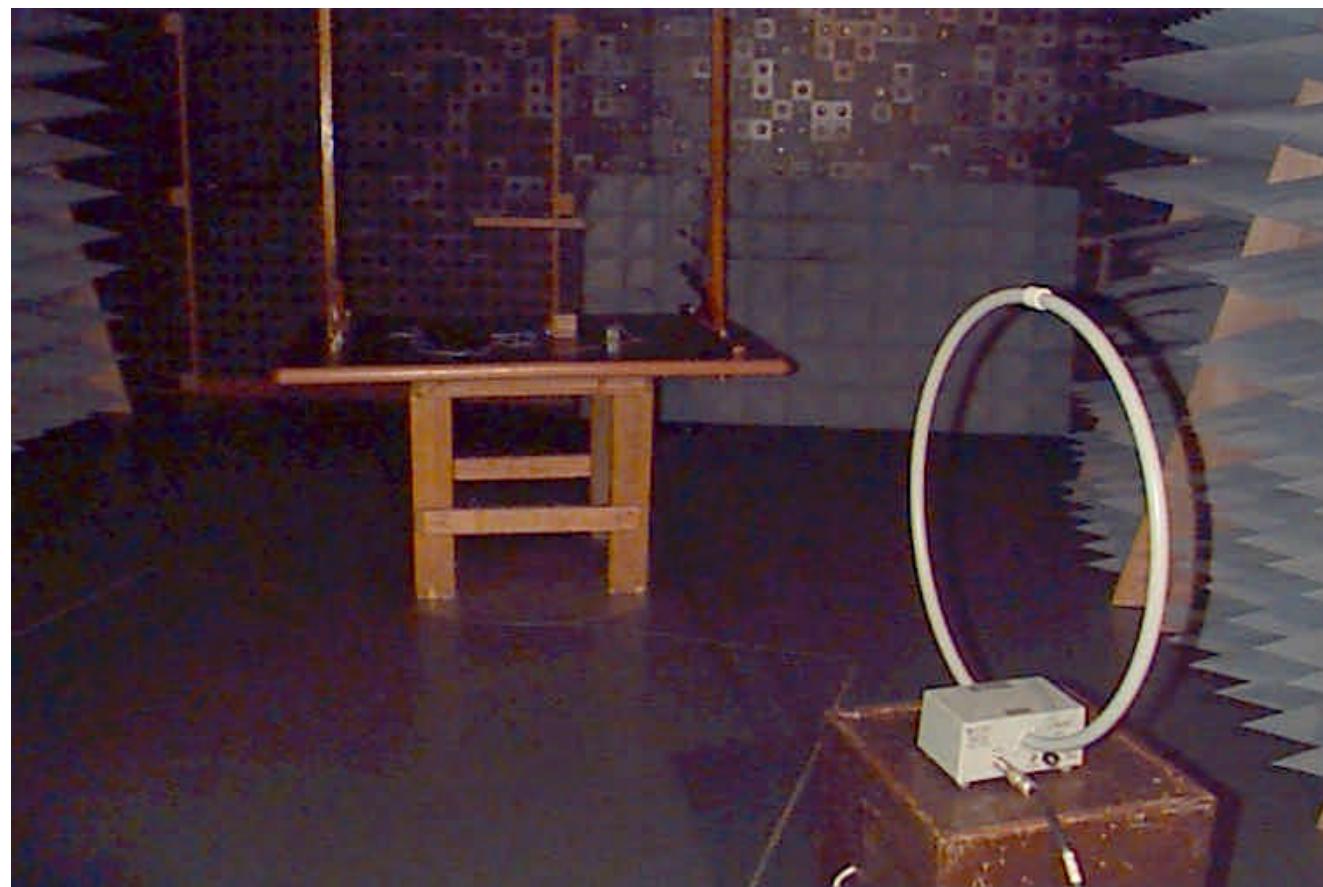

Photograph 3

Spurious emission measurement setup in anechoic chamber,


Biconilog antenna in vertical polarization



Photograph 4

Spurious emission measurement setup in anechoic chamber,

Double ridged guide antenna in vertical polarization

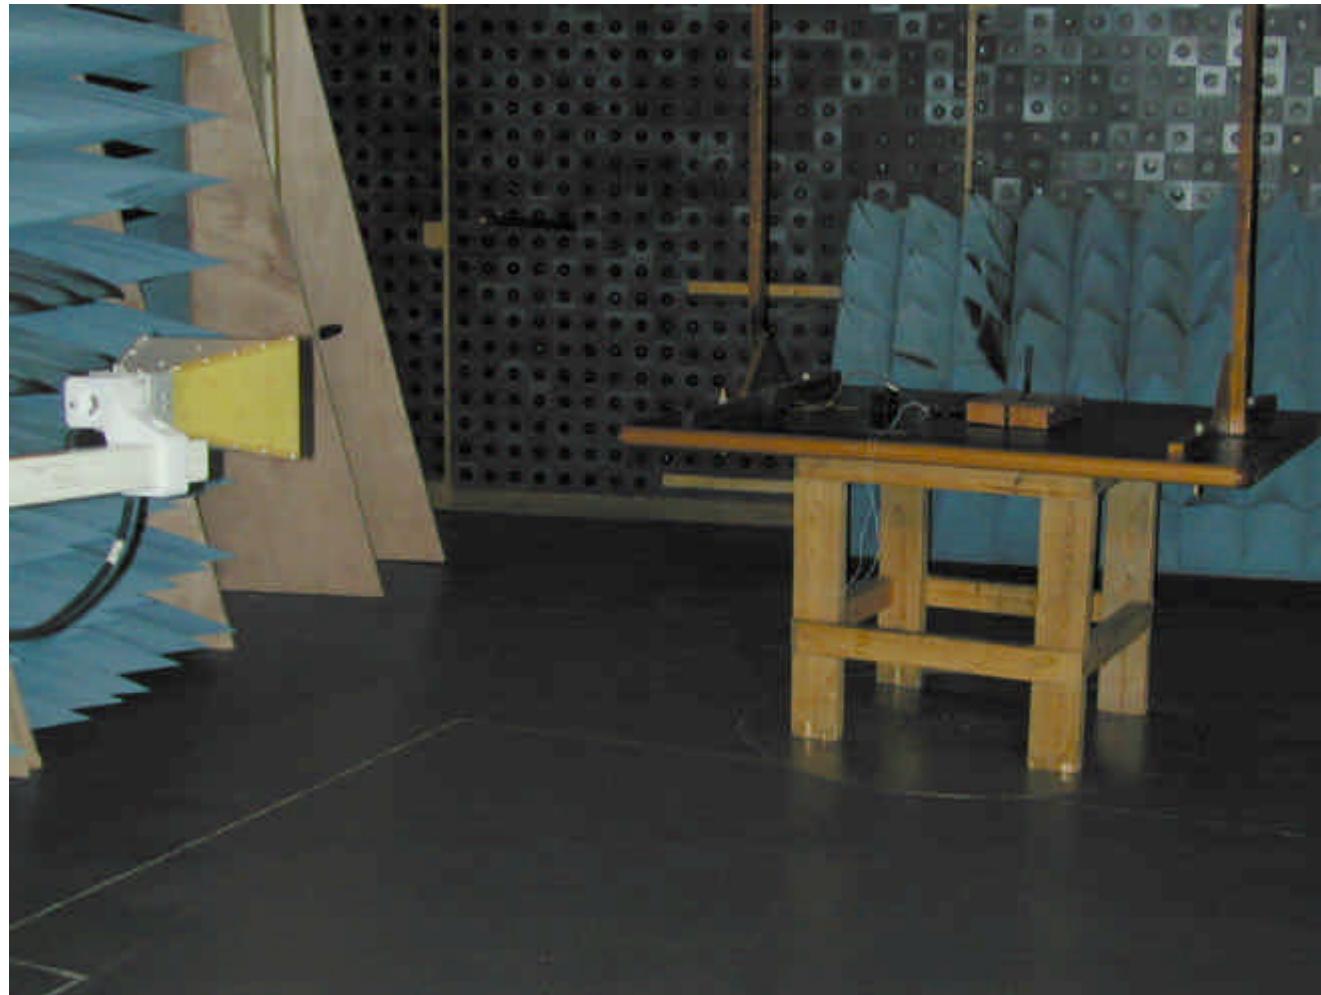

Photograph 5

Spurious emission measurement setup at OATS,

Double ridged guide antenna in vertical polarization

