


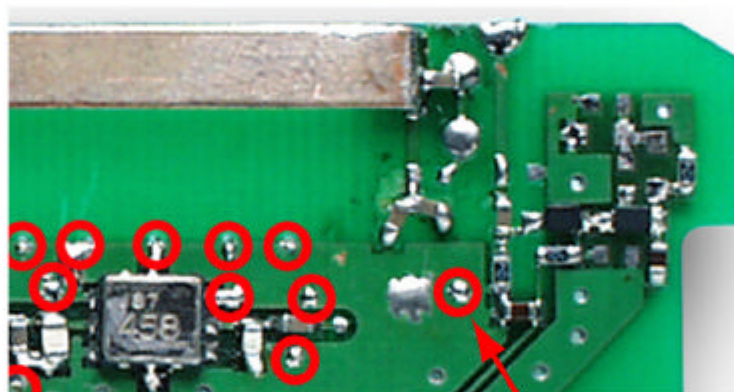


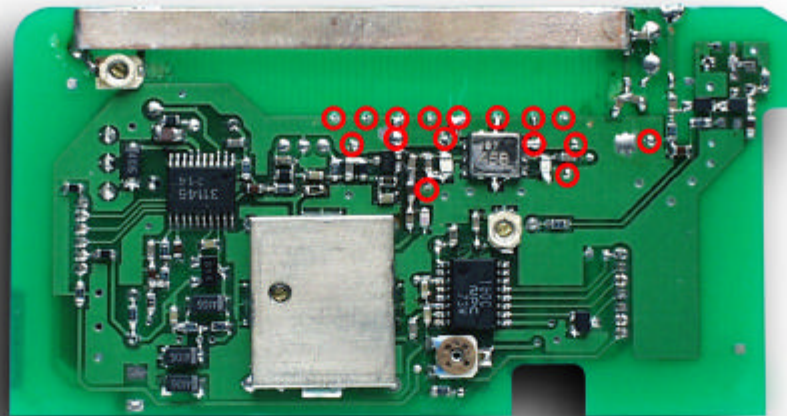


1. Drill a hole 0,5mm wide in diameter.

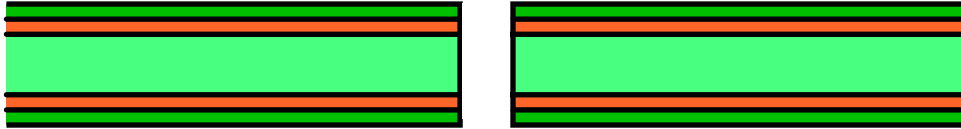

2. Take off solder registry to expose copper foil.

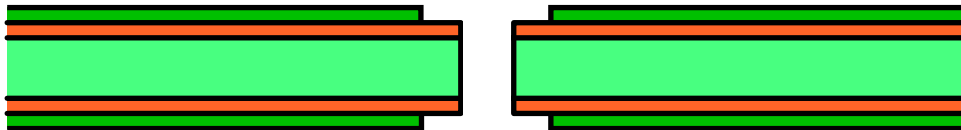

3. Thread 0.2mm wide copper line to connect both PCB.

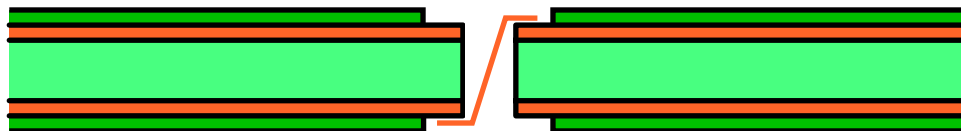

4. Solder the copper line with PCB.

