


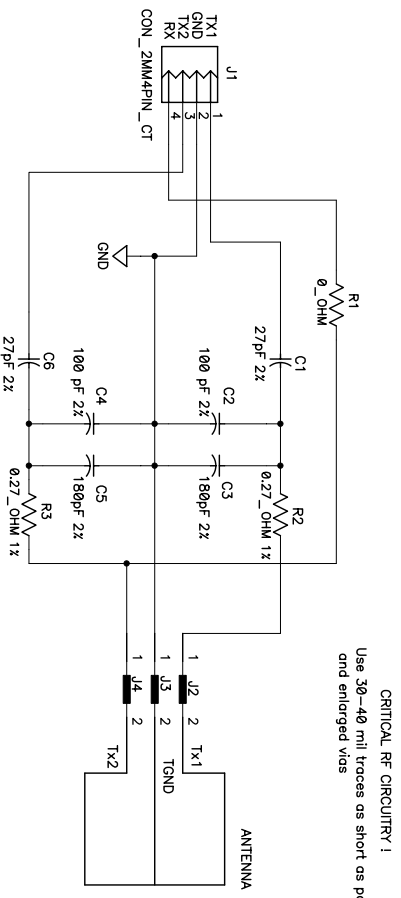

CRITICAL RF CIRCUITRY !
Use 30-40 mil traces as short as possible
and enlarged vias

NOTE 1
Place all the ferrite beads and the resistors tied to a connector as close as possible to the related connector.

FARGO Electronics, Inc.

Title PCB RFID ANTENNA DTC100			
Size B	Number D000365	Rev A	
Date Tue Jul 26, 2005	Drawn by JP		
Filename D000365.sch	Sheet 1	of 1	

