


B. PHOTOGRAPHS OF EMISSION SET-UP

B.1 Radiated Spurious Emissions below 1 GHz



Note : Maintaining 10cm spacing between all the equipment cabinets.

B.2 Radiated Spurious Emissions above 1 GHz

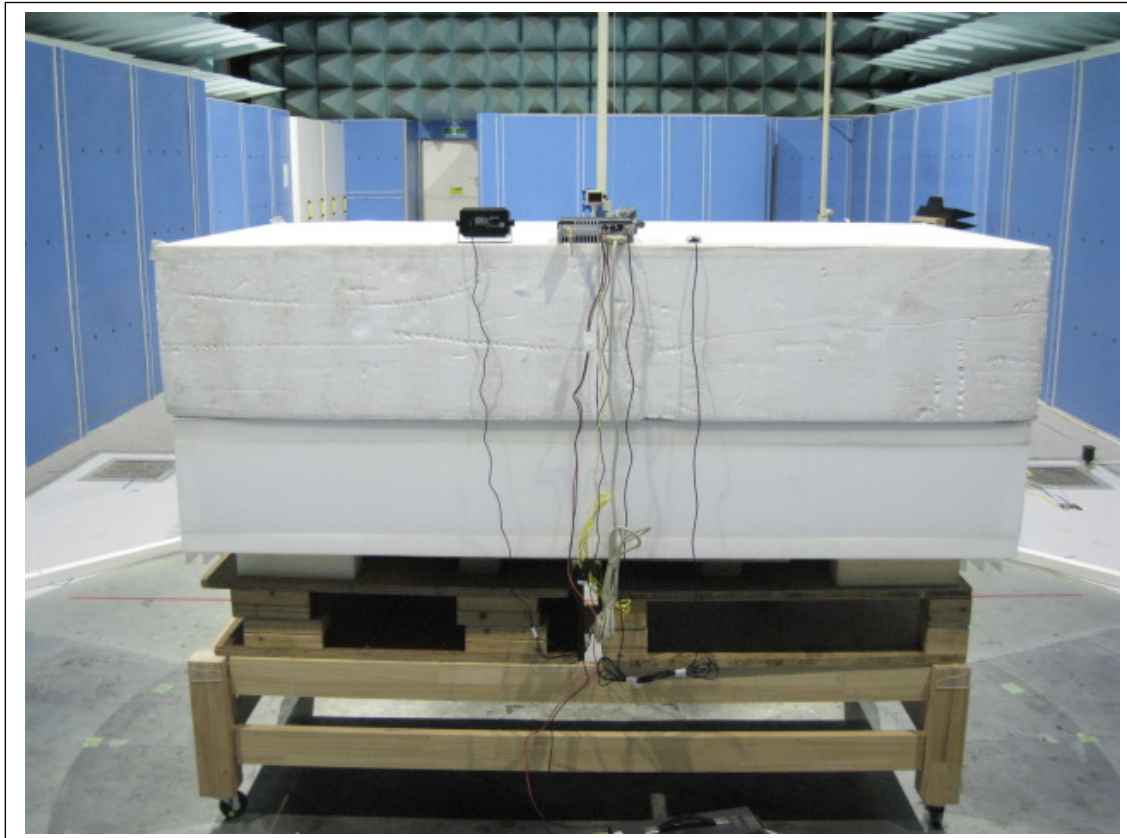

Note : Maintaining 10cm spacing between all the equipment cabinets.

B.3 AC Conducted Emissions



Note : Maintaining 10cm spacing between all the equipment cabinets.