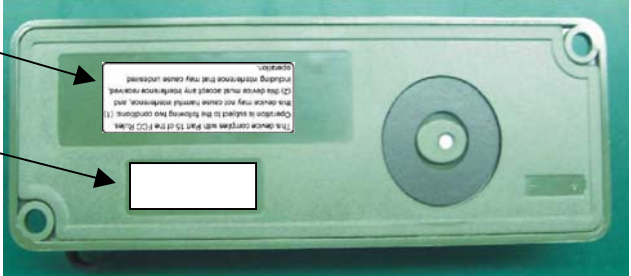


12	Attach the serial number (510-00015-001) of the unit on the Enclosure as shown. NOTE: Make sure to record the serial number of the TAG unit and mate with the two CCA boards (Serial/Power and Main) inside for Tracability purpose.	
13	Location of the Savi Model number label (735-00086-905) on the Enclosure as shown. Same location used for both models. Align the left side of the label to the left edge of the indent wall.	
10	Apply Savi Logo label (735-00085-901) on the unit as shown.	
11	Apply the Caution label (735-00012-001) on the unit as shown. Align the right side of the label to the right edge of the indent wall.	

12 Apply FCC caution label on the bottom side of the tag as shown. Install FCC ID label (P/N 735-00093-006) as shown on the bottom of the Tag.	
---	--