



Photo 1: Phase IV Engineering – AWAVE – WSN – Battery door removed



Photo 2: Phase IV Engineering – AWAVE – WSN – Batteries on battery door

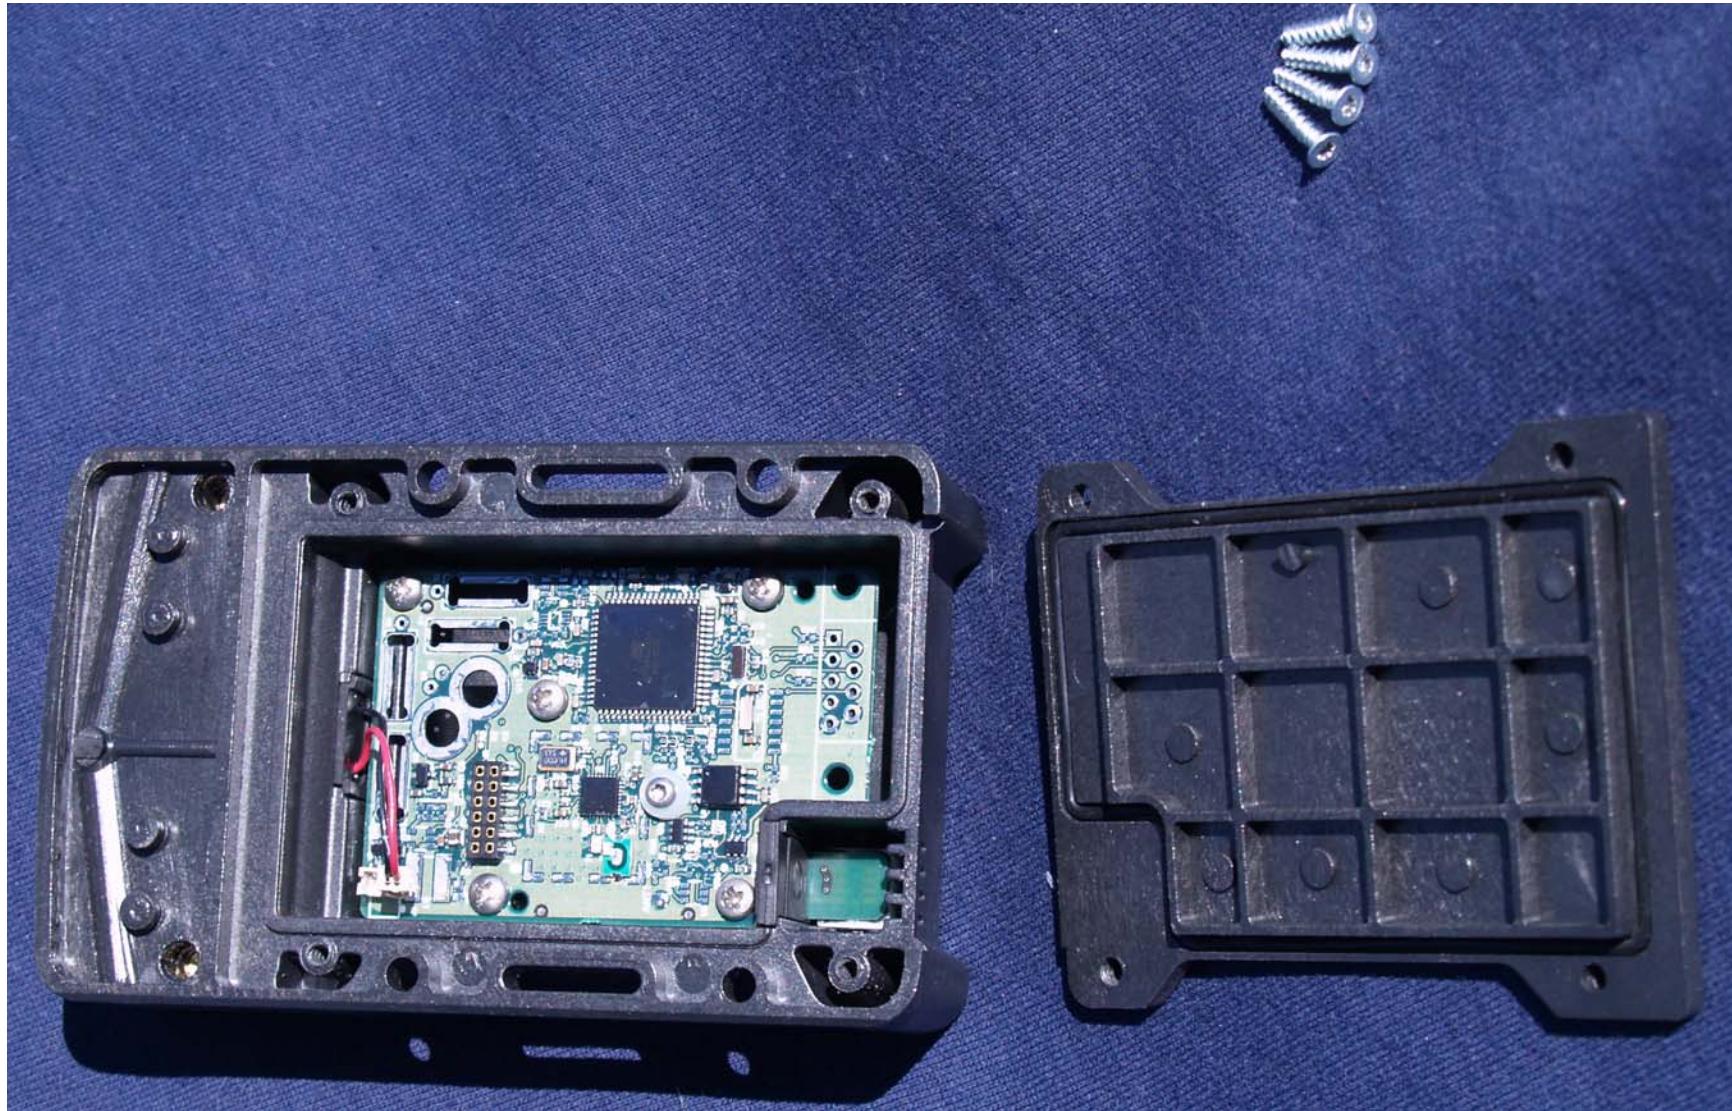


Photo 3: Phase IV Engineering – AWAVE – WSN – Bottom compartment door removed

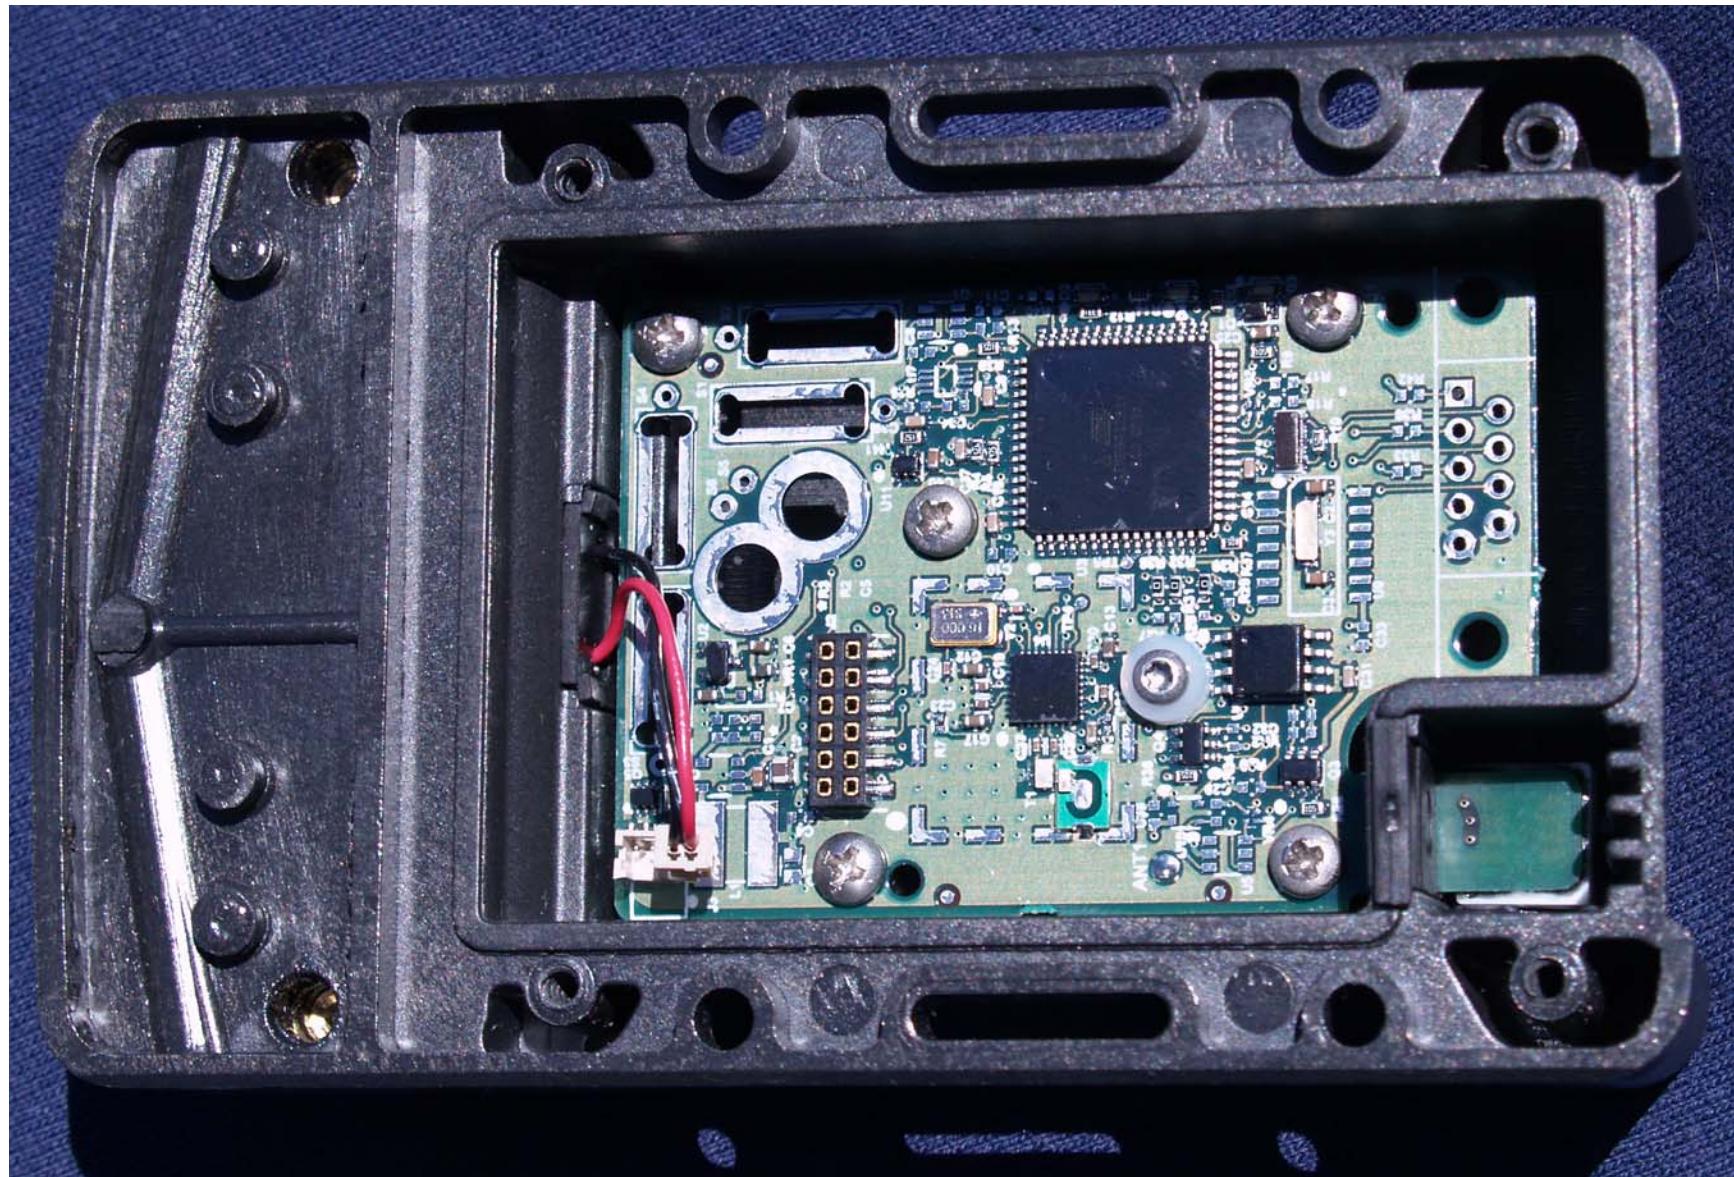


Photo 4: Phase IV Engineering – AWAVE – WSN – PCBA assembled view



Photo 5: Phase IV Engineering – AWAVE – WSN – PCB Removed

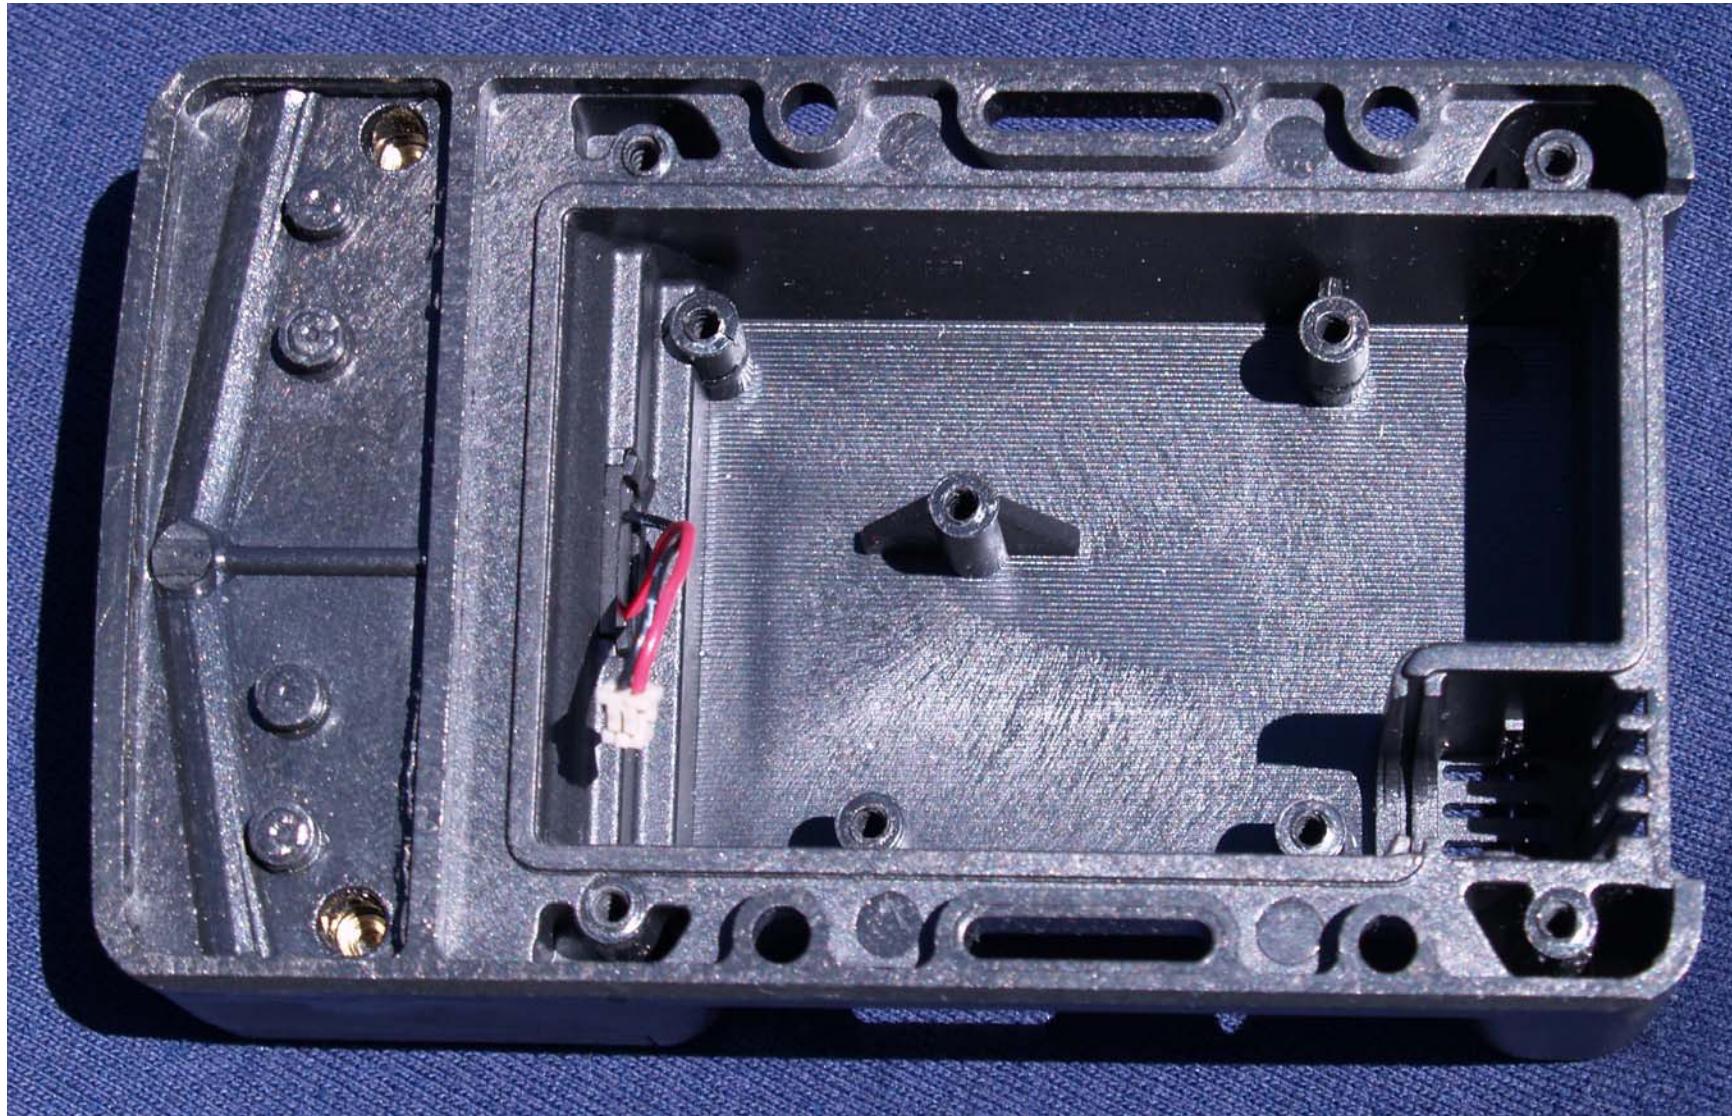


Photo 6: Phase IV Engineering – AWAVE – WSN – Empty case view

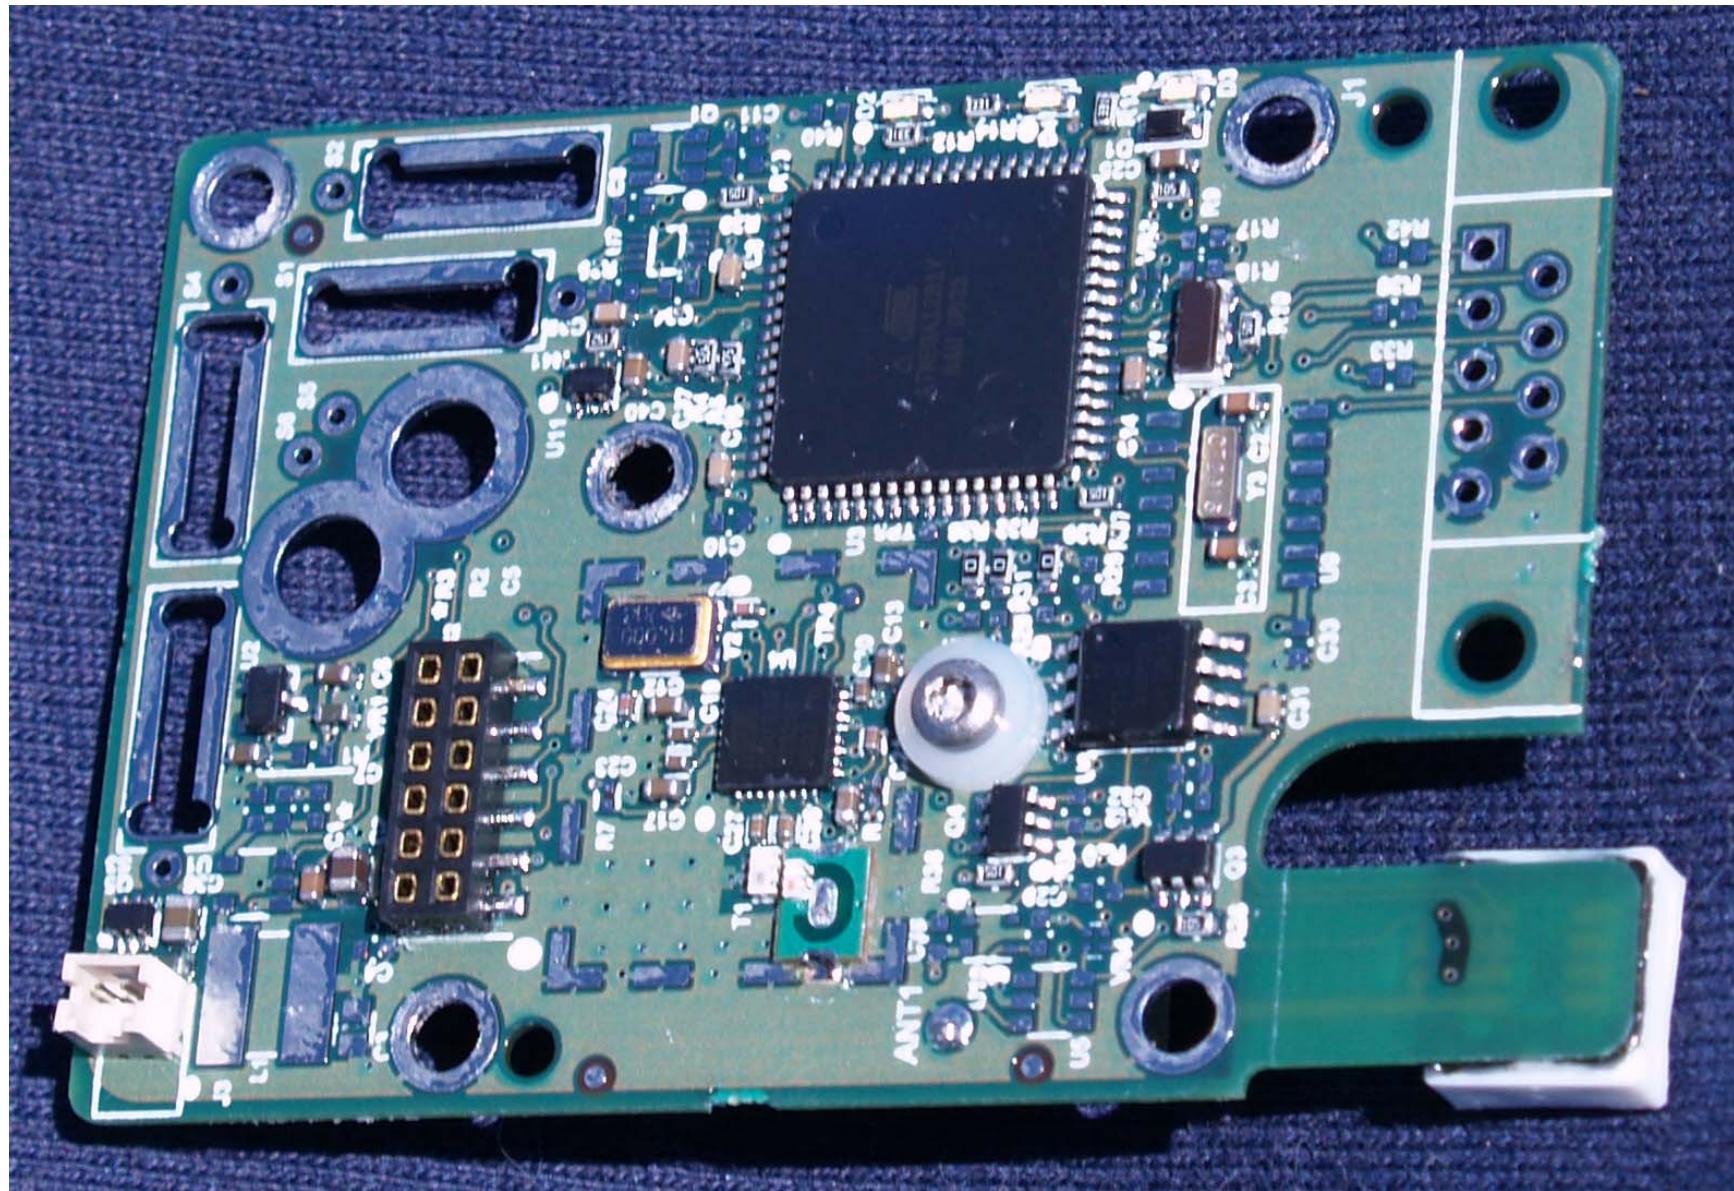


Photo 7: Phase IV Engineering – AWAVE – WSN – PCBA top side

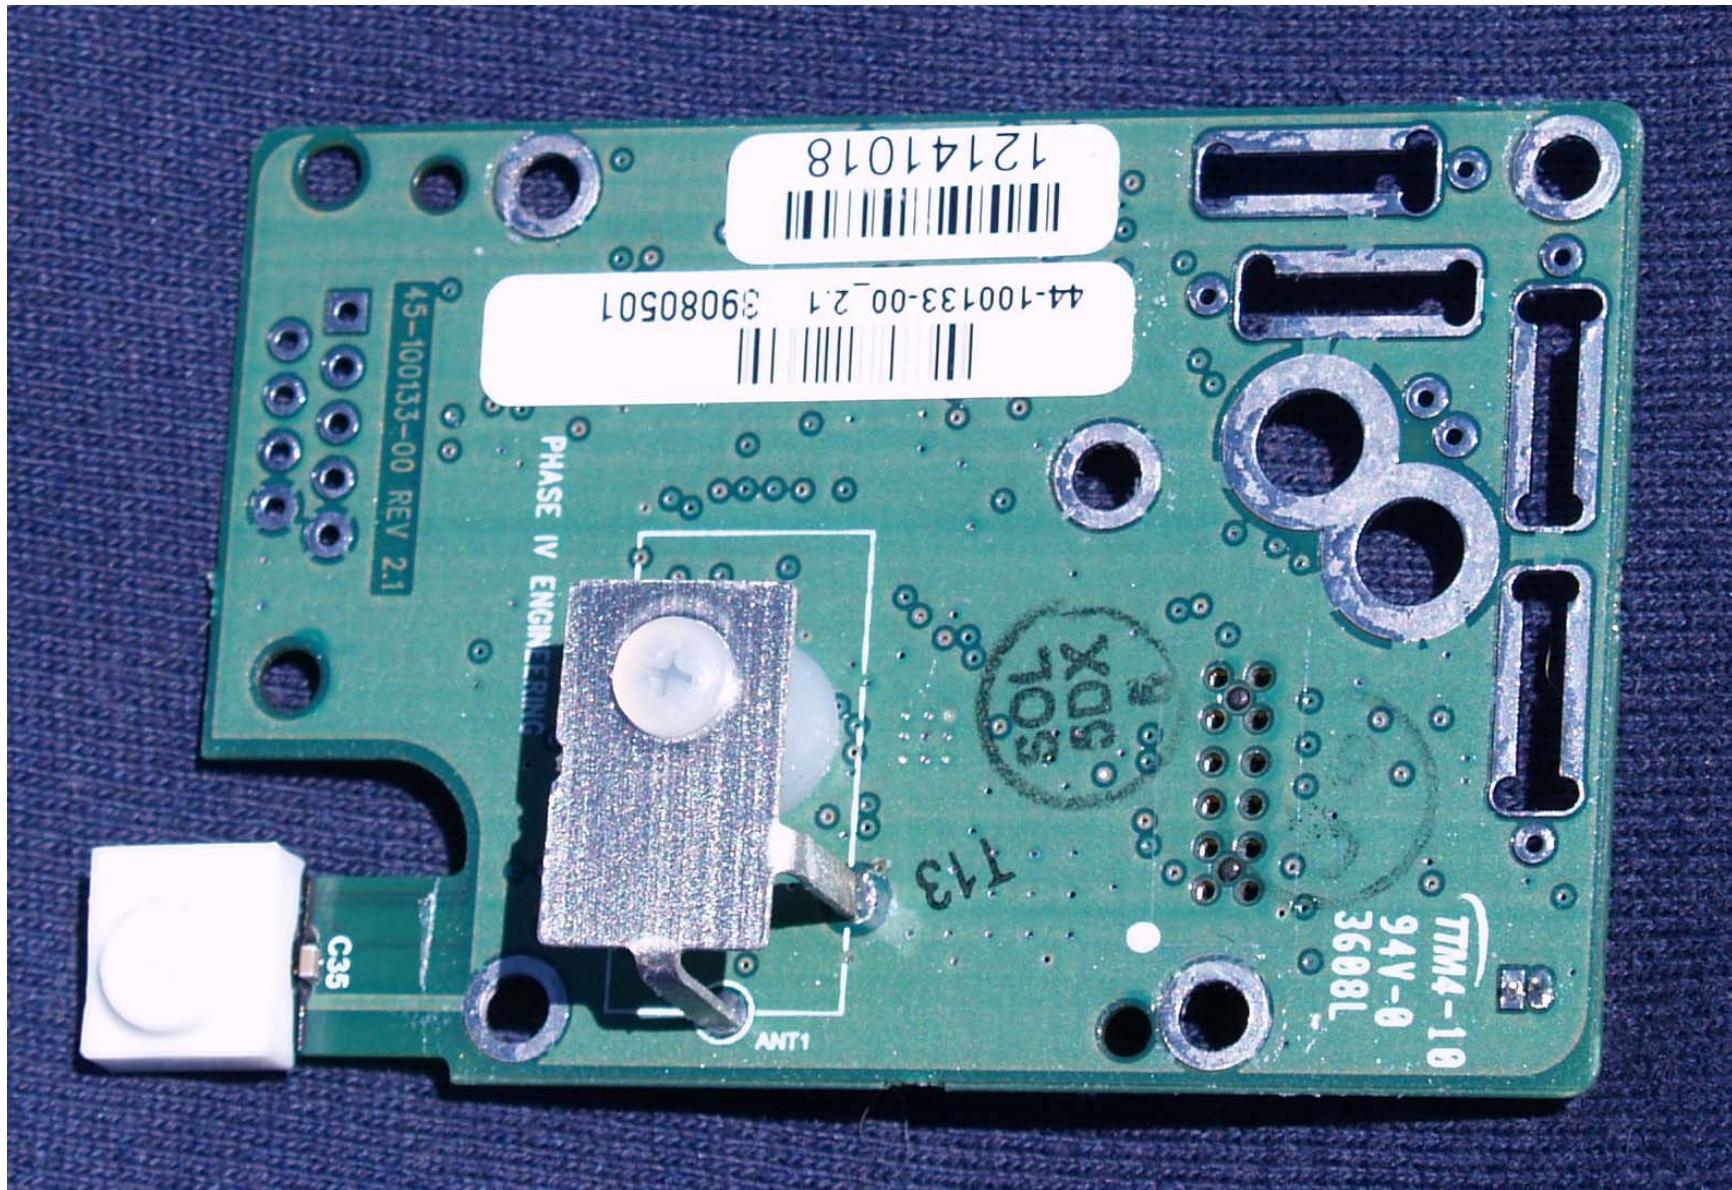


Photo 8: Phase IV Engineering – AWAVE – WSN – PCBA bottom side

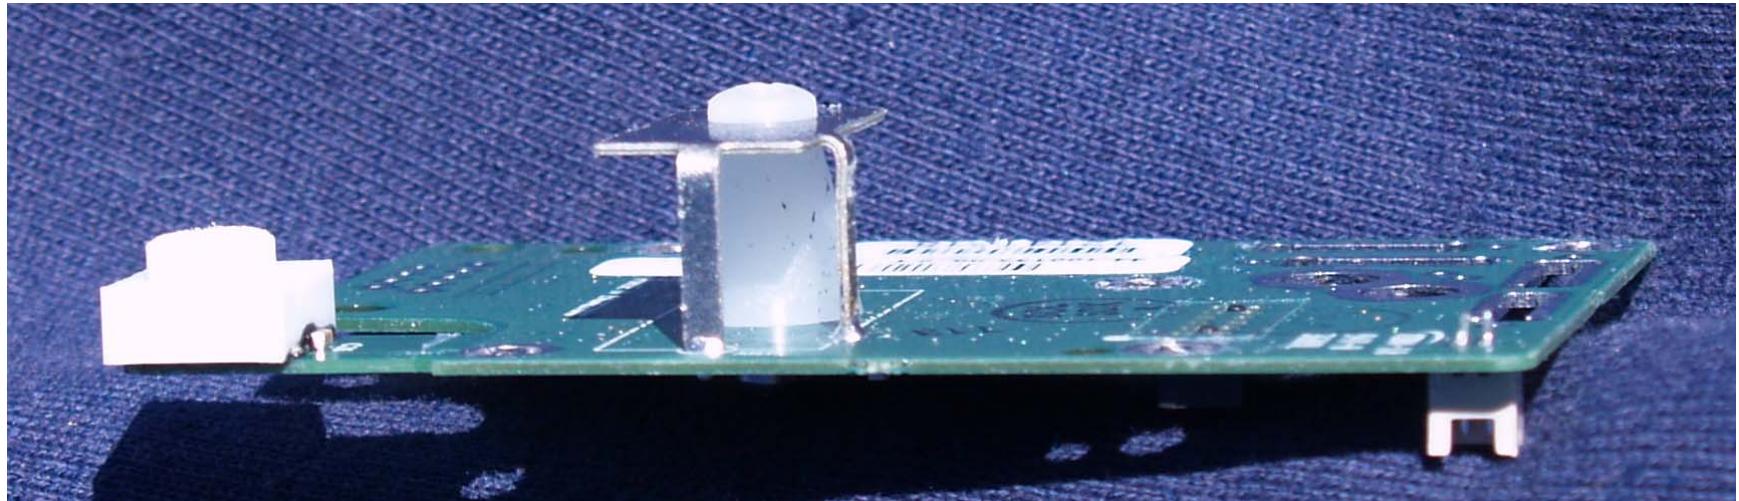


Photo 9: Phase IV Engineering – AWAVE – WSN – PCBA bottom edge-view

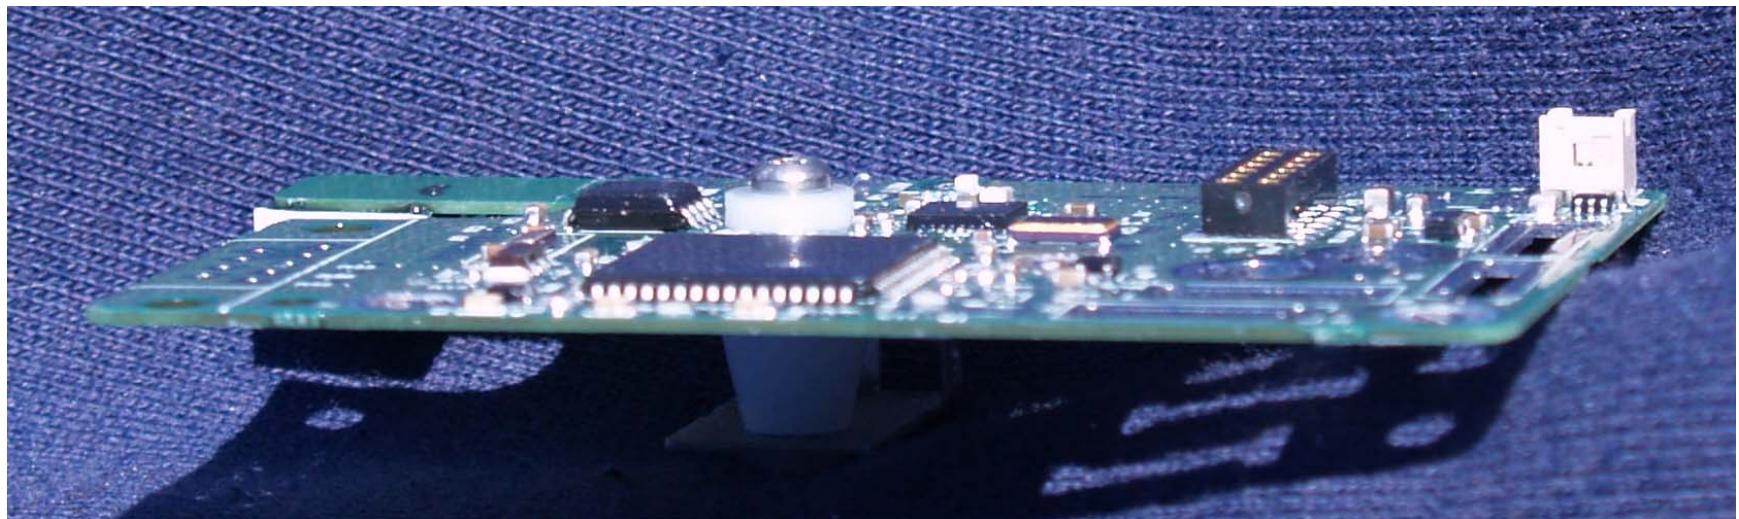


Photo 10: Phase IV Engineering – AWAVE – WSN – PCBA top edge-view