


0627084



RBW 3 MHz Delta 1 [T1]
 *VBW 3 MHz -0.63 dB
 Att 10 dB SWT 110 ms 100.400000 ms

Ref -20 dBm

1 PK
 VIEW

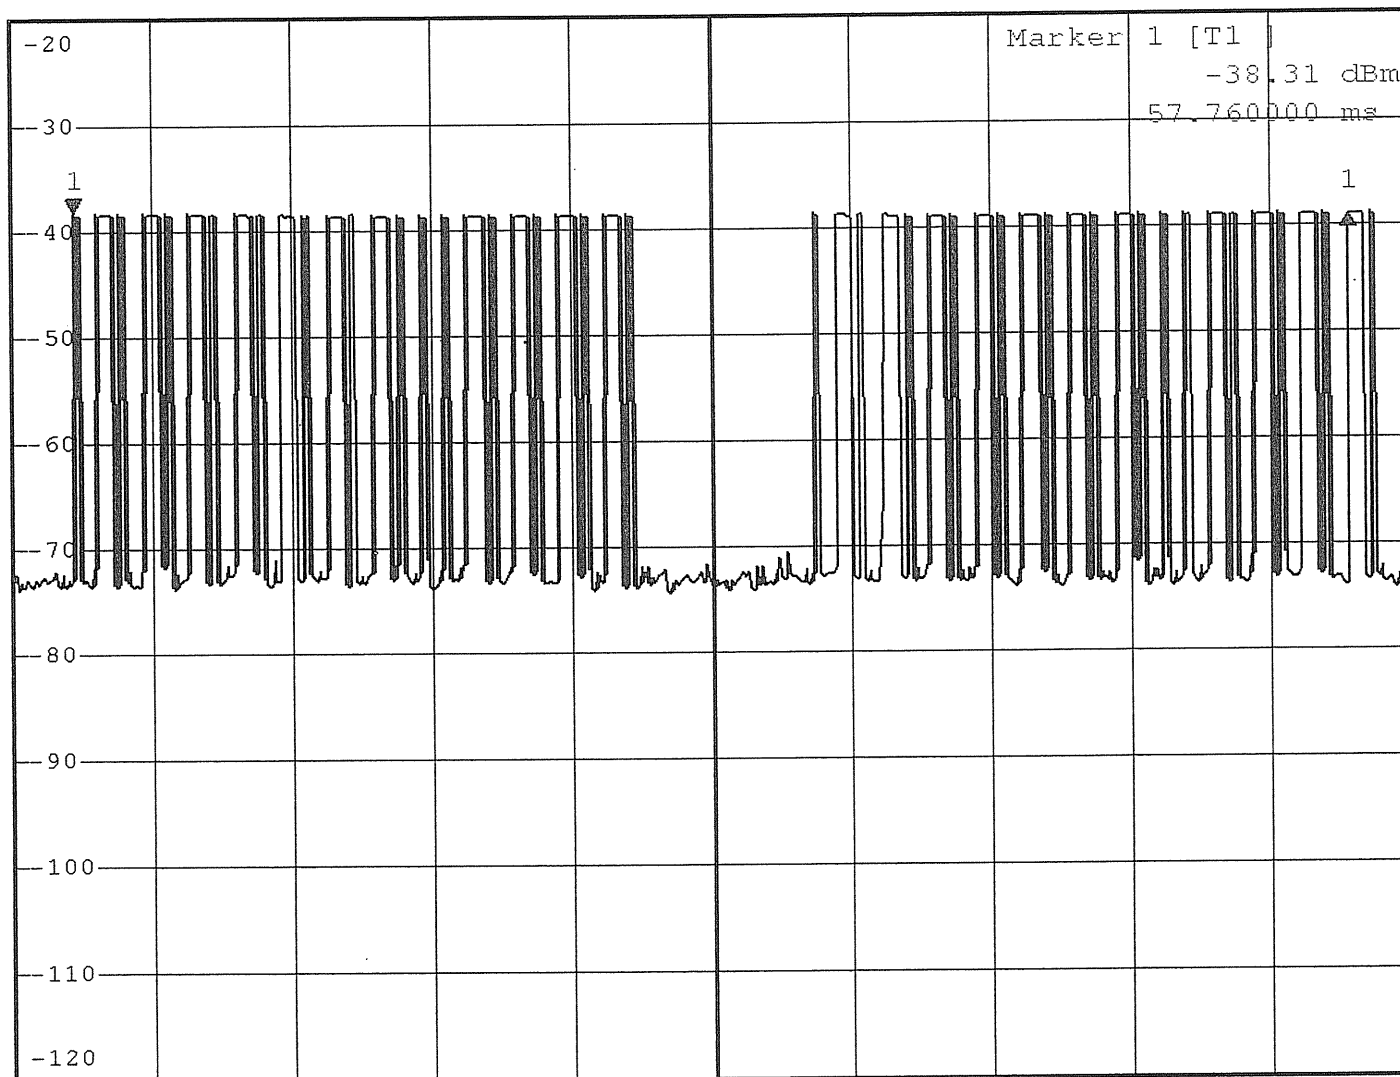

Center 315.38 MHz

11 ms/

SGL

Duty Cycle

$$= \frac{1.4 \text{ ms} \times 21 + 0.5 \text{ ms} \times 27}{100 \text{ ms}}$$

$$= \frac{42.9 \text{ ms}}{100 \text{ ms}}$$

$$= 0.43 //$$

Average Factor

$$= 20 \log 0.43$$

$$= -7.4 \text{ dB}$$

0627084




RBW 3 MHz
* VBW 3 MHz
SWT 10 ms

Ref -20 dBm

Att 10 dB

1 PK *
VIEW

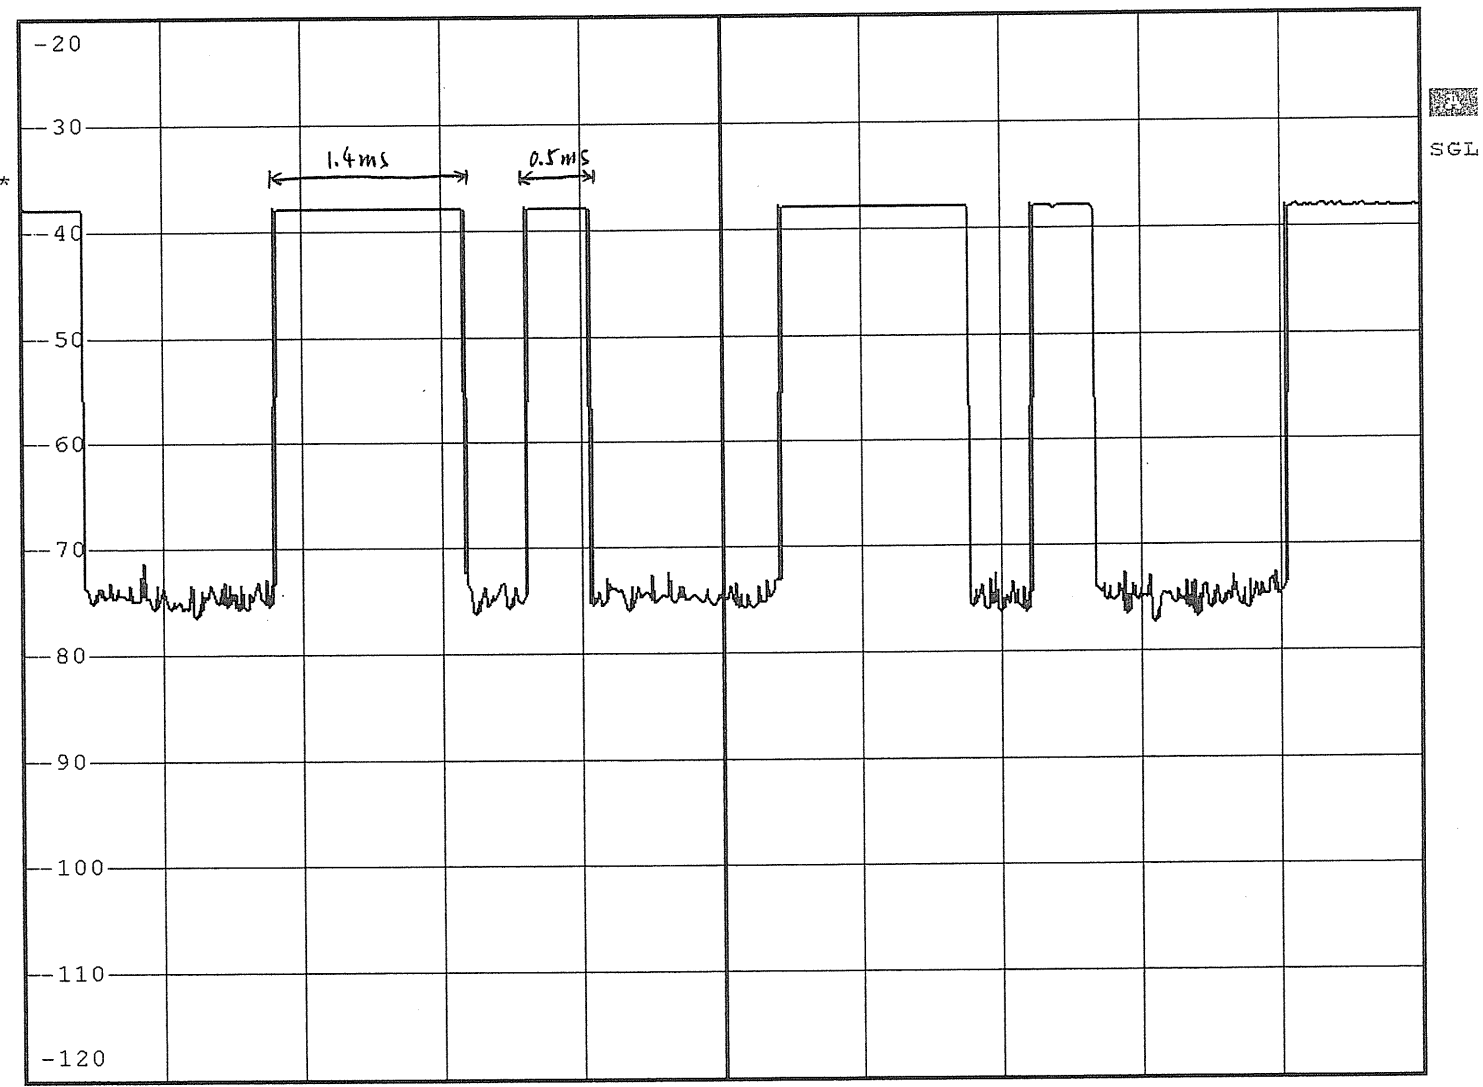

SGL

Center 315.38 MHz

1 ms/

0627084




RBW 3 MHz Marker 1 [T1]
*VBW 3 MHz -39.22 dBm
SWT 500 ms 160.000000 ms

Ref -20 dBm

Att 10 dB

1 PK *
VIEW

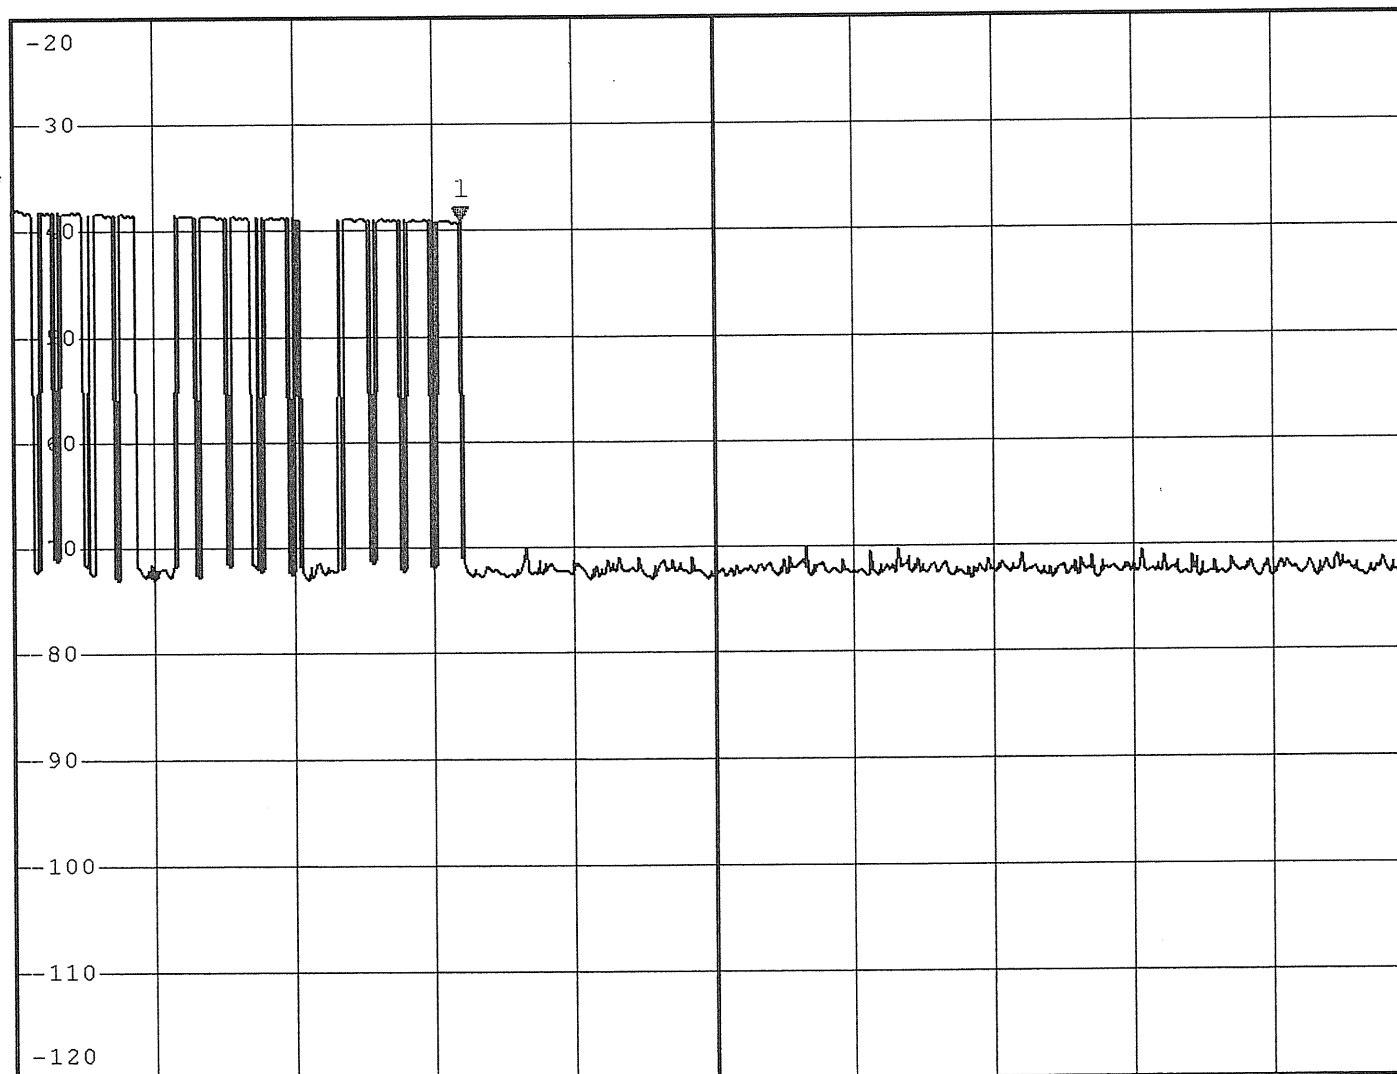

Center 315.38 MHz

50 ms/