


062708B



RBW 3 MHz Delta 1 [T1]
 *VBW 3 MHz -1.26 dB
 Ref -20 dBm Att 10 dB SWT 120 ms 100.140000 ms

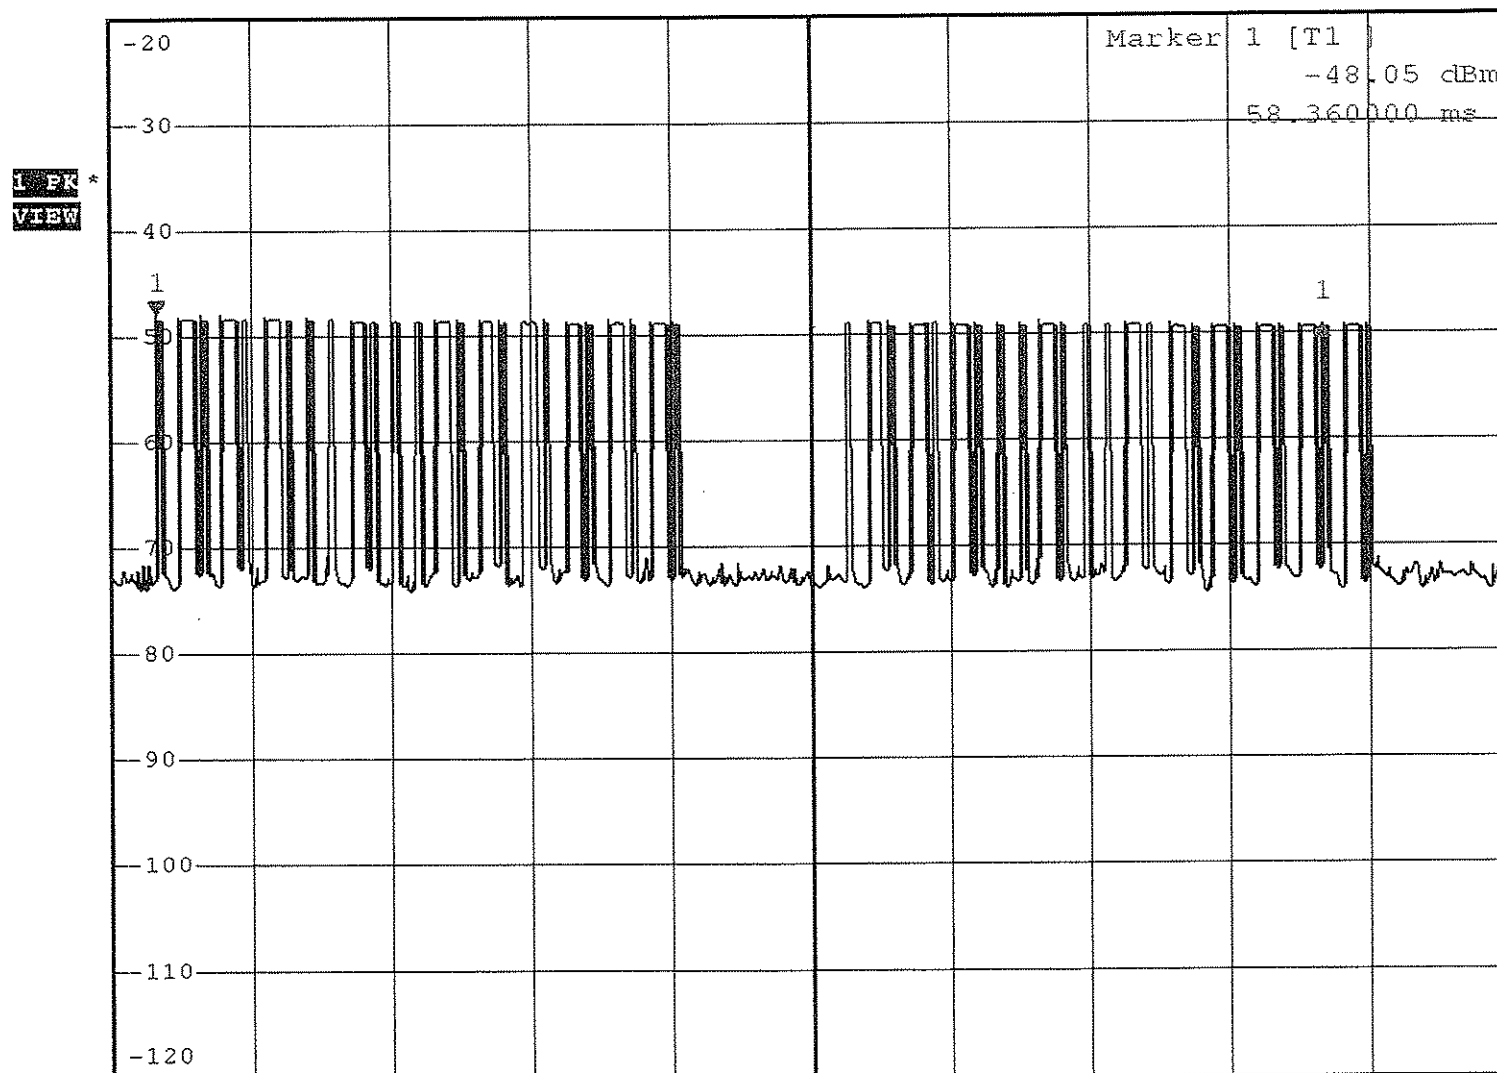

Center 315.134 MHz

12 ms/

SGL

Duty Cycle

$$= \frac{19 \times 1.4 \text{ ms} + 28 \times 0.5 \text{ ms}}{100 \text{ ms}}$$

$$= \frac{40.6 \text{ ms}}{100 \text{ ms}}$$

$$= 0.4$$

Average Factor

$$= 20 \log 0.4$$

$$= -7.8 \text{ dB}$$

0627088




RBW 3 MHz

* VBW 3 MHz

Ref -20 dBm

Att 10 dB

SWT 10 ms

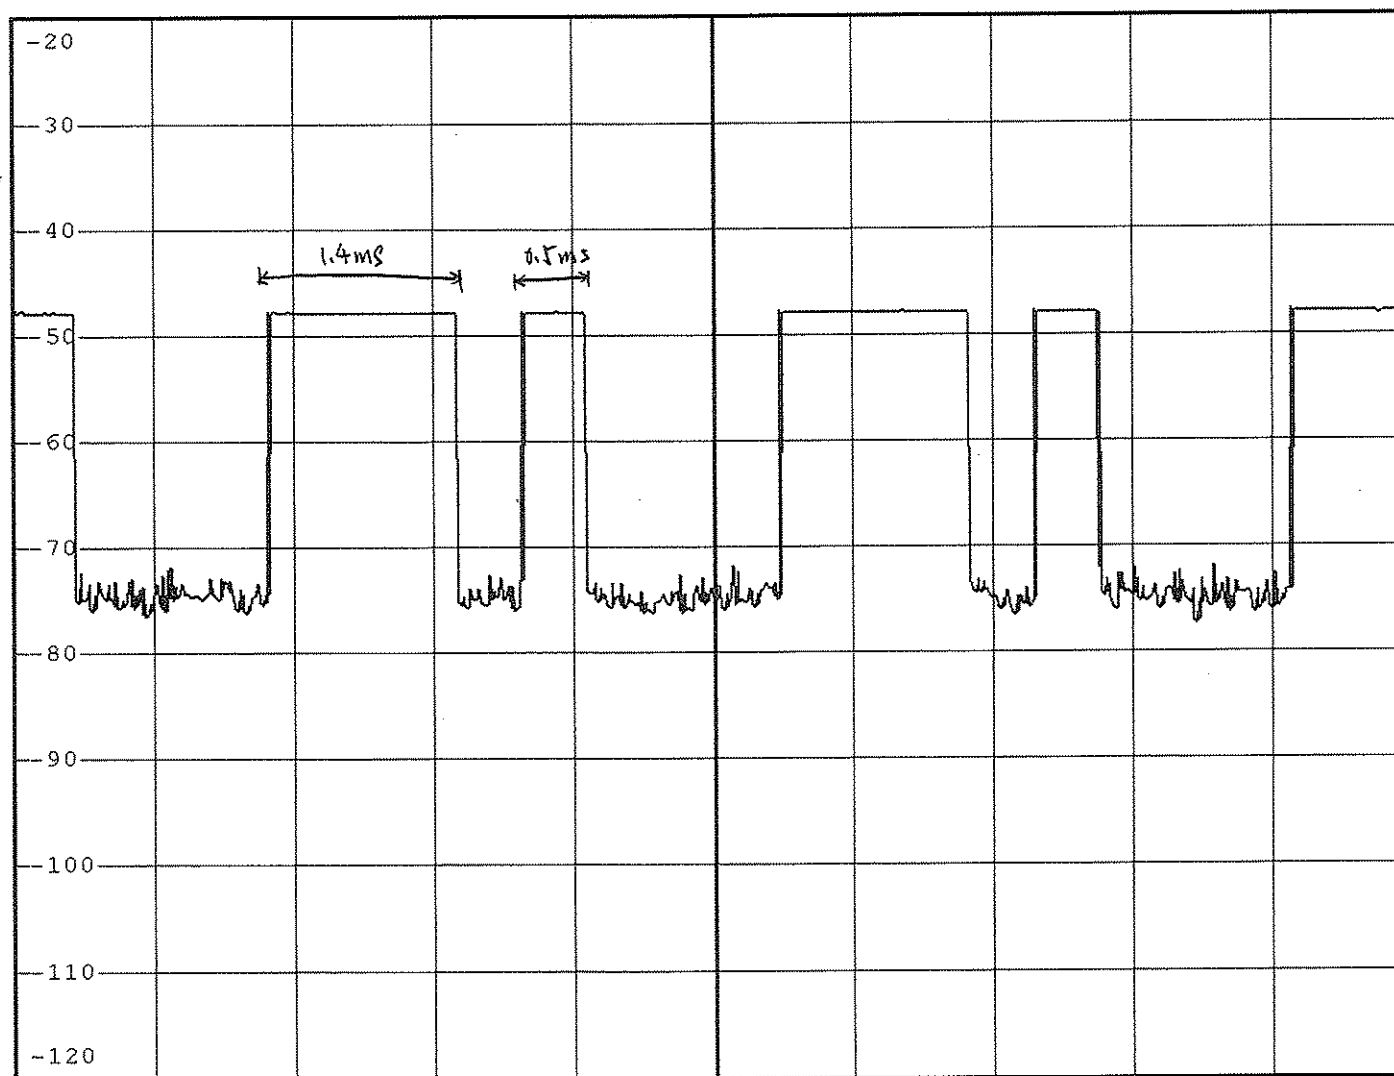1 PK *
VIEW
SGL

Center 315.134 MHz

1 ms/

0627088




RBW 3 MHz Marker 1 [T1]
*VBW 3 MHz -51.68 dBm
SWT 500 ms 157.000000 ms

Ref -20 dBm

Att 10 dB

1 PK *
VIEW

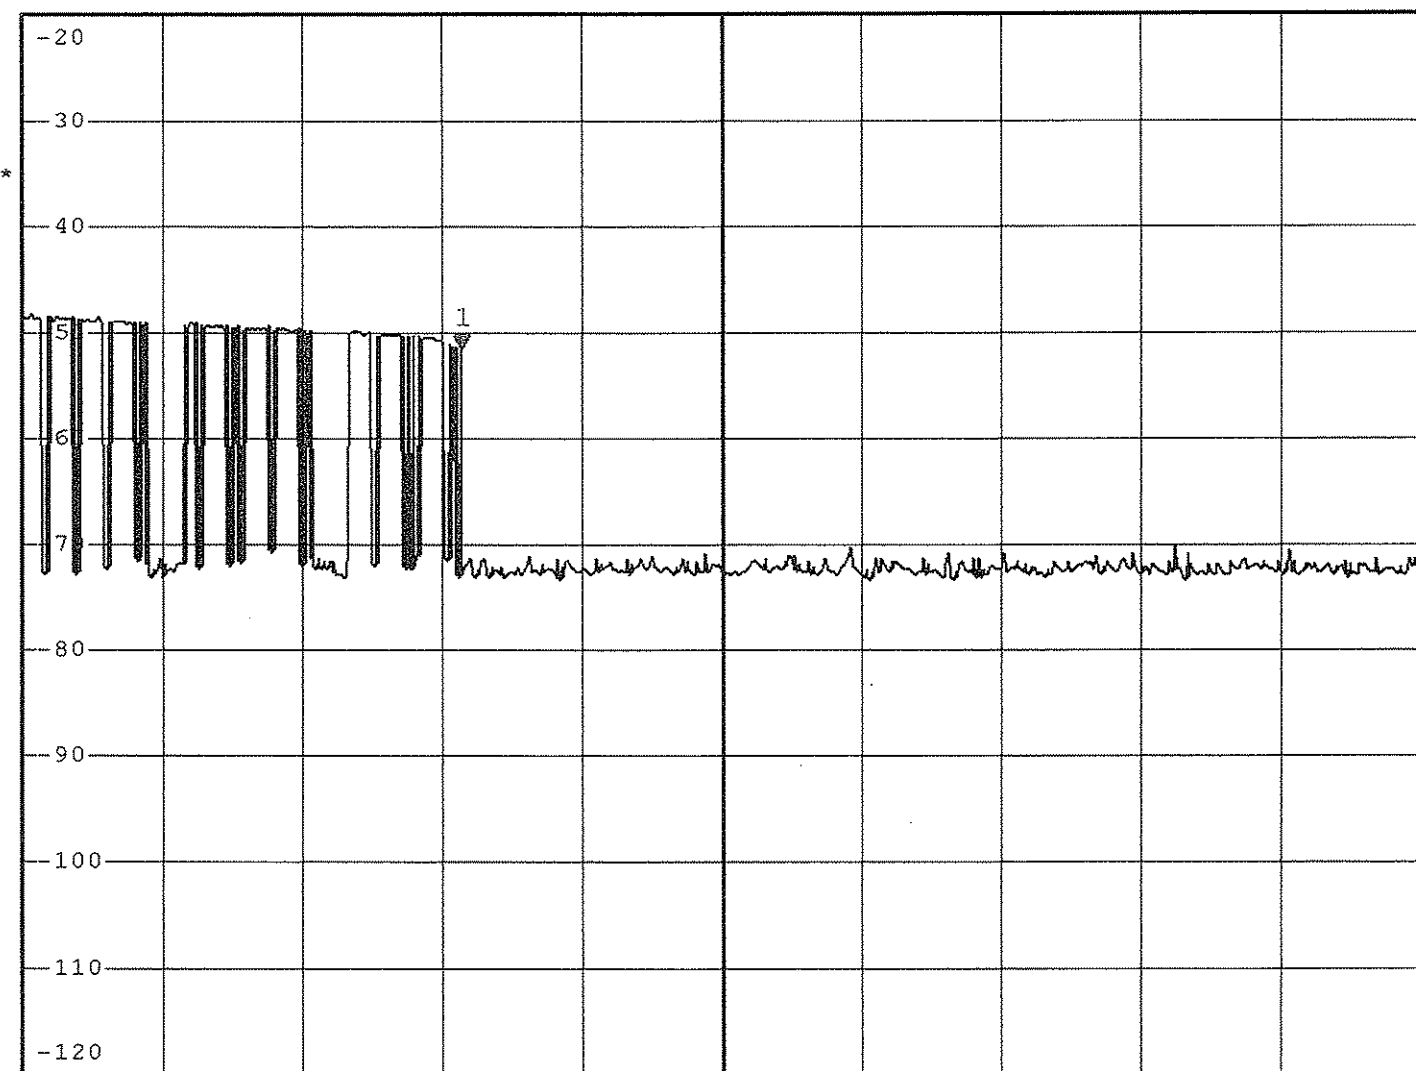

Center 315.134 MHz

50 ms/