


APPENDIX B
: PLOTS OF CONDUCTED EMISSIONS

■ Test Mode: 1024 * 768 / 85Hz

Scan Settings (1 Range)
|----- Frequencies -----| |----- Receiver Settings -----|
Start Stop Step IF BW Detector M-Time Atten Preamp
450k 30M 5k 9k PK 20ms AUTO LN OFF

Final Measurement: x QP
Meas Time: 1 s
Subranges: 25
Acc Margin: 60dB

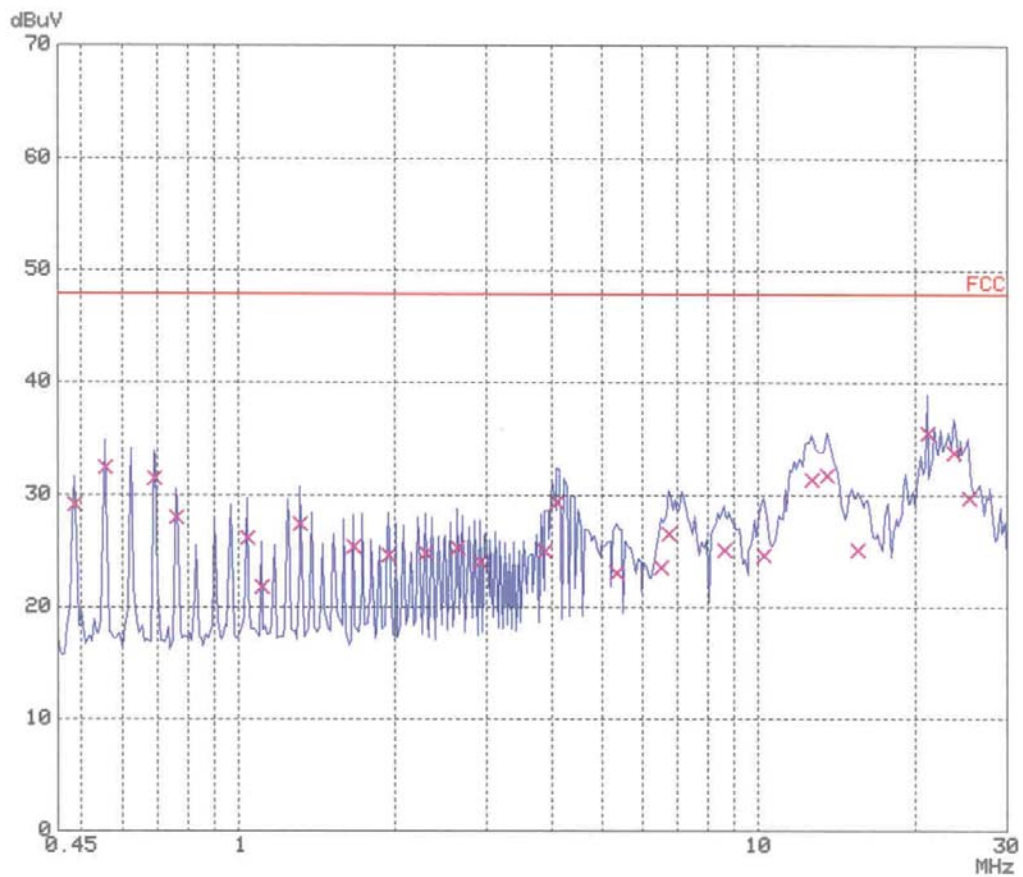


<Hot line>

Scan Settings (1 Range)

Frequencies			Receiver Settings				
Start	Stop	Step	IF BW	Detector	M-Time	Atten	Preamp
450k	30M	5k	9k	PK	20ms	AUTO LN	OFF


Final Measurement: x QP
Meas Time: 1 s
Subranges: 25
Acc Margin: 60dB

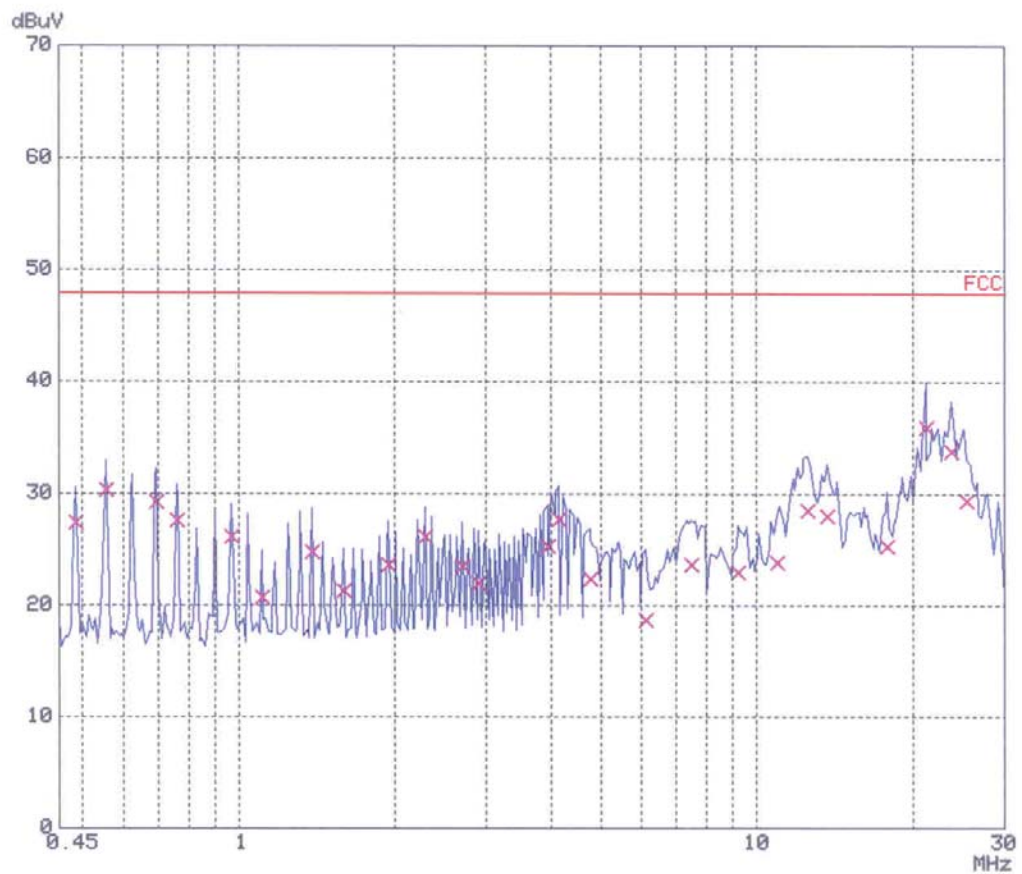

<Neutral line>

■ Test Mode: 800 * 600 / 75Hz

Scan Settings (1 Range)
|----- Frequencies -----| |----- Receiver Settings -----|
Start Stop Step IF BW Detector M-Time Atten Preamp
450k 30M 5k 9k PK 20ms AUTO LN OFF
Final Measurement: x QP
Meas Time: 1 s
Subranges: 25
Acc Margin: 60dB

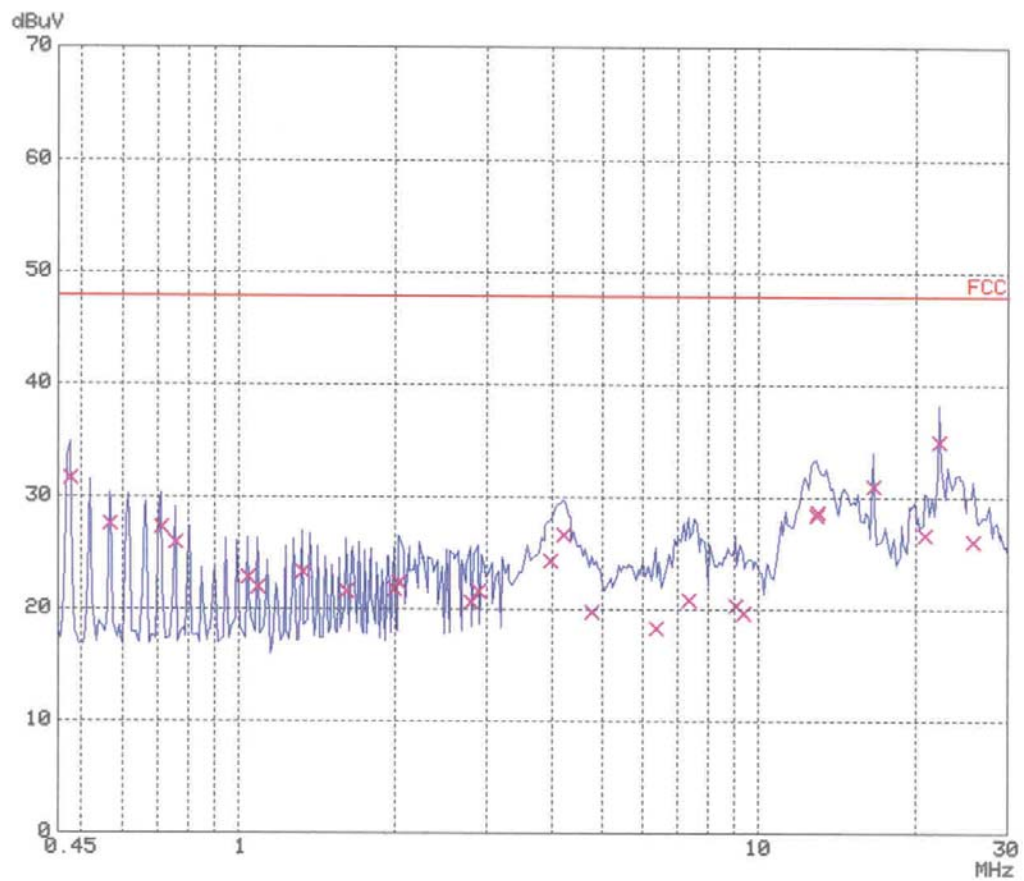


<Hot line>

Scan Settings (1 Range)

Frequencies			Receiver Settings				
Start	Stop	Step	IF BW	Detector	M-Time	Atten	Preamp
450k	30M	5k	9k	PK	20ms	AUTO	LN OFF


Final Measurement: x QP
Meas Time: 1 s
Subranges: 25
Acc Margin: 60dB

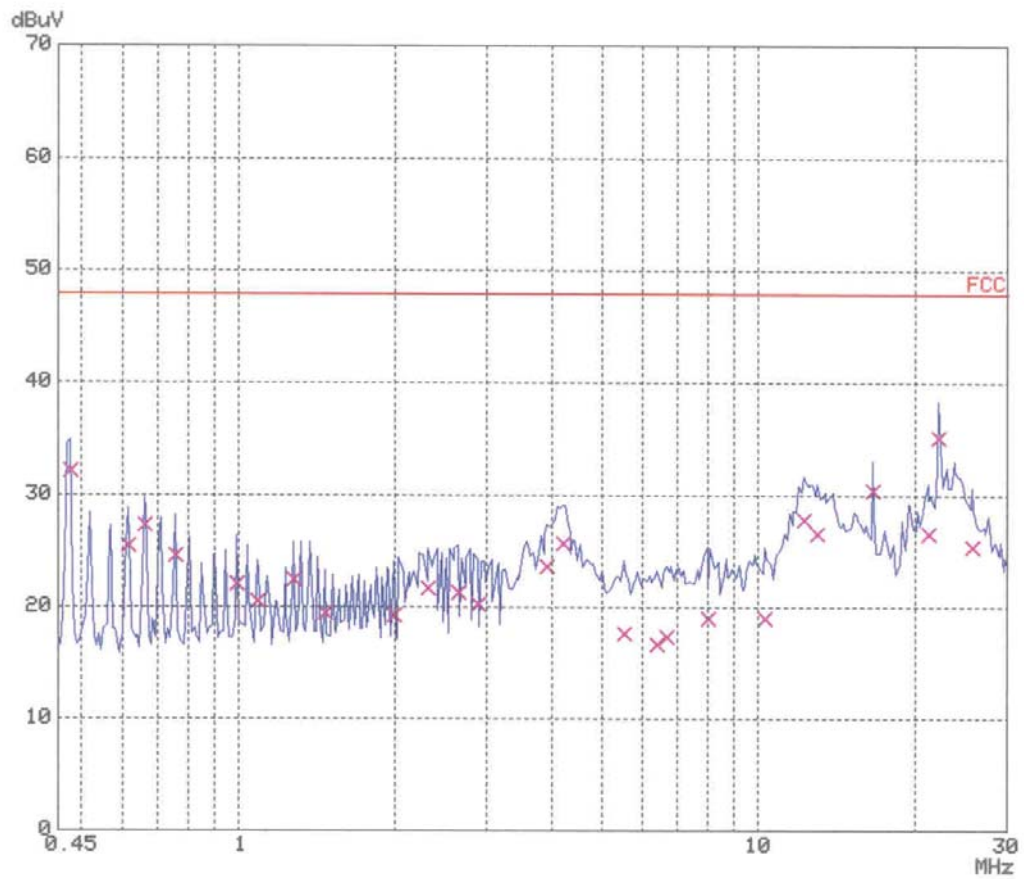

<Neutral line>

■ Test Mode: 640 * 480 / 60Hz

Scan Settings (1 Range)
|----- Frequencies -----| |----- Receiver Settings -----|
Start Stop Step IF BW Detector M-Time Atten Preamp
450k 30M 5k 9k PK 20ms AUTO LN OFF
Final Measurement: x QP
Meas Time: 1 s
Subranges: 25
Acc Margin: 60dB

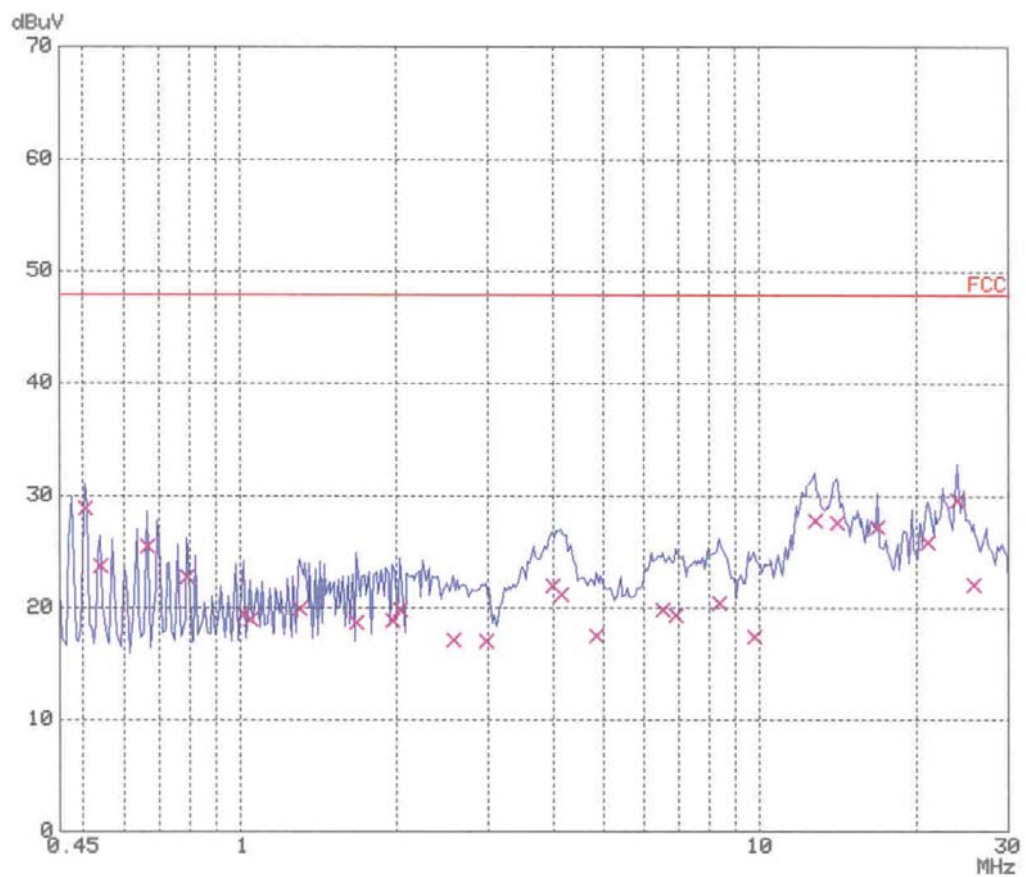


<Hot line>

Scan Settings (1 Range)

Frequencies			Receiver Settings				
Start	Stop	Step	IF BW	Detector	M-Time	Atten	Preamp
450k	30M	5k	9k	PK	20ms	AUTO LN	OFF

Final Measurement: x QP
Meas Time: 1 s
Subranges: 25
Acc Margin: 60dB

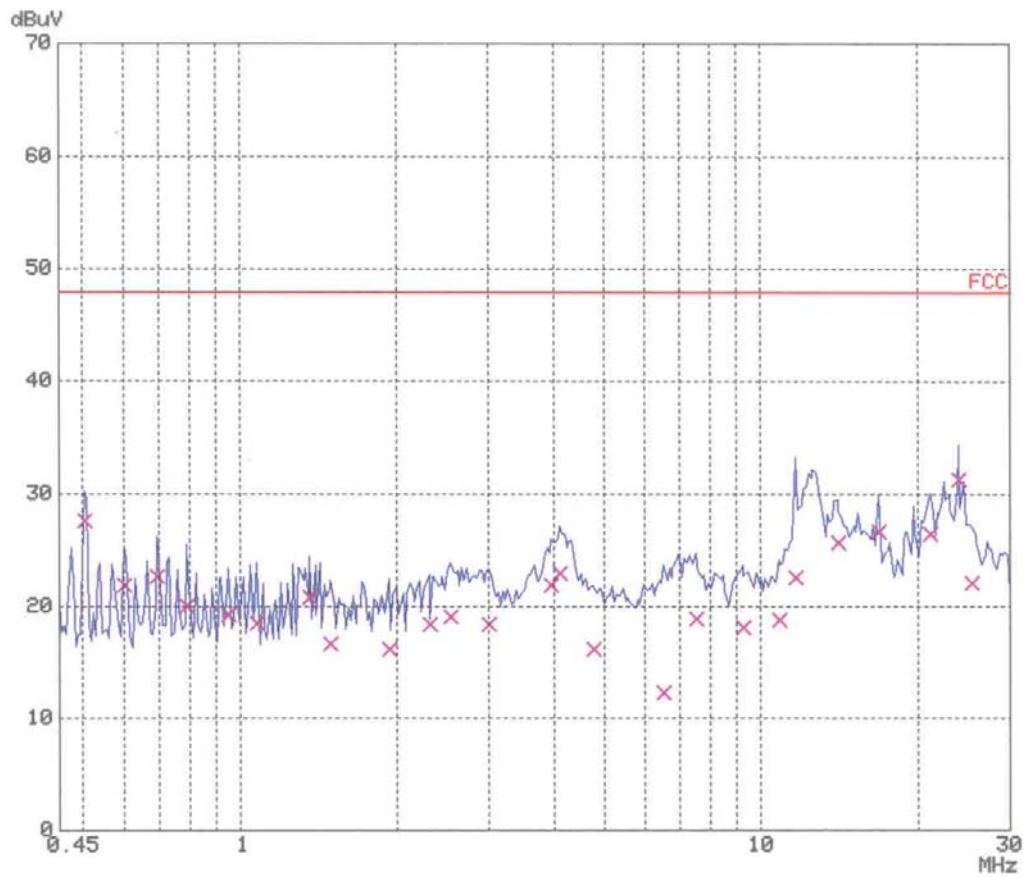

<Neutral line>