


15 December 2015

Silver Spring Networks
Test Setup


SSNT108 FCC IC
Model: NIC 510

Test Setup:


Tx Spurious 1-18 GHz Integral Back

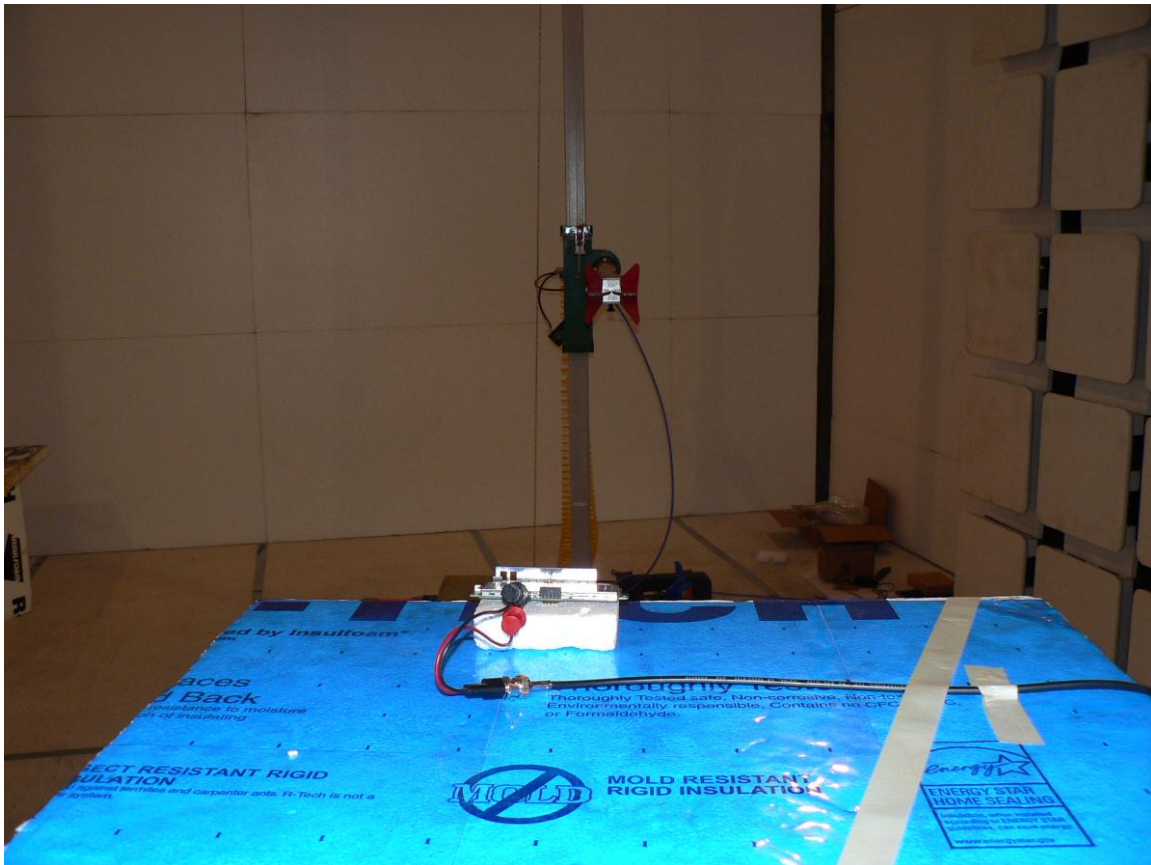


Tx Spurious 1-18 GHz Integral Close-up

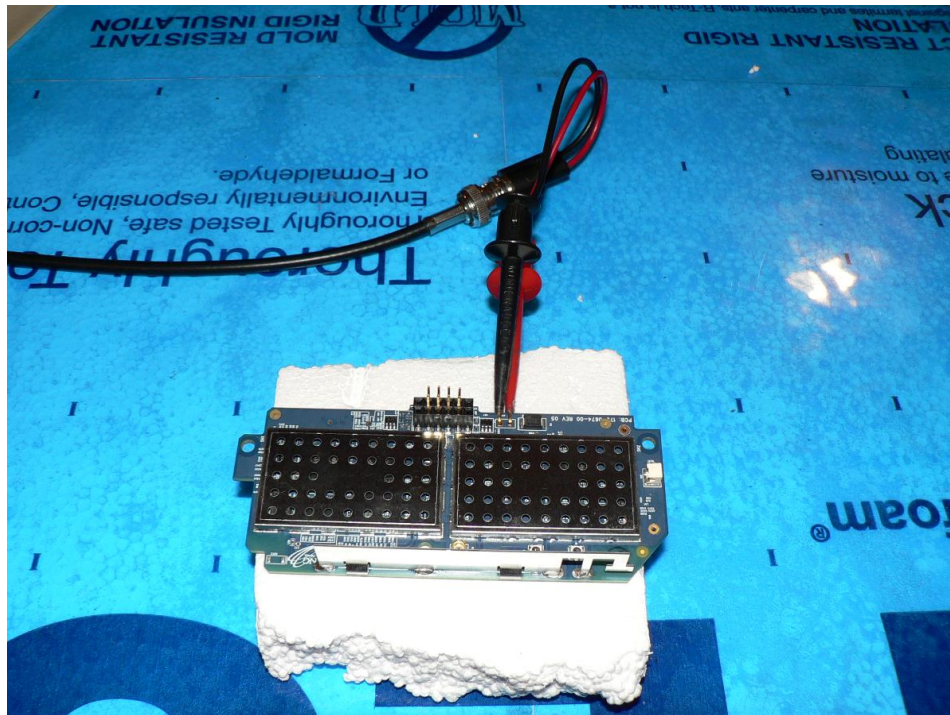


Tx Spurious Integral Close-up Back

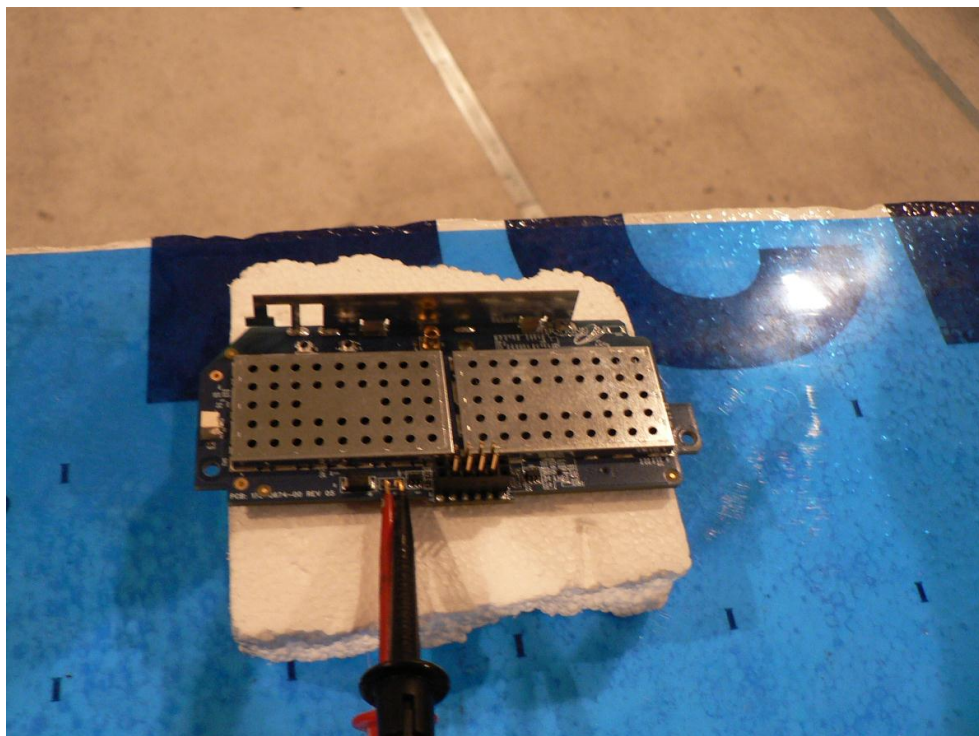

Tx Spurious 1-18 GHz Integral Front

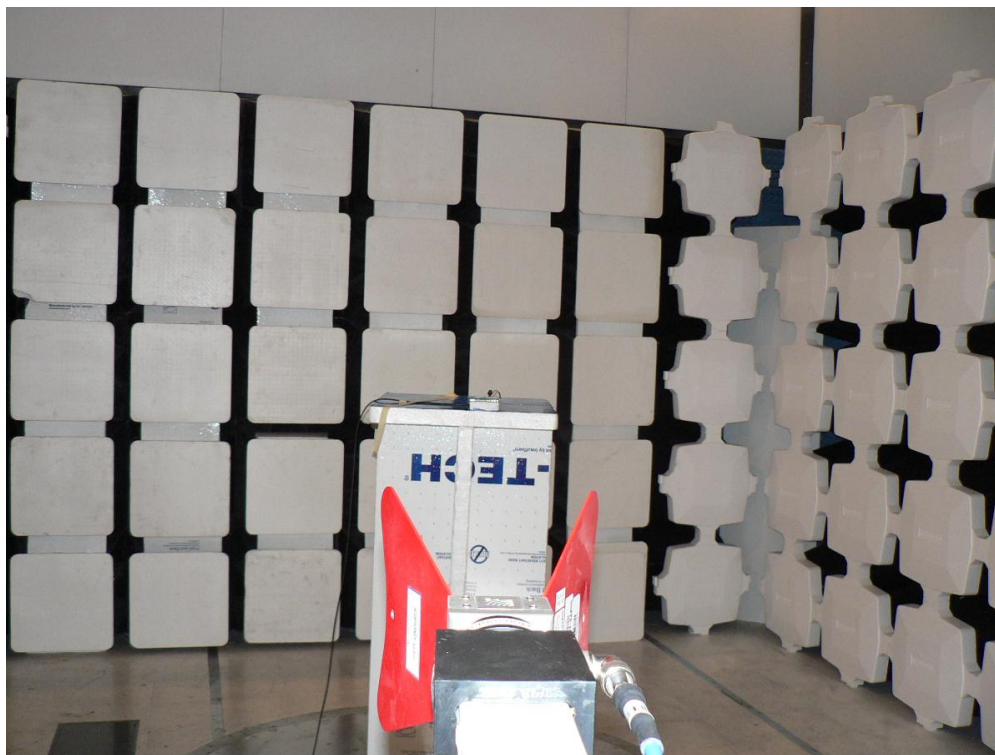

Tx Spurious 1-18 GHz WPANT30017 Back

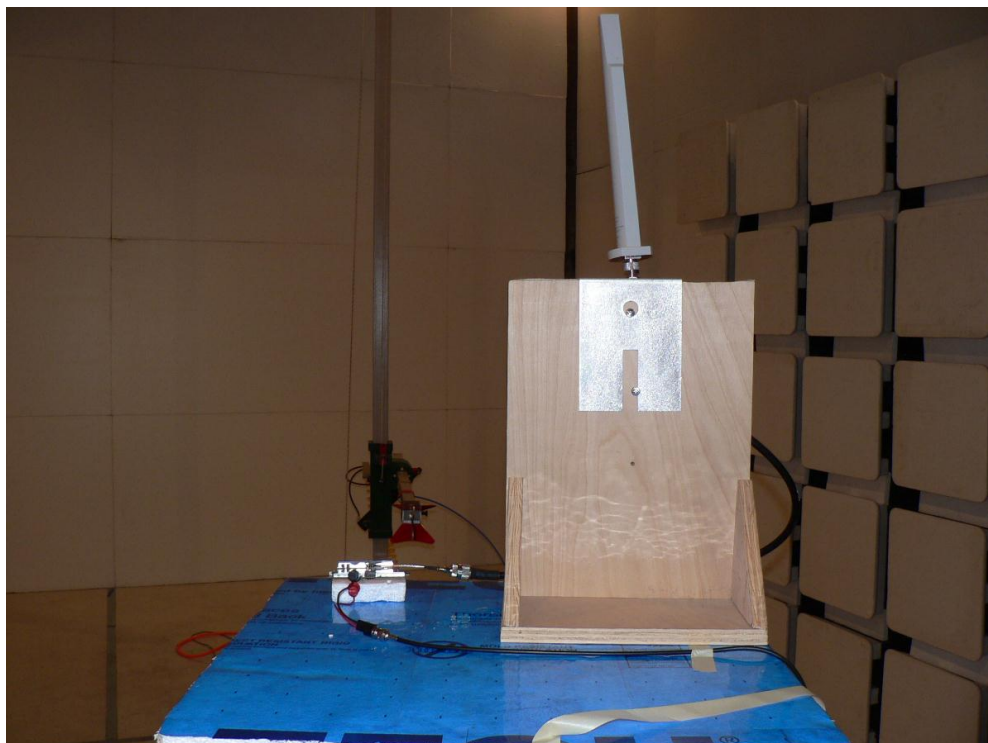


Tx Spurious 1-18 GHz WPANT30017 Front



Tx Spurious 1-18 GHz WPANT40010 Front




Tx Spurious 1-18 GHz WPANT40010

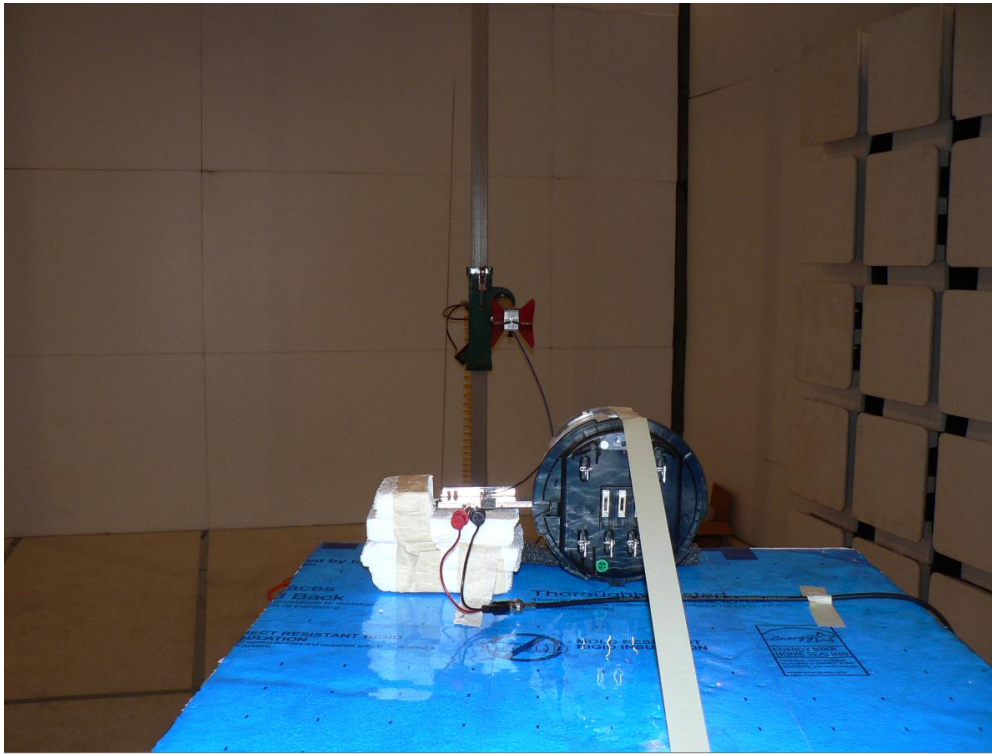


Tx Spurious 30-1000 MHz Integral Back




Tx Spurious 30-1000 MHz Integral Front

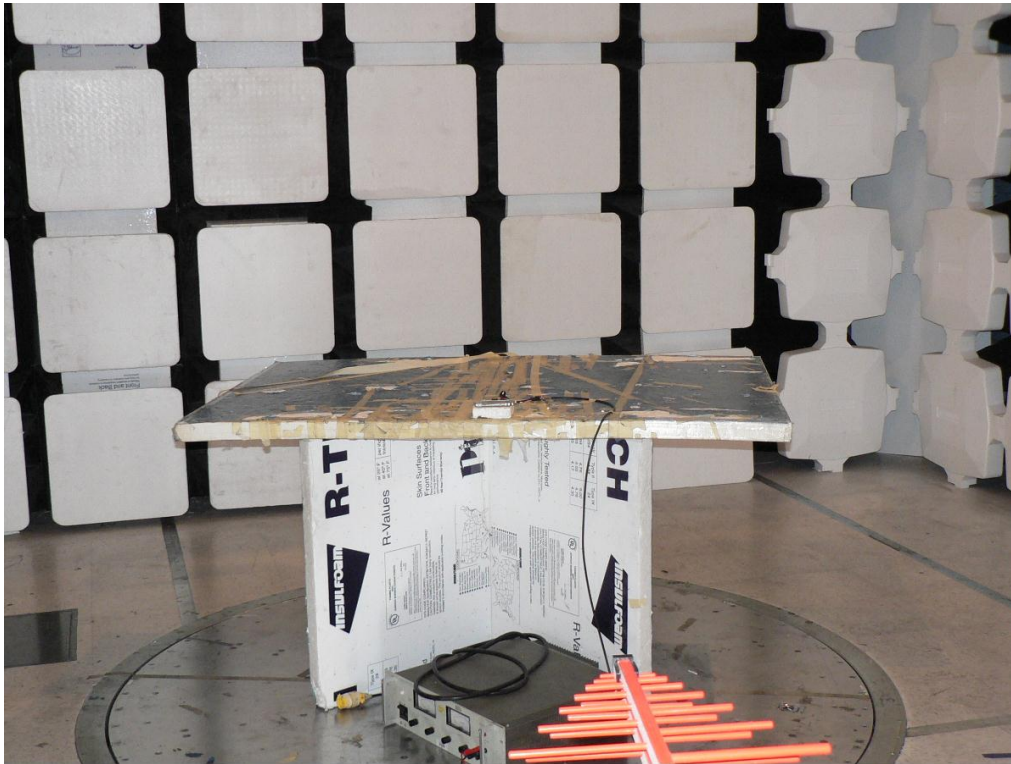


Tx Spurious 30-1000MHz WPANT30017 Back

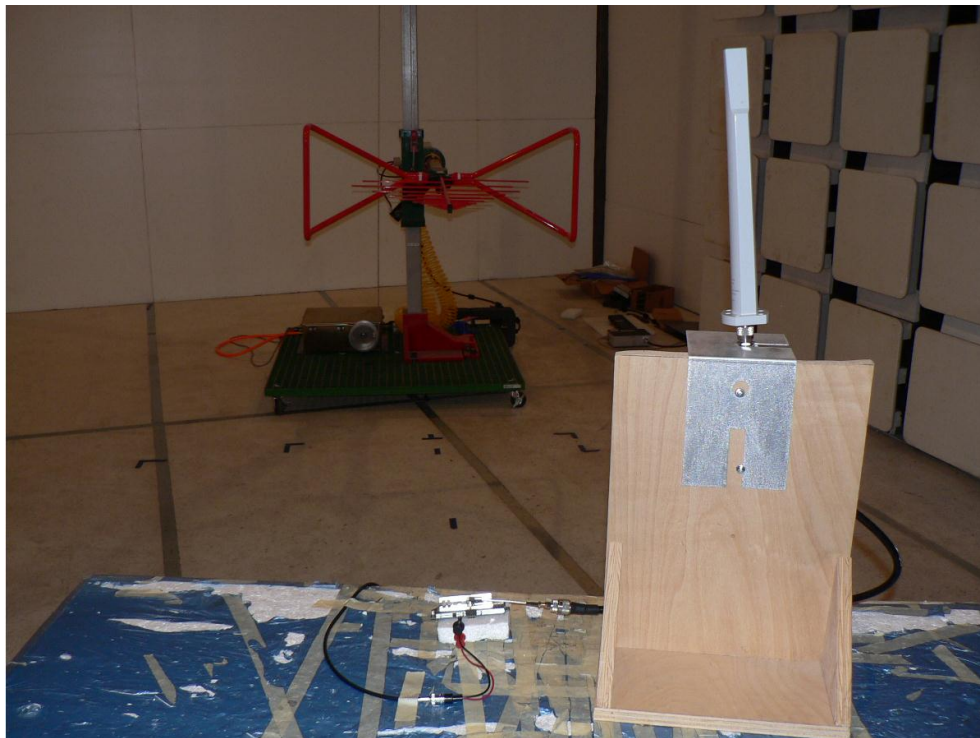


Tx Spurious 30-1000 MHz WPANT30017 Front

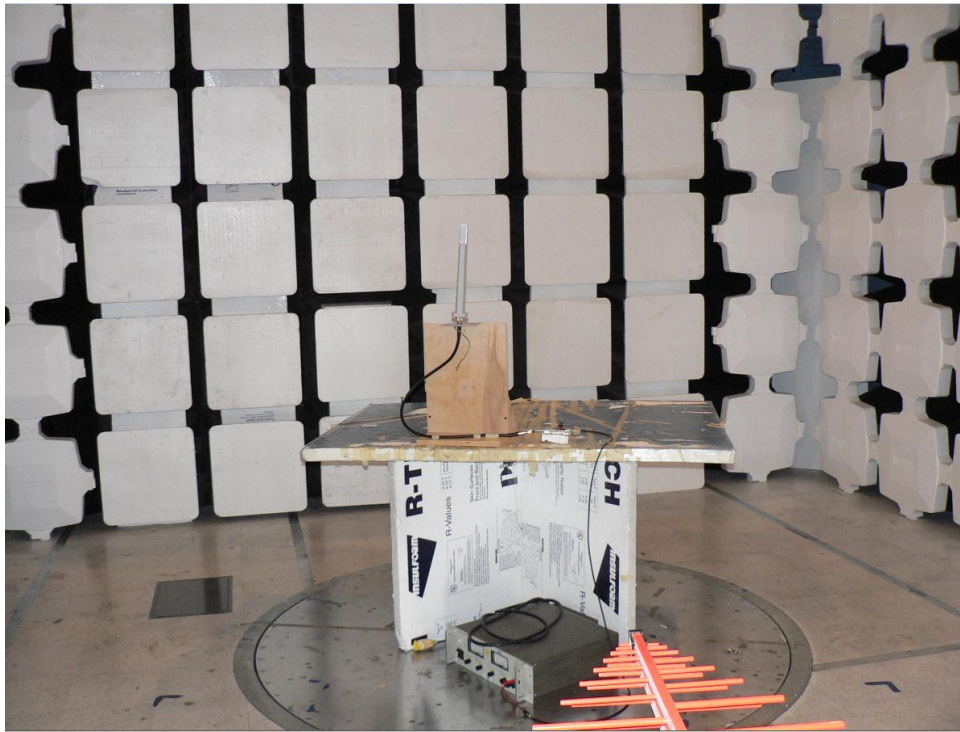

Tx Spurious 30-1000 MHz WPANT40010 Back

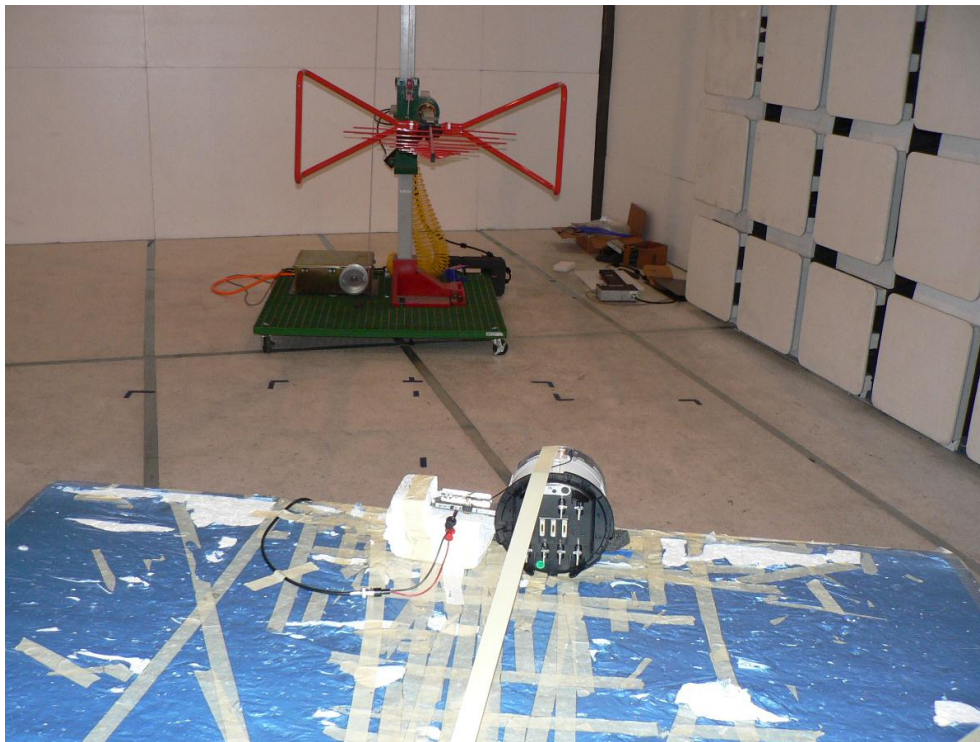

Tx Spurious 30-1000 MHz WPANT40010 Front

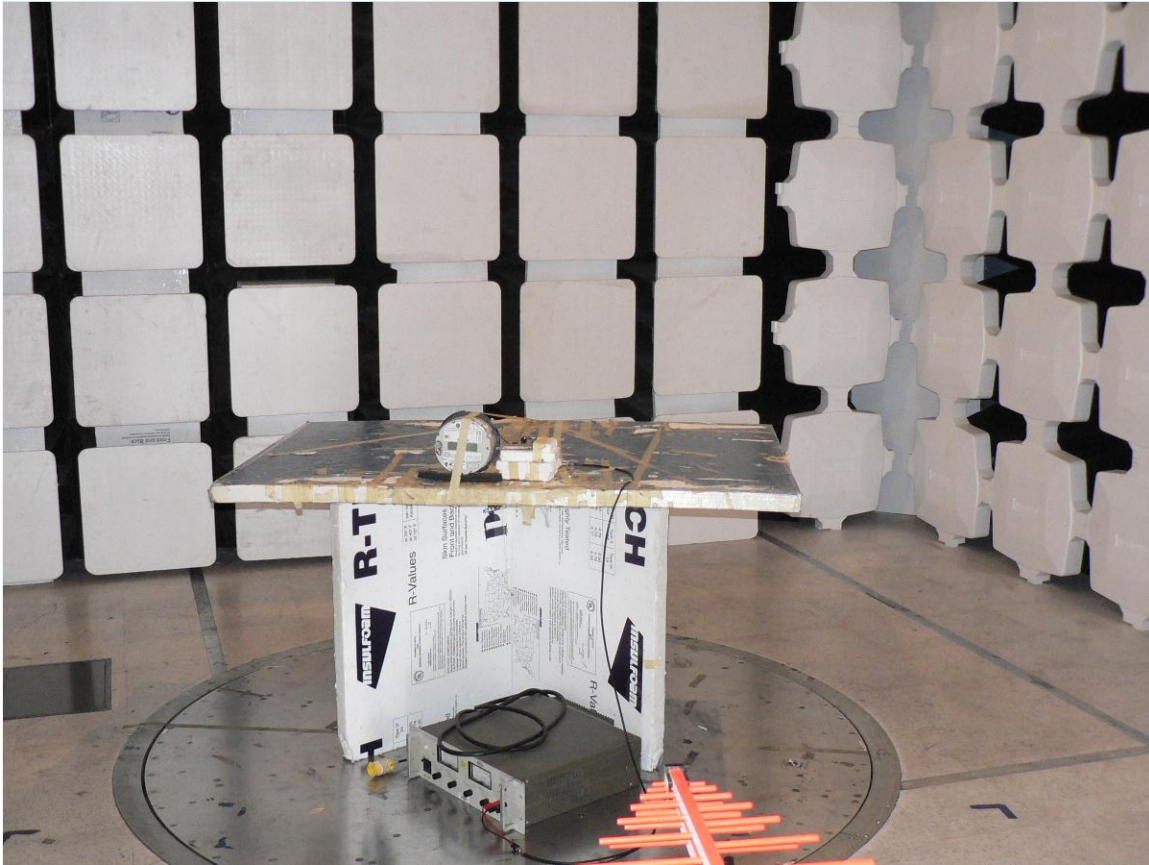

END REPORT