




0710020

RBW 3 MHz Delta 1 [T1]
*VBW 3 MHz -0.15 dB
Ref -20 dBm *Att 10 dB SWT 110 ms 57.200000 ms

1 PK *
CLRWR

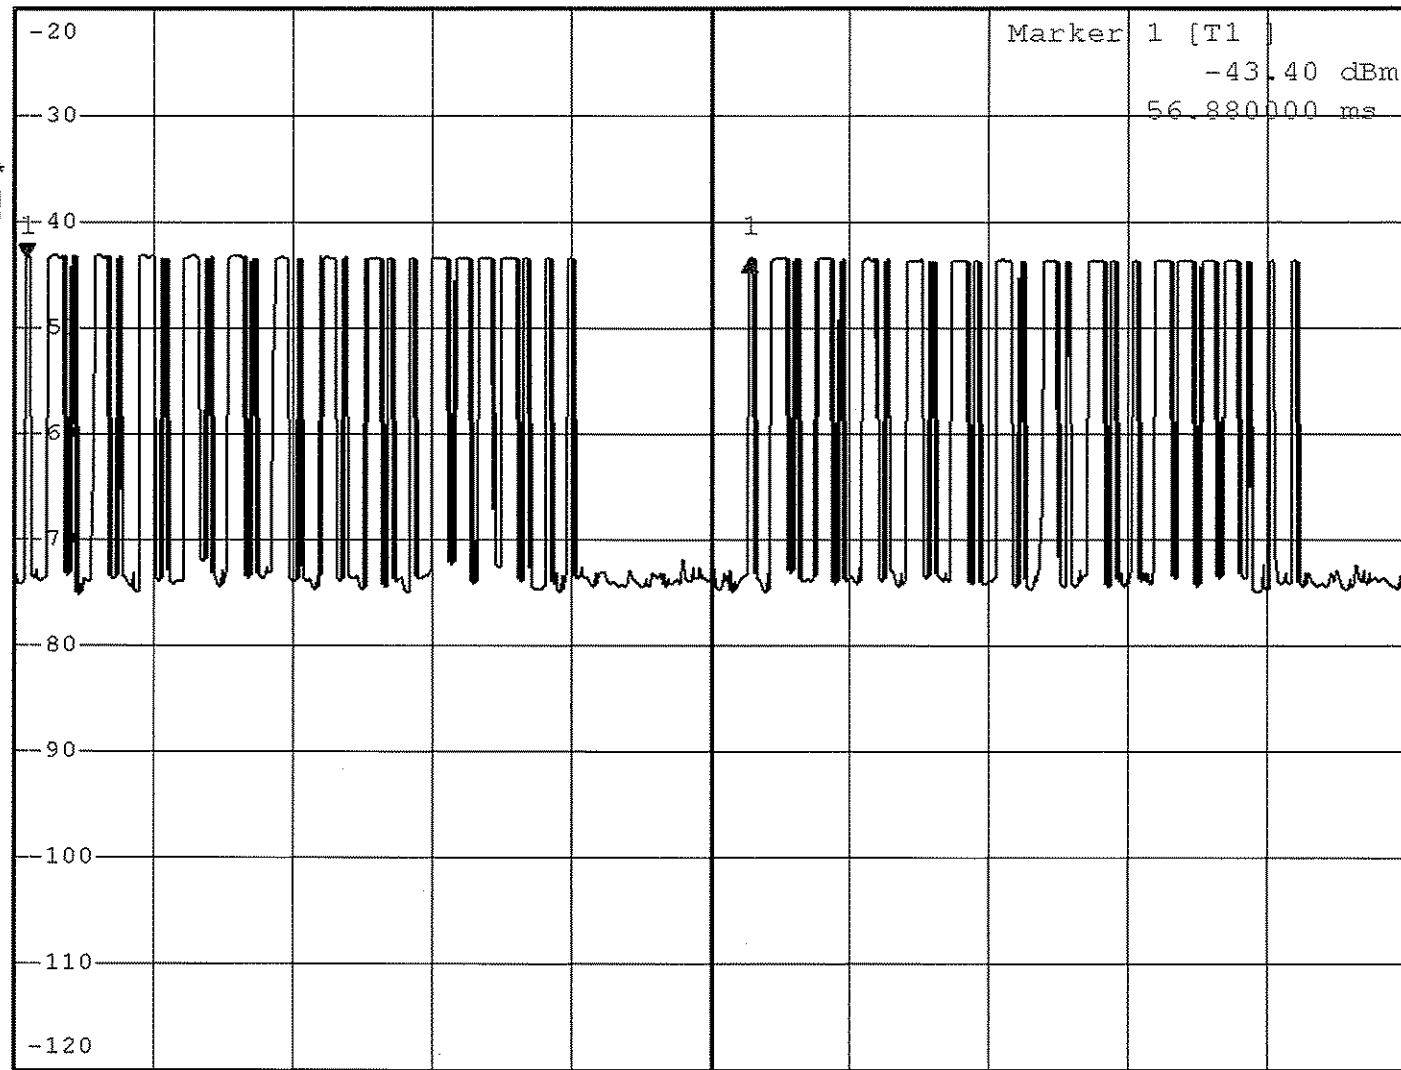

Center 433.8815 MHz

11 ms/

Marker 1 [T1]
-43.40 dBm
56.880000 ms
SGL

Duty Cycle

$$= \frac{12(1.35) + 13(0.45)}{57.2}$$

$$= \frac{22.05}{57.2}$$

$$= 0.4$$

Average Factor

$$= 20 \log 0.4$$

$$= -7.9 \text{ dB}$$

0710020



RBW 3 MHz

*VBW 3 MHz


SWT 10 ms

Ref -20 dBm

Att 10 dB

1 PK*
CLRWF

SGL

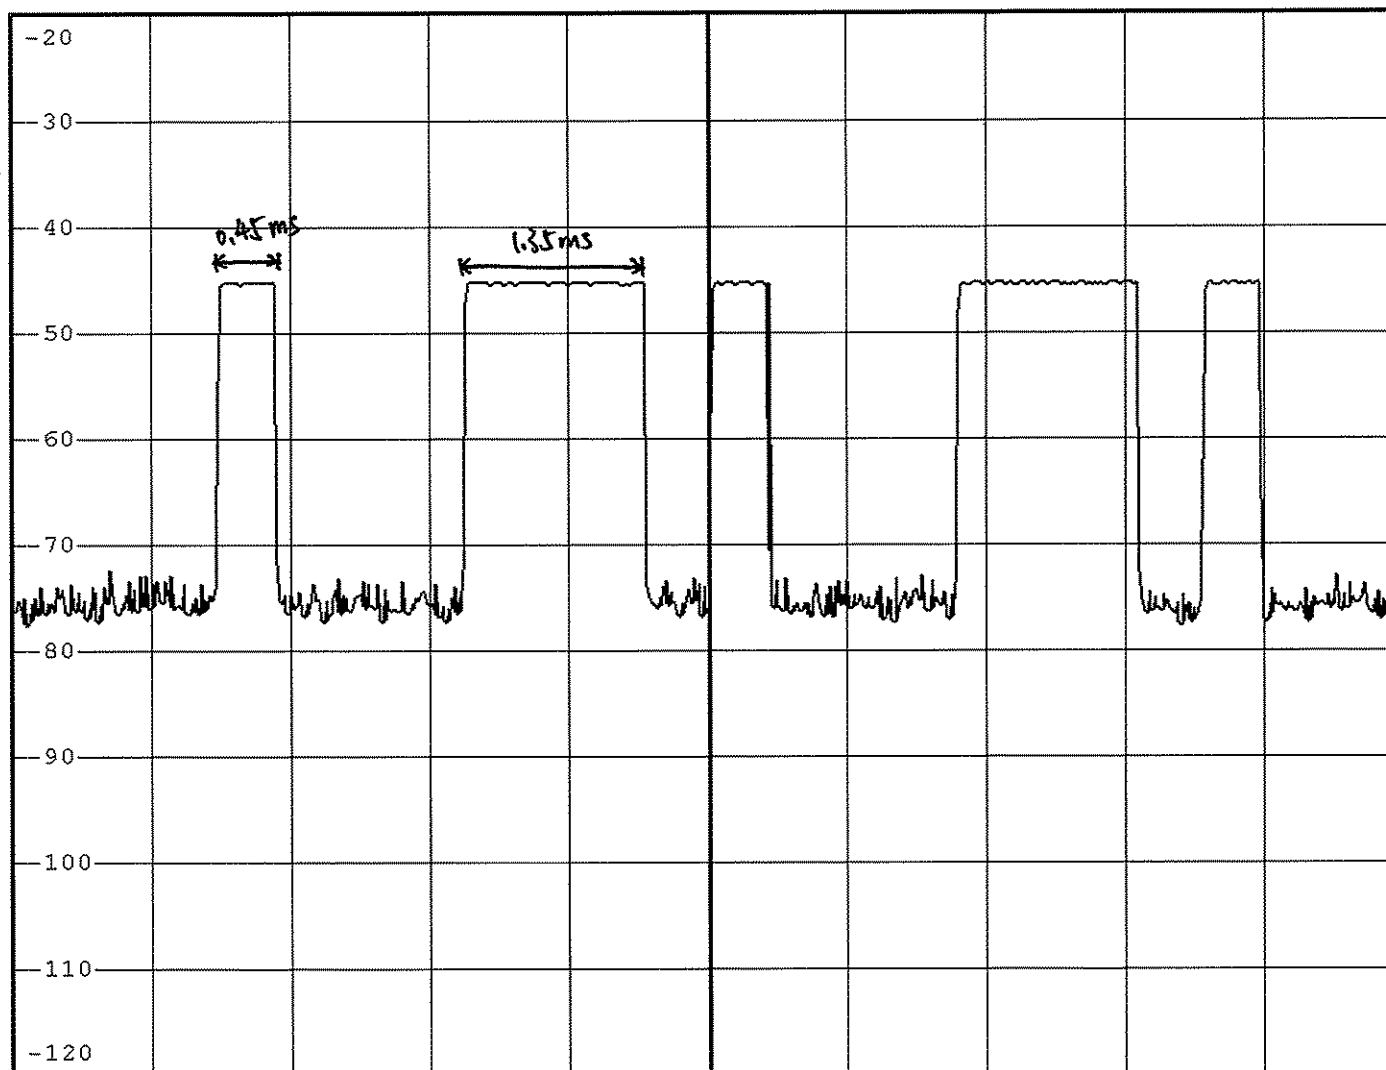

Center 433.8815 MHz

1 ms/

0710020



RBW 3 MHz Marker 1 [T1]
*VBW 3 MHz -41.30 dBm
SWT 200 ms 98.800000 ms

Ref -20 dBm

Att 10 dB

1 PK *
VIEW



Center 433.8815 MHz

20 ms/