



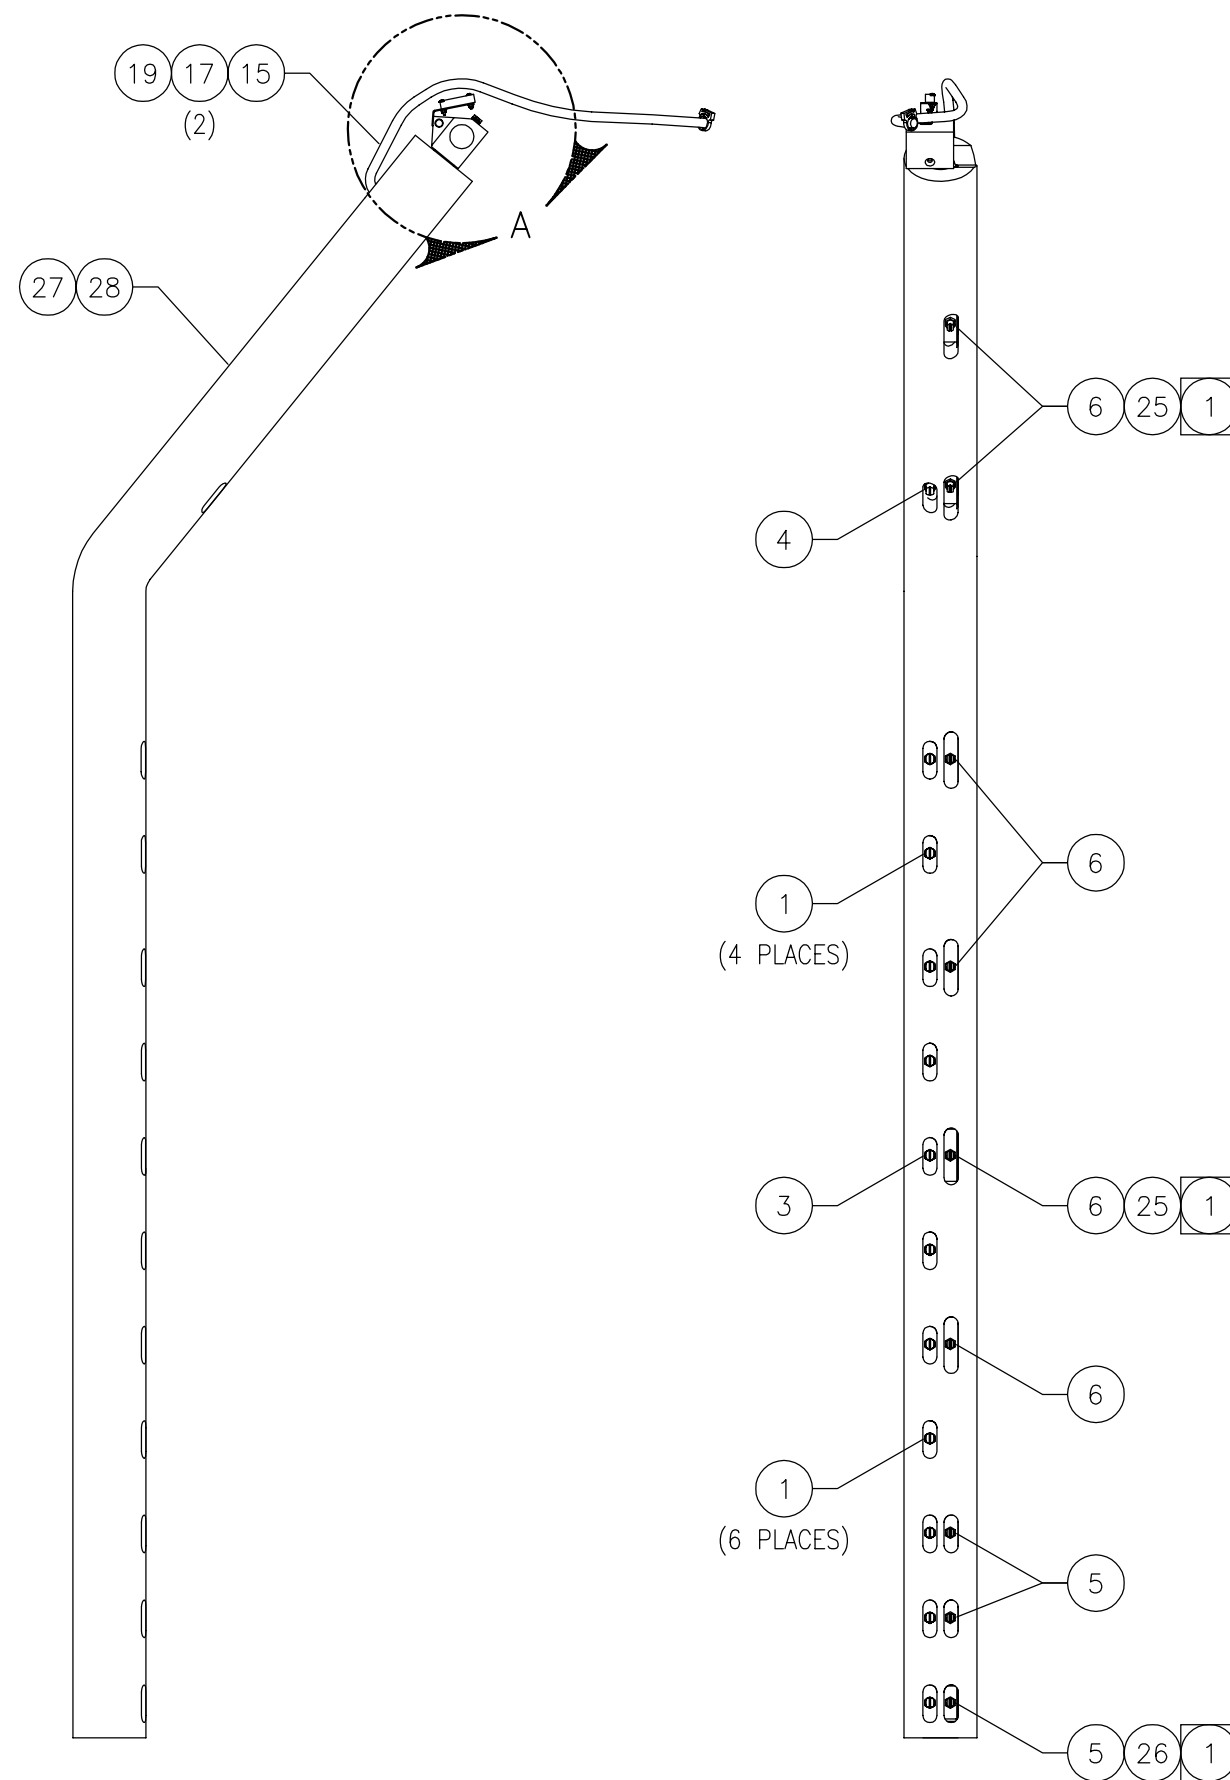

NOTE:

- 1 PUT THE SUPPORT/FOAM,COVER INTO THE CUTOUT OF THE FOAM COVER. INSERT THE PLASTIC NOZZLE THROUGH THE HOLE IN THE SUPPORT/FOAM,COVER AND THREAD NOZZLE INTO MANIFOLD. ALIGN NOZZLE SPRAY WITH THE SIDES OF THE CUTOUT IN THE FOAM.

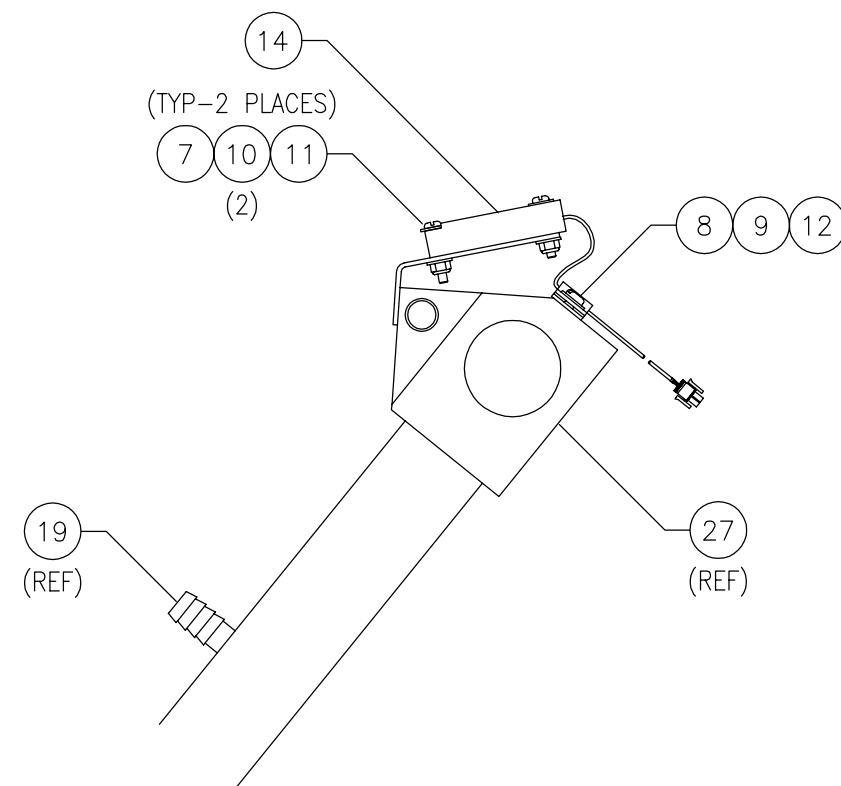

DETAIL A
(ENLARGED FOR CLARITY)

RYKO® MFG. CO. GRIMES, IOWA 50111					
SPRAY ARCH ASSY/ SIDE, W/BRK, 90"					
REV.	DWG. NO.				
-	25018-000				
MATERIAL SEE PRODUCT STRUCTURE		TOLERANCES UNLESS OTHERWISE SPECIFIED		PRODUCT	
SCALE NONE	DATE 6/14/02			US2001-OHD	
DRAWN BEERENDS	CHK'D MS/GA			LIBERTY	
APVD GDL	DATE 6/28/02	1. ALL SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE. 2. UNLESS OTHERWISE SPECIFIED, ALL DIMENSIONS ARE IN INCHES.			
		-		0502-125	
		LTR		ECO	
				RELEASING DRAWING	
				MB	
				BY	
				DATE	
				6/28/02	
				GDL	
				APVD	