






**Test Set Up Conducted Emissions**


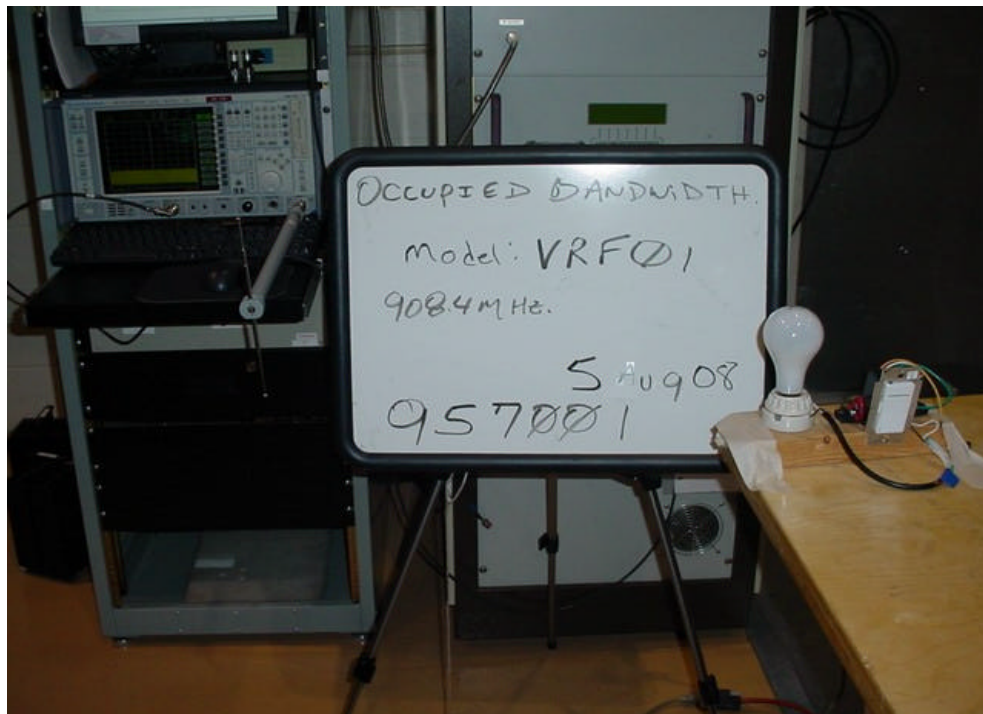


Test Set Up Occupied Bandwidth

### Test setup for Radiated Emissions 30MHz to 1000MHz – VRE06

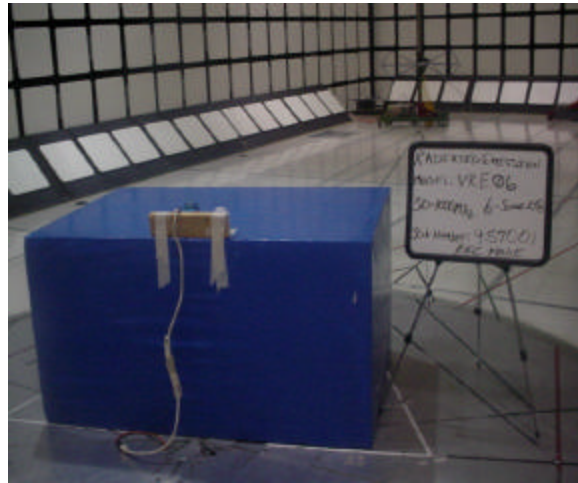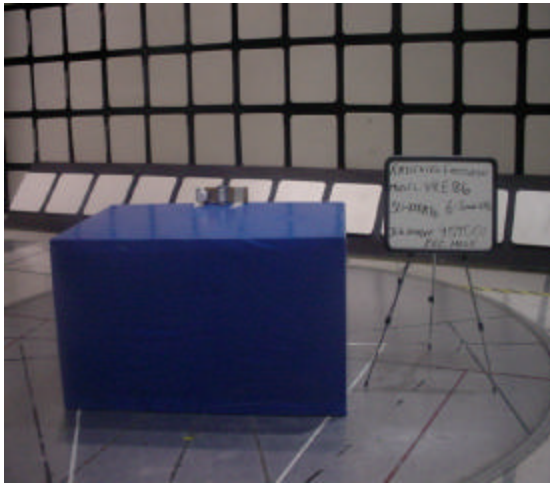


### Test setup for Radiated Emissions 1GHz to 5GHz – VRE06

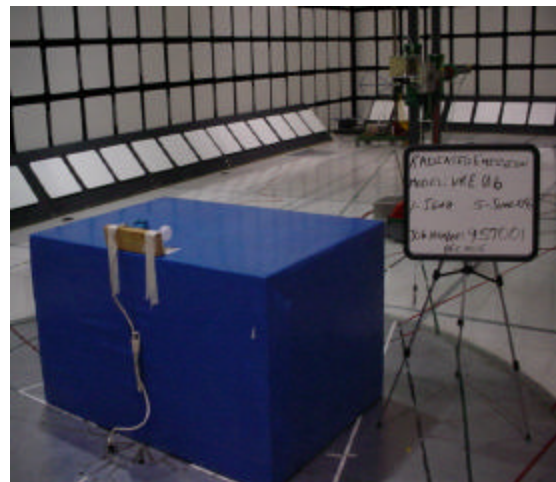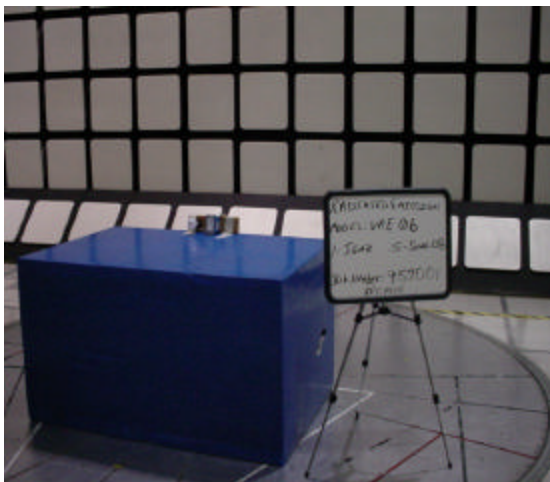



### Test setup for Radiated Emissions 30 to 1000MHz– VRF01

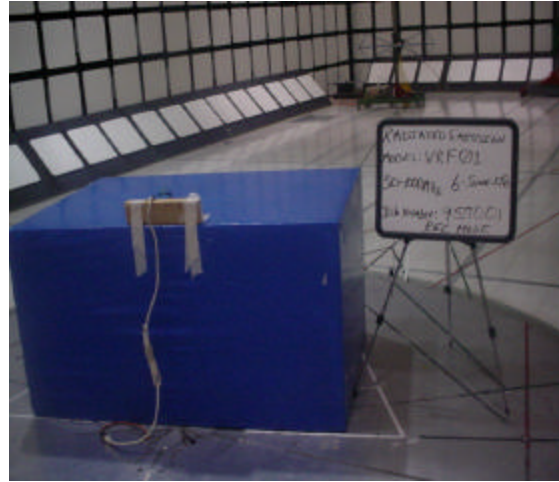

### Test setup for Radiated Emissions 1GHz to 5GHz – VRF01

