



# Photos of Test Setup

## 1.1 For GSM&WCDMA


### 1.1.1 Radiated Spurious Emissions

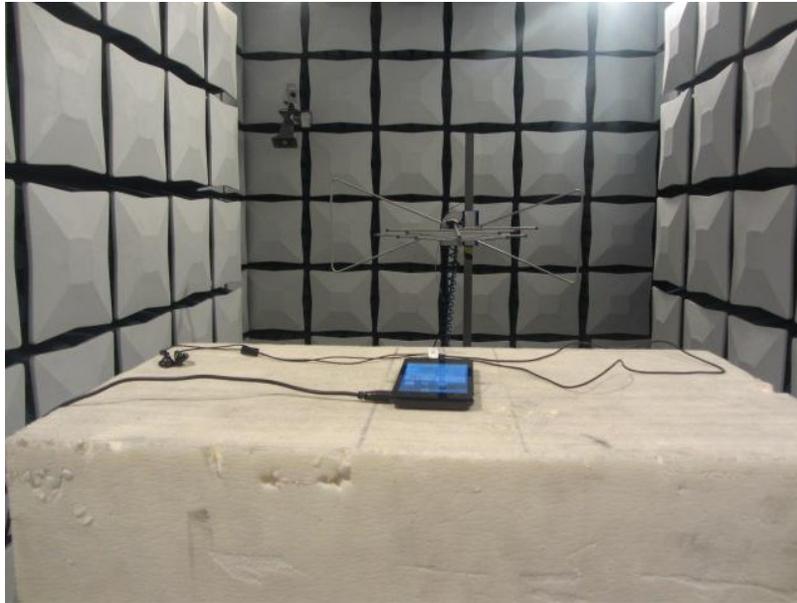

Radiated Spurious Emission (30MHz-1GHz)

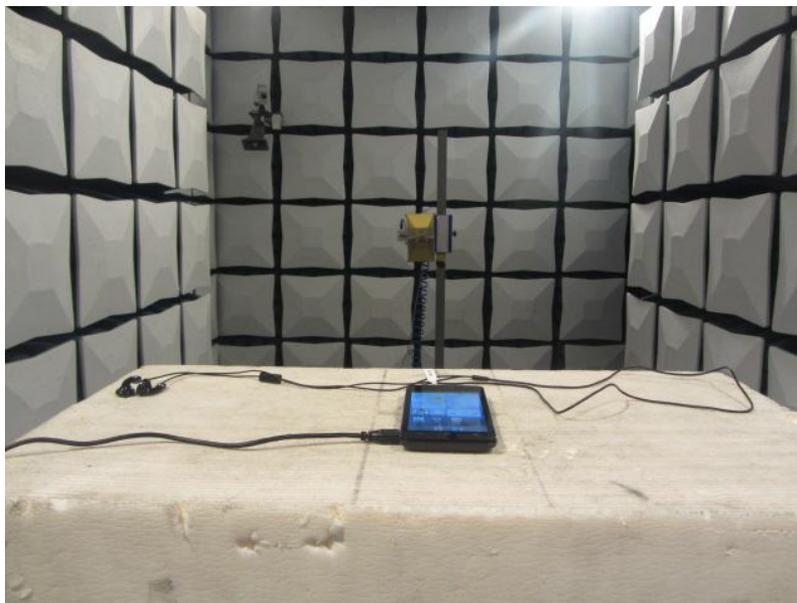


Radiated Spurious Emission (3GHz to18GHz)

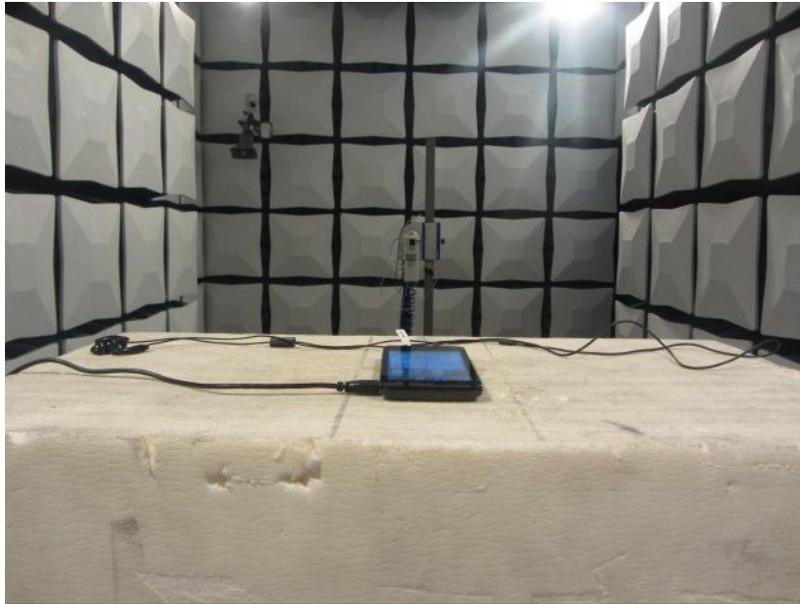


Radiated Spurious Emission (18GHz to26.5GHz)

## 1.2 For Bluetooth


### 1.2.1 Radiated Spurious Emissions

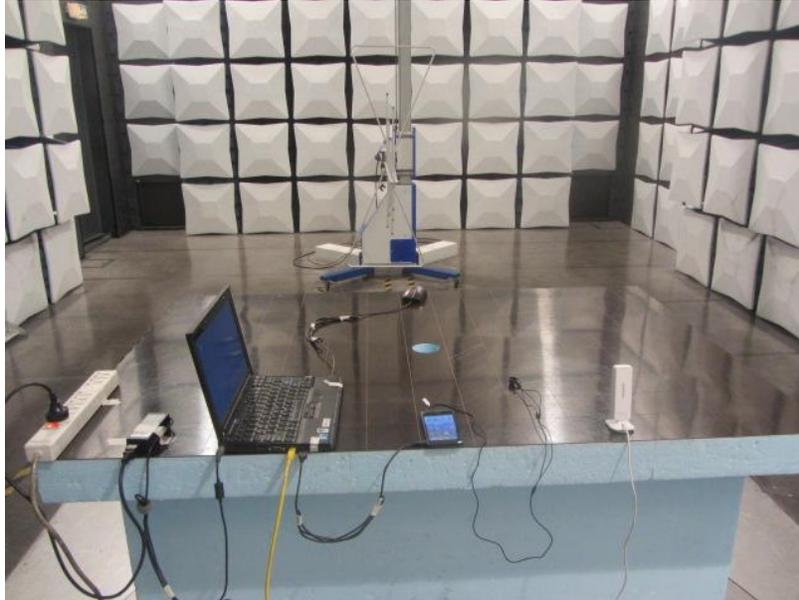

Radiated Spurious Emission (below 1GHz)

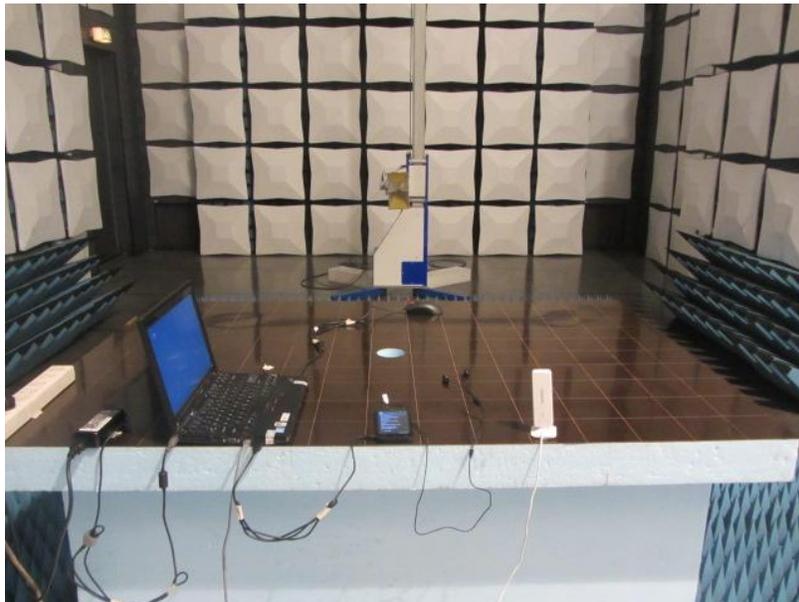


Radiated Spurious Emission (1GHz to 18GHz)

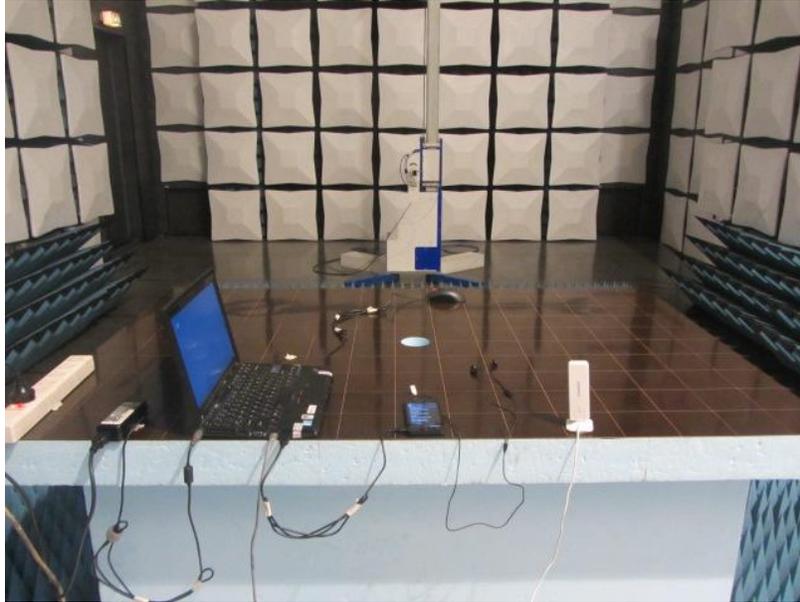

Radiated Spurious Emission (above 18GHz)

## 1.2.2 Conducted Emissions




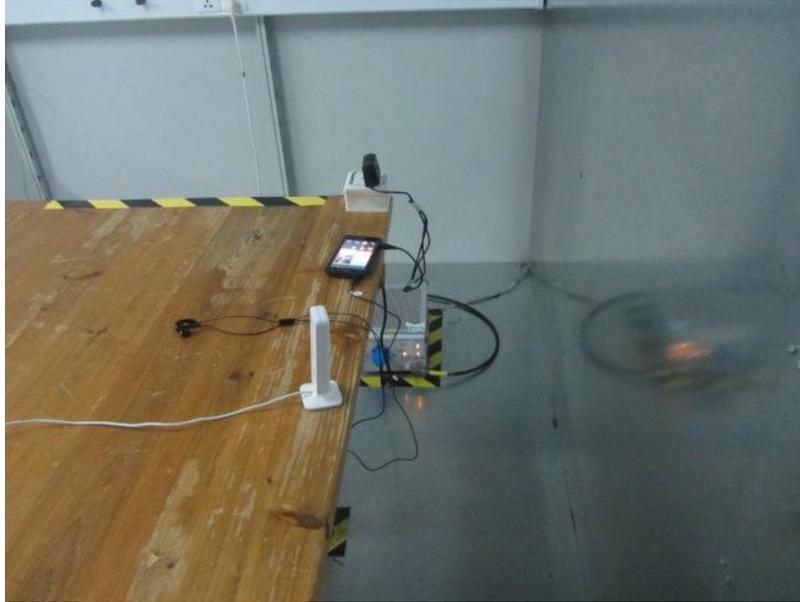


Conducted Emissions for AC Ports

## 1.3 For WLAN


### 1.3.1 Radiated Spurious Emissions

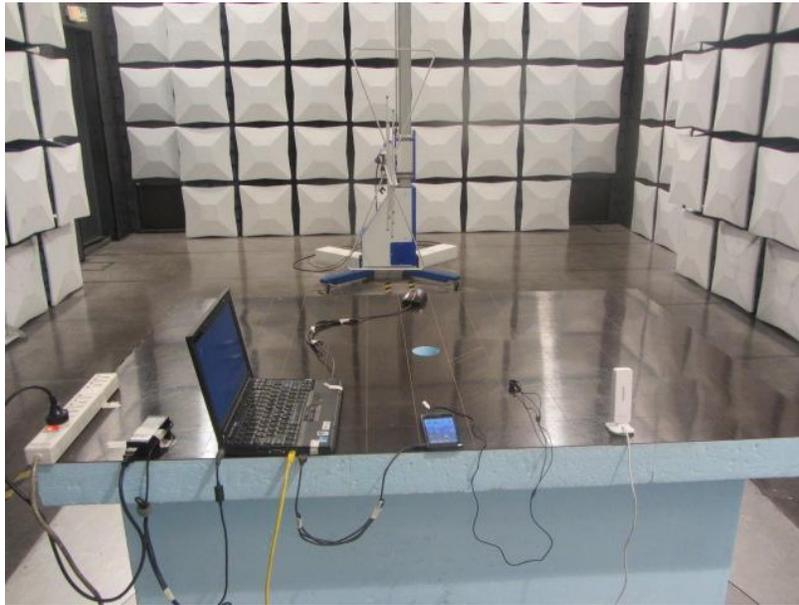

Radiated Spurious Emission (below 1GHz)

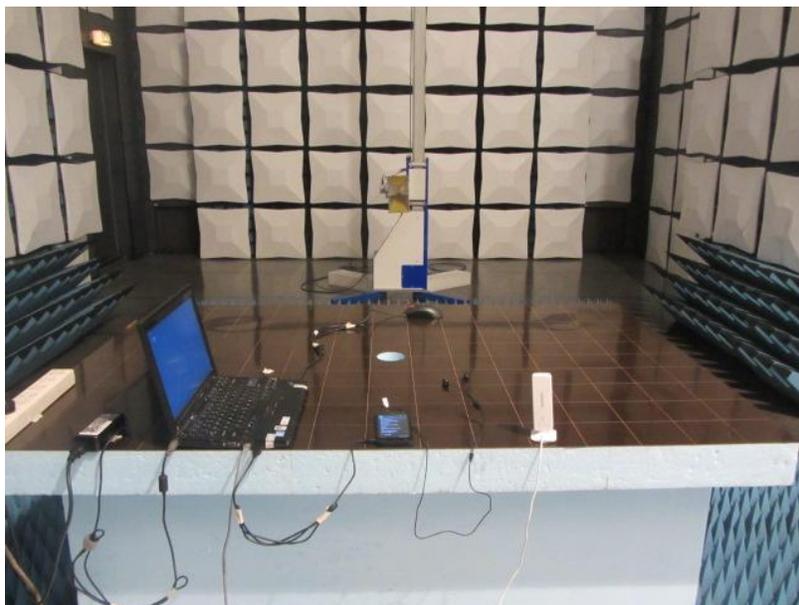


Radiated Spurious Emission (1GHz to18GHz)

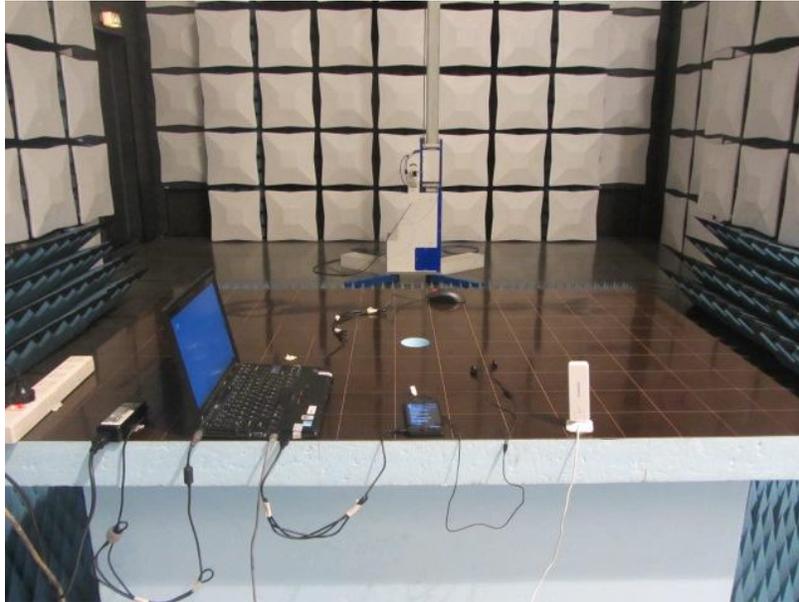

Radiated Spurious Emission (above 18GHz)

### 1.3.2 Conducted Emissions

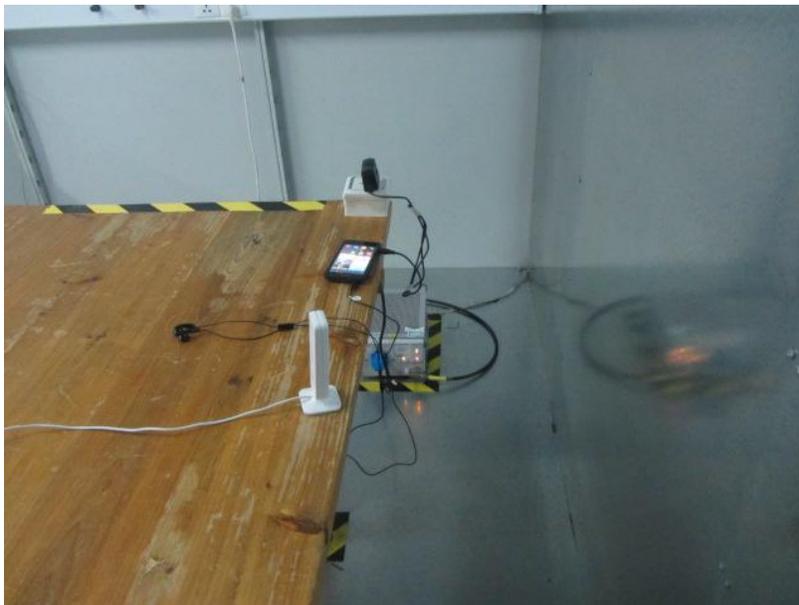

Conducted Emissions for AC Ports

---

END