



Photos of Test Setup

For GSM&WCDMA<E

1. Radiated Spurious Emissions



Radiated Spurious Emission (below 3GHz)




Radiated Spurious Emission (3GHz to18GHz)



Radiated Spurious Emission (18GHz to26.5GHz))


For NFC

2. Radiated Spurious Emissions

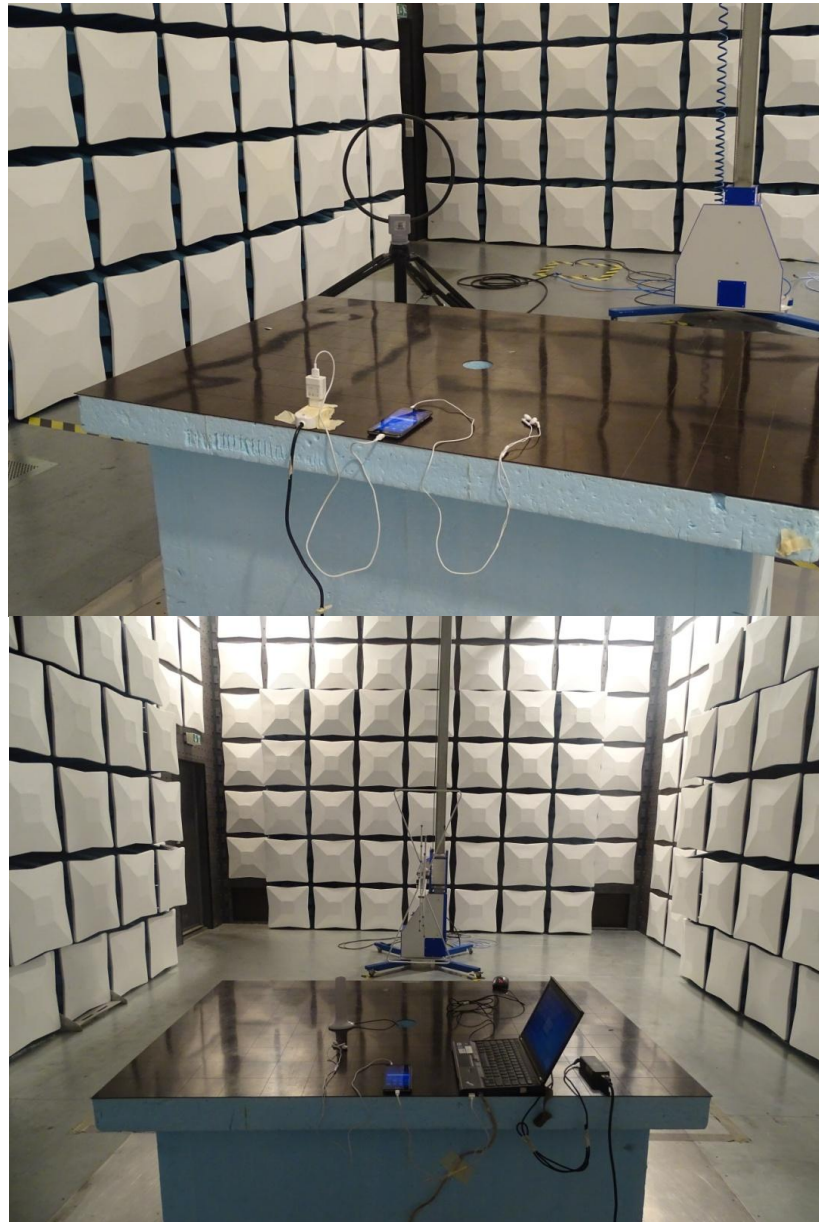


For Wlan/BT


2. Radiated Spurious Emissions

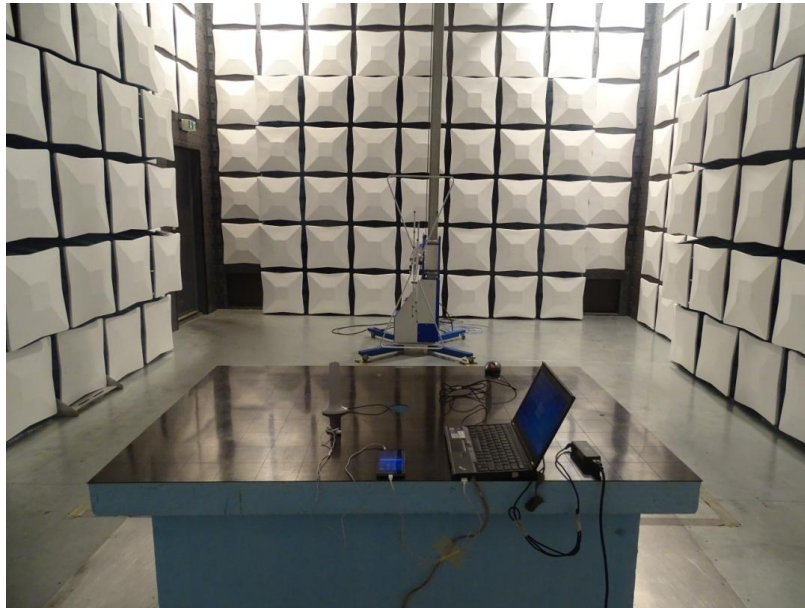

Radiated Spurious Emission (below 1GHz)


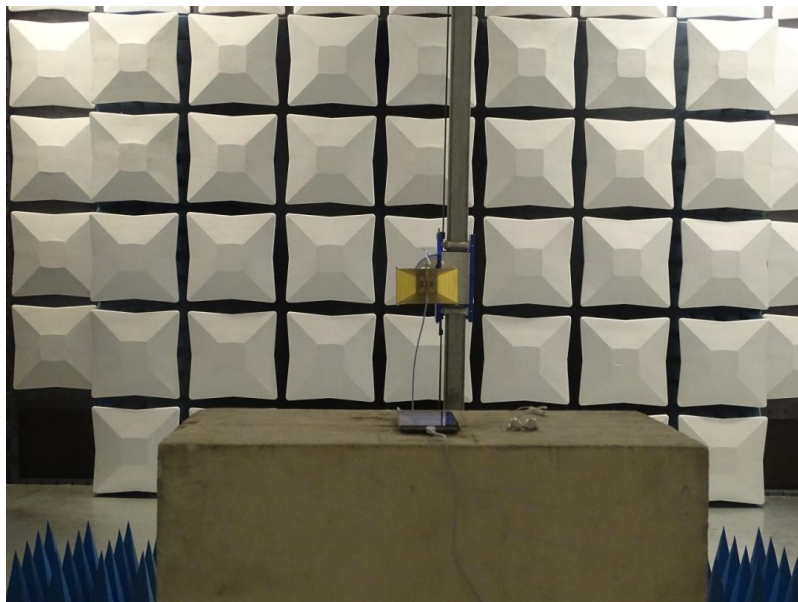


Radiated Spurious Emission (1GHz to18GHz)

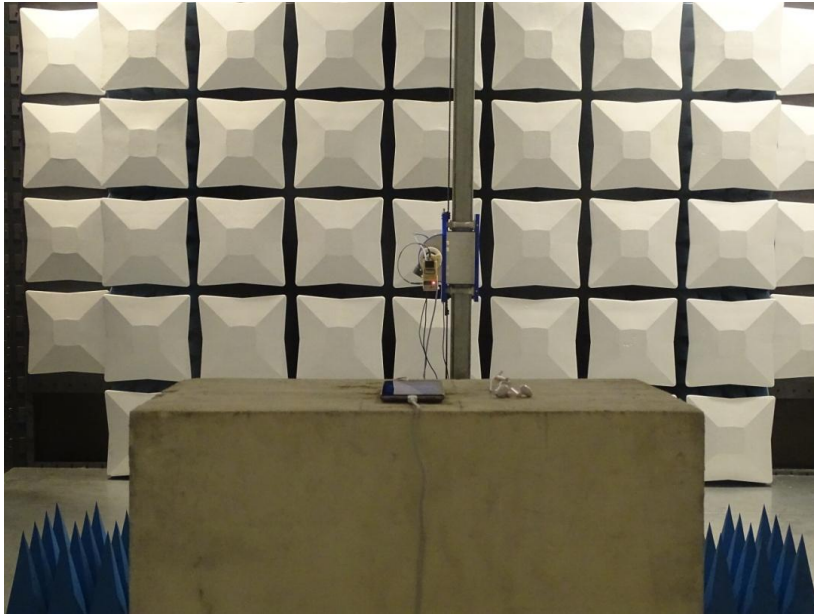

Radiated Spurious Emission (above 18GHz)

Conducted Emissions

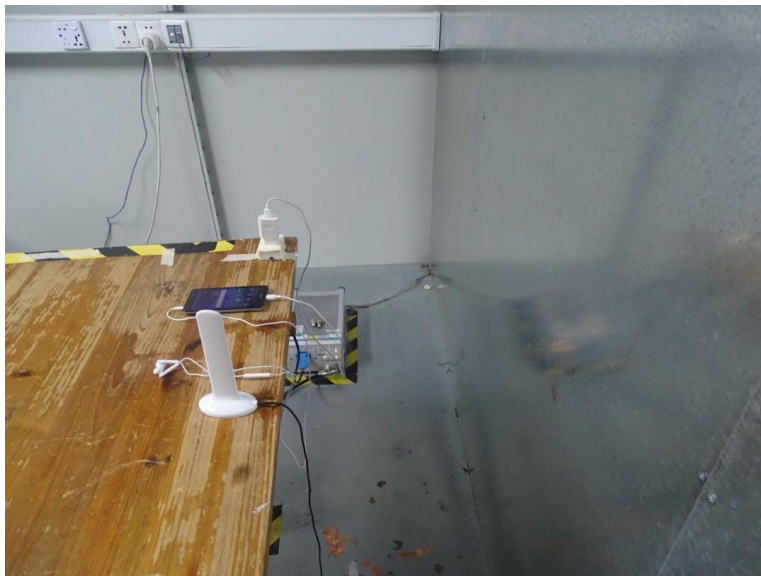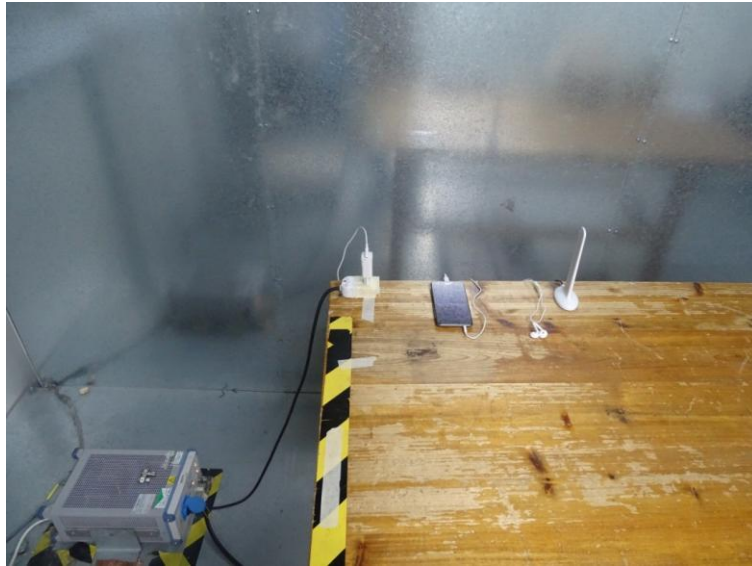

-----The END-----