


Photos of Test Setup

For GSM&WCDMA<E


1. Radiated Spurious Emissions



Radiated Spurious Emission (below 1GHz)

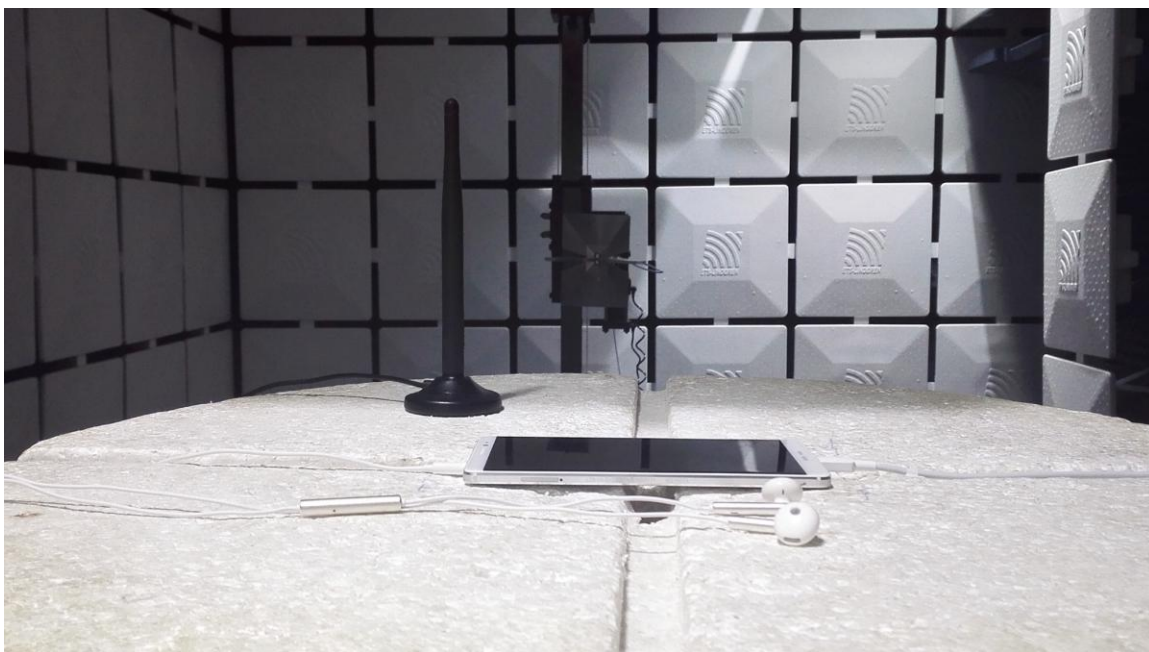

Radiated Spurious Emission (1GHz to18GHz)

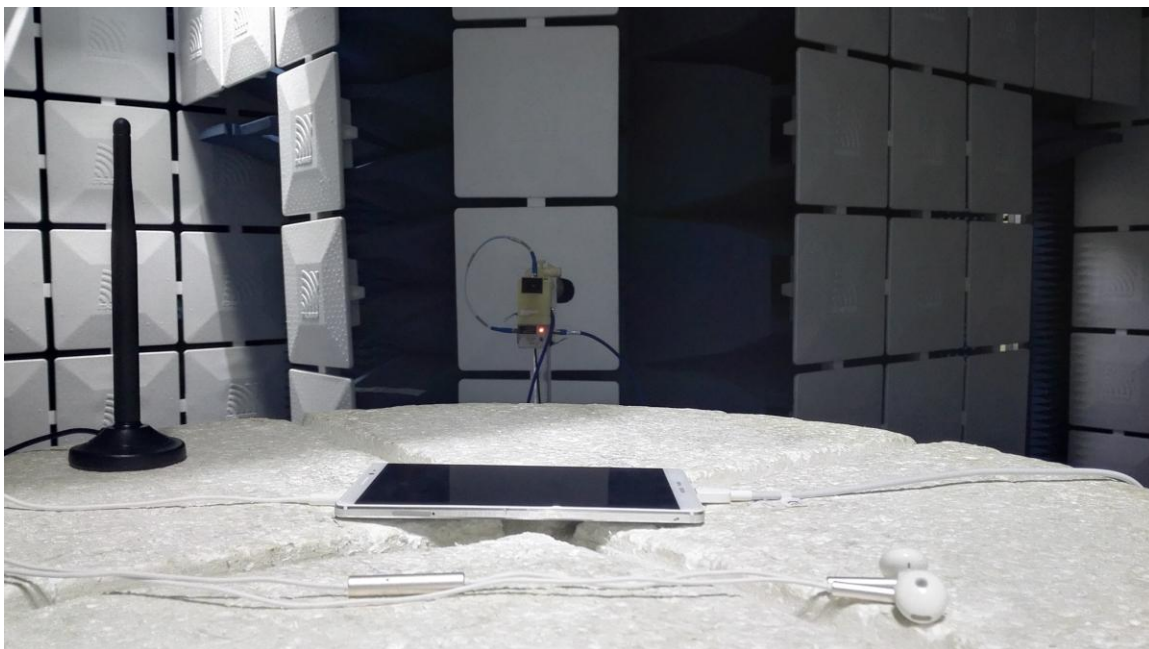


Radiated Spurious Emission (18GHz to26.5GHz)

For Wlan/BT


2. Radiated Spurious Emissions



Radiated Spurious Emission (below 1GHz)

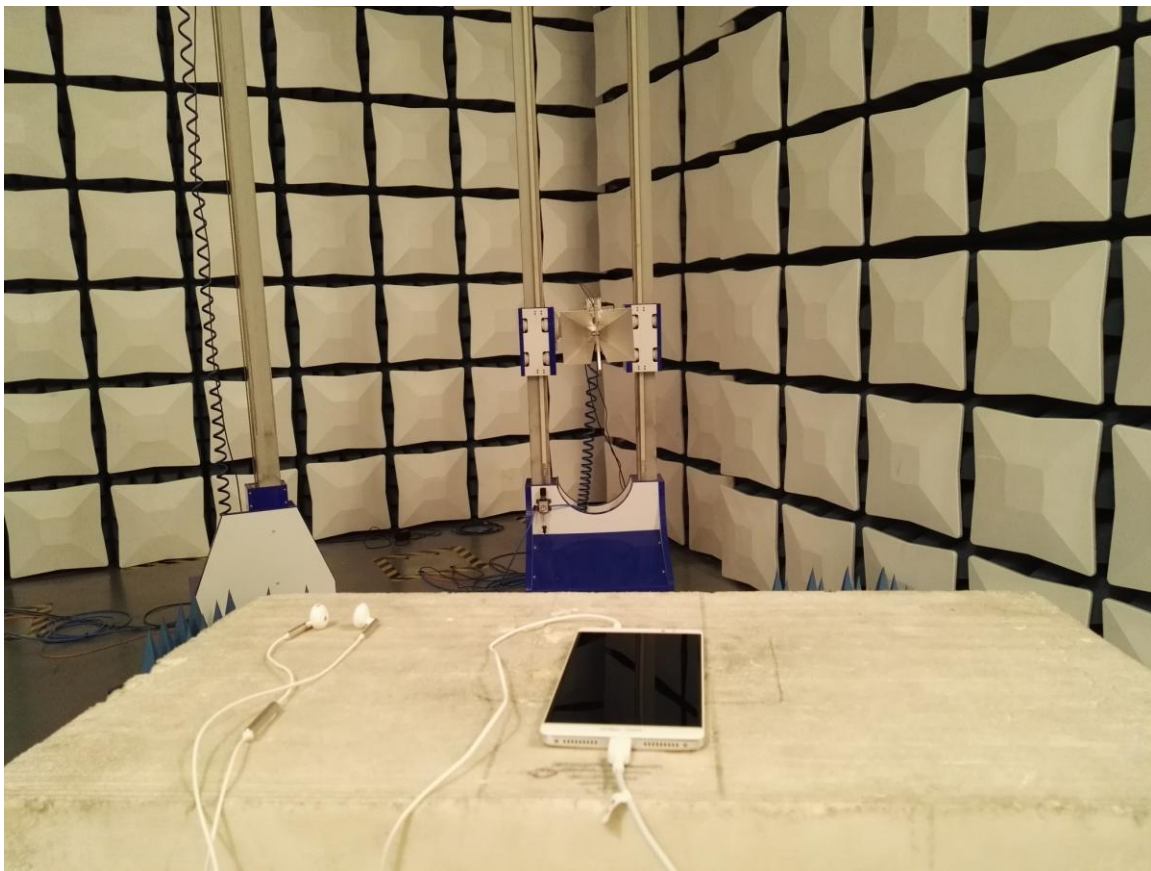


Radiated Spurious Emission (1GHz to18GHz)

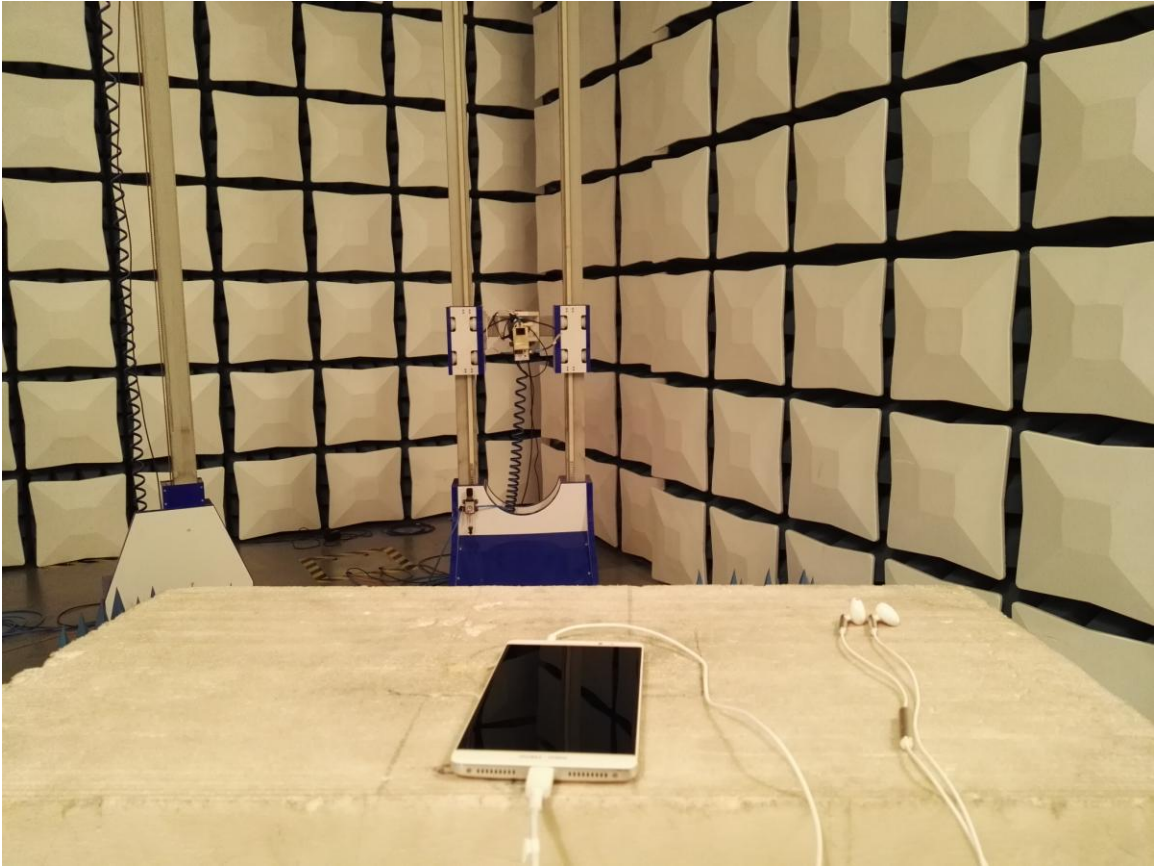

Radiated Spurious Emission (above 18GHz)


Conducted Emissions



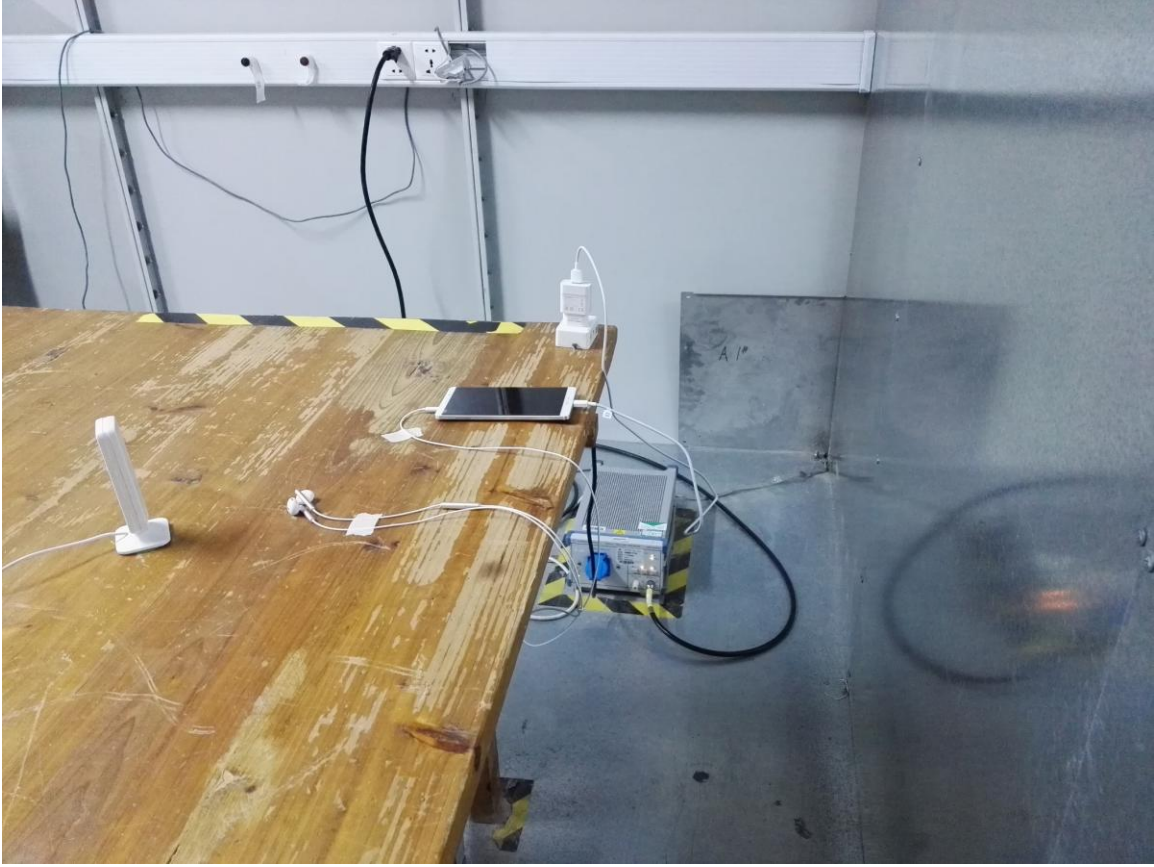


-----The END-----

For NFC

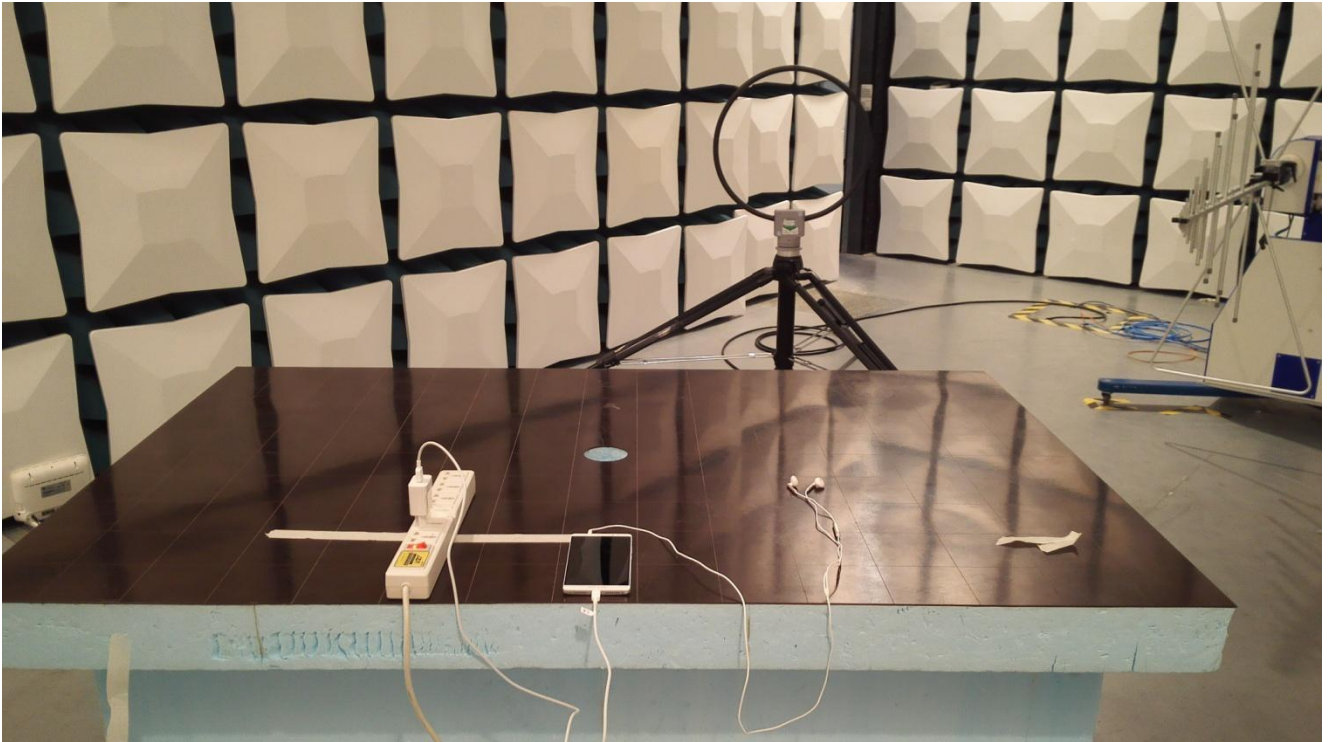

Measurement Setup 9KHz~30MHz

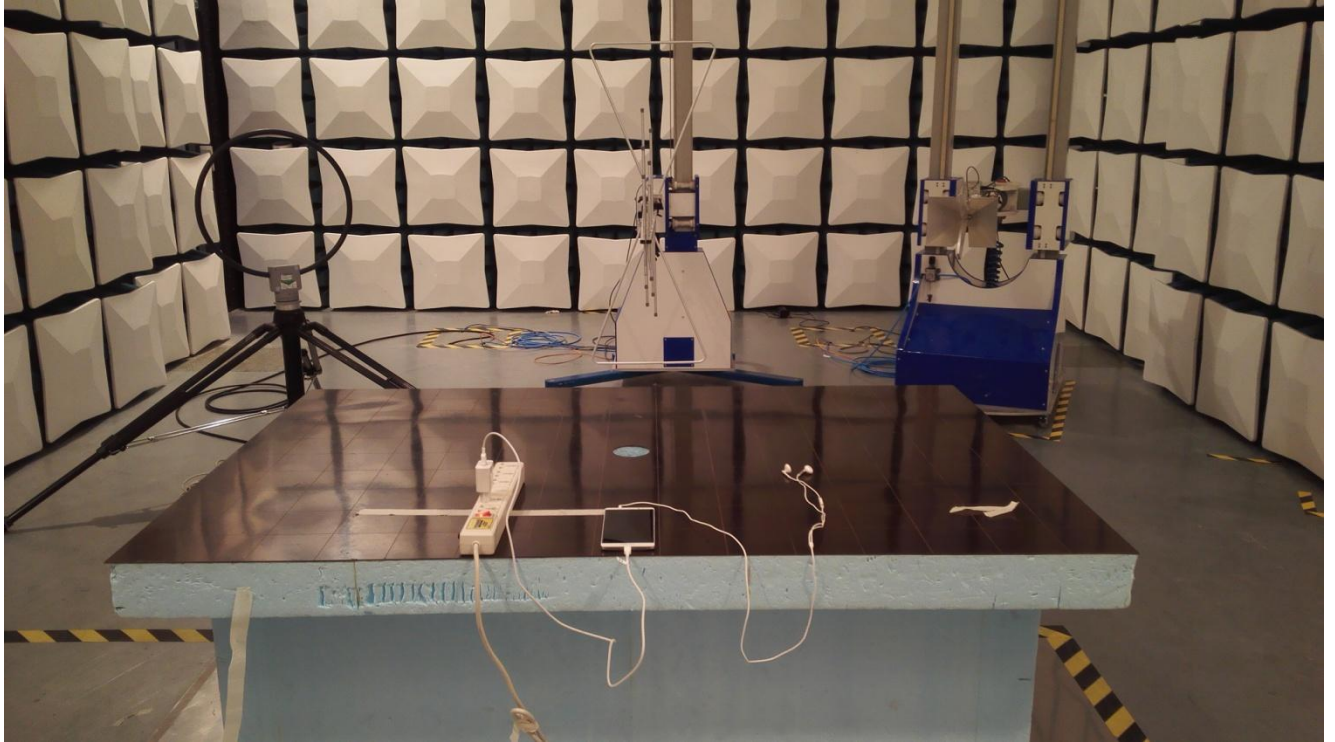

Measurement Setup 30MHz~1GHz

-----The END-----