Photos of Test Setups

For GSM&WCDMA

1. Radiated Spurious Emissions



Radiated Spurious Emission (below 3GHz)




Radiated Spurious Emission (3GHz to18GHz)




Radiated Spurious Emission (18GHz to26.5GHz)

For BT & WIFI

1 Radiated Spurious Emissions

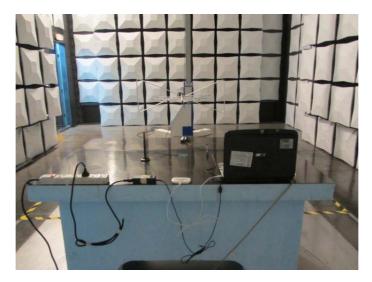

Radiated Spurious Emission (below 1GHz)

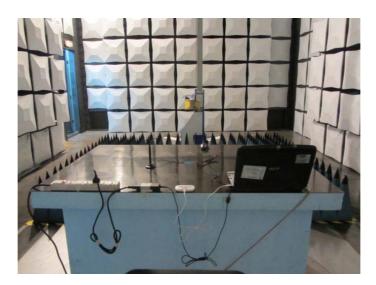

Radiated Spurious Emission (1GHz to18GHz)



Radiated Spurious Emission (above 18GHz)

2 Conducted Emissions





Conducted Emissions for AC Ports