



## Photos of Test Setup



## For GSM&WCDMA

### 1. Radiated Spurious Emissions



Radiated Spurious Emission (below 3GHz)



Radiated Spurious Emission (3GHz to18GHz)




Radiated Spurious Emission (18GHz to26.5GHz)




## For BT & WIFI

### 1 Radiated Spurious Emissions

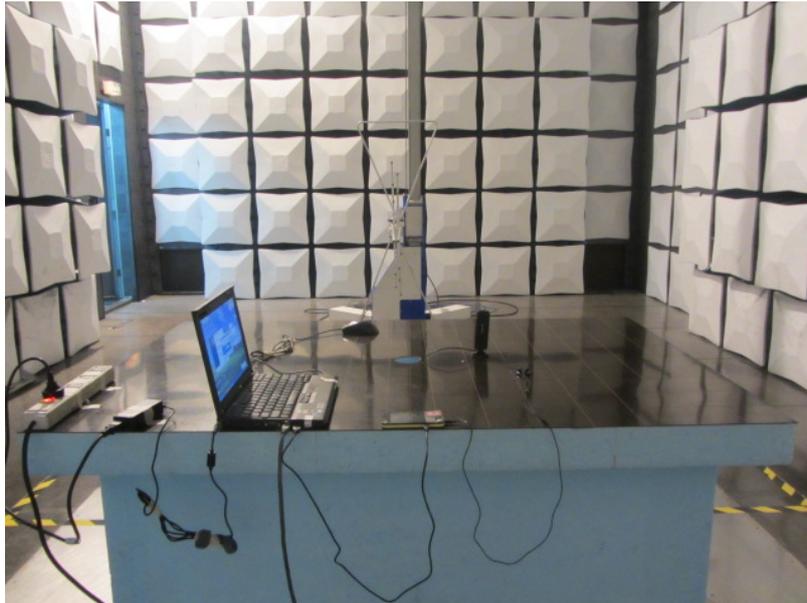

Radiated Spurious Emission (below 1GHz)

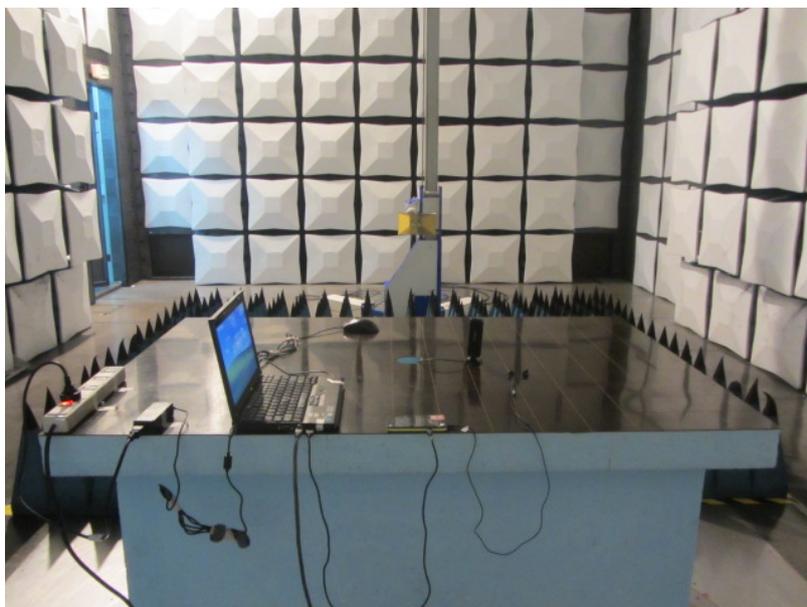





Radiated Spurious Emission (1GHz to18GHz)



Radiated Spurious Emission (above 18GHz)



## 2 Conducted Emissions

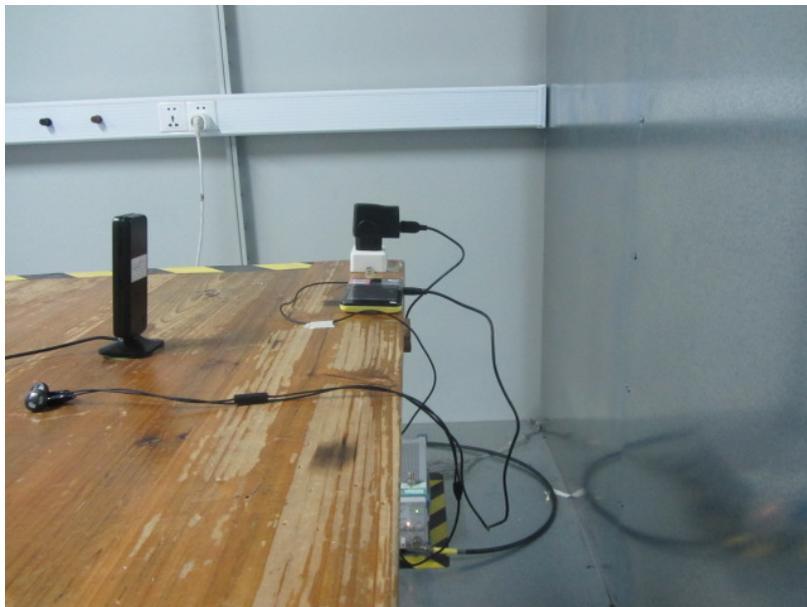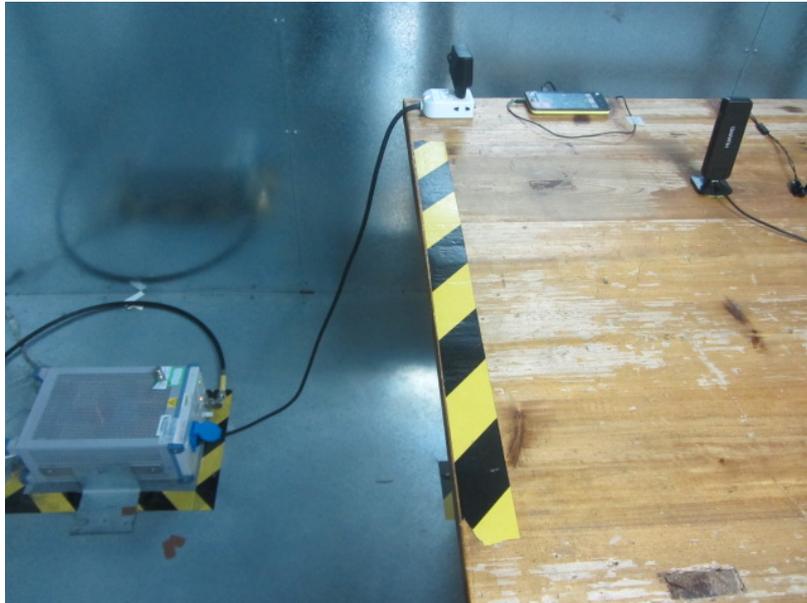

Conducted Emissions for AC Ports