Photos of Test Setup

For GSM&WCDMA

1 Radiated Spurious Emissions




Radiated Spurious Emission (below 1GHz)






Radiated Spurious Emission (1GHz to18GHz)

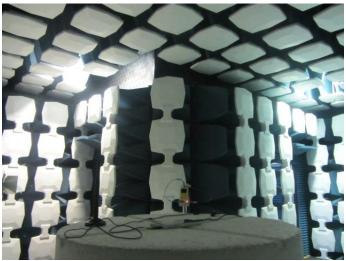

Radiated Spurious Emission (above 18GHz)


For BT and WLAN

2 Radiated Spurious Emissions

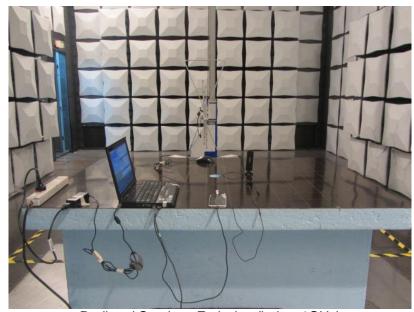

Radiated Spurious Emission (below 1GHz)



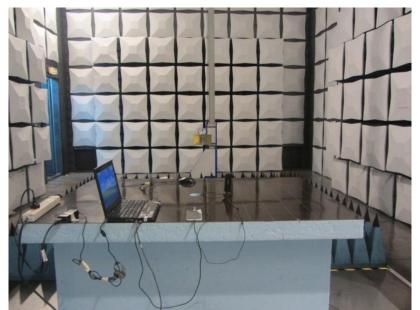

Radiated Spurious Emission (1GHz to18GHz)





Radiated Spurious Emission (above 18GHz)



3 Conducted Emissions





Conducted Emissions for AC Ports